7/5/23, 1:46 PM



## Push-In Fitting Type with Stop Valve Stop Fitting Series

Push-In Fitting Type with Stop Valve for General Pneumatic Piping.

Air Stop by Tube Disconnection.

Easy Insertion and Disconnection by Double-passage Structure.



278

7/5/23, 1:46 PM

