## **KONAN**<sup>®</sup>

Download CAD drawings and PDF catalog data from the following website

URL=https://www. konan-em.com/ Konan Solenoid Valves for Fluid Control

MAGFLOW series



Konan Solenoid Valves for Fluid Control

# MAGFLOWseries

## For ideal fluid control...

**Konan Solenoid Valves for Fluid Control** 



	International standards	IECEx	CSA	Ex db ICT6T4 Gb
	EU	ATEX guidelines	TÜV Rheinland	I 2G Ex d I BT4 Gb
		ATEX guidelines	CSA	I 2G Ex db IC T6 T4 Gb
		"Explosion-proof construction		d2G4
	Japan	standard for electric equipment"	TIIS (Technology Institution	d3aG4 (For hydrogen)
Flame-proof enclosure construction	Oapari	"Technical standards conforming to the international standards"	of Industrial Safety)	Ex d II BT4
	Korea		KOSHA ( Korean Occupational Safety and Health Agency)	Ex d II BT4
	Taiwan. R. O. C.	CNS	ITRI ( Industrial Technology Research Institute )	Ex d I BT4 Gb
	China	CCC (China Compulsory Product Certification)	SiTiiAs (Shanghai Inspection and Testing Institute of Instruments and Automation Systems)	Ex d IIC T4~T6 Gb
-	Japan	Class NK	NIPPON KAIJI KYOKAI	d2G4

NEMA4 drip-proof
Conforms to JIS C 0920 (protection class:5/jet-proof) and IEC 144 (protection class:IP55)

NEMA4,7 explosion-proof, drip-proof
Conforms to JIS C 0920 (protection class:5/jet-proof) and IEC 144 (protection class:IP65)

Konan Solenoid Valves for Fluid Control



Konan's solenoid valves for fluid control provide reliable interface between fluids and automation systems. A wide variety of products based on safe design are available to meet your own application.



## Flow control solenoid valves and Valve Systems

## **General Handling Instructions and Precautions**

Please read the following information on the general handling precautions carefully before placing orders for the products.

Following information is prepared based on a risk assessment for KONAN solenoid valves for general fluids, represented by MAGFLOW series products (hereinafter referred to as MAGFLOW solenoid valves or solenoid valves). Please read through the information carefully, because it describes important matters indispensable to secure safety to human body and safe and trouble-free operations of systems.

## **Safety Precautions**

References:

JIS B9702: Safety of machinery-principles of risk assessment JIS B8370: Pneumatic fluid power-general rules relating to systems



MAGFLOW solenoid valves are the control valves to increase/decrease fluid pressure, shut down or switch the flow of fluid to the intake or exhaust direction, etc. based on electrical inputs.

These control valves are used widely in general systems that use various kinds of fluid. When using MAGFLOW solenoid valves, take notice particularly on the following items.

## 1) Selecting models of MAGFLOW solenoid valve

#### 1.1 Fluids applicable to MAGFLOW solenoid valve

When kinds of applicable fluid are designated in the specifications of solenoid valve, no other fluids may be used. When selecting a solenoid valve, take note also on the following matters.

1) High pressure gas

Every solenoid valve used at a gas pressure of 1 MPa or higher is subject to the High Pressure Gas Security Law in Japan.

As MÁGFLOW solenoid valves do not meet the Law they cannot be used in this range. The Law does not apply when a fluid is supplied from an air or nitrogen gas compressor under the pressure not exceeding 5 MPa.

Note: It is not exempted from the application of the Law when a fluid is supplied from a transportable container.

2) Materials

Materials of solenoid valve vary depending on the kind of fluid. Select materials of the main body (metal) and the seal from the guide for material selection in the catalogue. When your fluid is not found in the catalogue or if you may have any question, inquire to our Sales Department.

Note: You may not use the solenoid valves without confirming the compatibility with applications.

3) Fluid temperature

Select a solenoid valve of which the insulation class of coil and the maximum fluid temperature relative to the ambient temperature do not exceed the specifications shown in the explanation of terminology in the catalogue.

4) Fluid viscosity

When applicable fluid viscosity is not specified, the solenoid valve may be used when it is less than 65 mm²/s (cSt).

Depending on the kind of fluid, this value may be exceeded in a low temperature range. In such occasion, it is necessary to maintain temperatures using a heater, or the like.

5) Dangerous fluid

When handling any toxic, flammable or other hazardous fluid, select a solenoid valve of which the leakage (internal, external) falls within the permissible values. Amounts of leakage are found in the catalogue or the instruction manual. If you may have any question, contact our Sales Department.

When using any gas other than air in an enclosed room, even if the gas is not toxic, sufficient care must be taken on the risk of suffocation.

6) Corrosive gas

When the fluid contains gases such as SO<sub>2</sub>, H<sub>2</sub>S,Cl<sub>2</sub>,NO<sub>2</sub>, etc. which could corrode metals, it could cause stress corrosion cracks not only on the surface but also internally. The solenoid valve cannot be used for such fluid.

7) Contaminant particles

When solid particles, oil particles of higher viscosity, or the like, are contained in the fluid, it could cause wear, malfunction or leakage on the solenoid valve. The solenoid valve cannot be used for such fluid unless it is filtered sufficiently. When employing a filter, prepare a filter having the nominal filtration rating of less than 150µm, and install it at the inlet side of the solenoid valve.

8) Oil inhibiting treatment and lubrication

When it matters the contamination of fluid by the lubrication oil used on the solenoid valve, the solenoid valves may be processed with the oil inhibiting treatment (oil removal). For further details, contact our Sales Department.

In case when using without lubrication a solenoid valve for gas, which needs lubrication owing to its construction, it may increase the divergence of oil like mist or evaporation of oil in a highly dry gas (highly dry air with the dew point at lower than –40°C,

or other), resulting in an early shortage of lubrication. In such occasion, the situation may be improved by using a kind of grease, which is adapted to highly dry applications. Consult our Sales Department for further details.

9) Drain

Solenoid valves for steam or pneumatic pressure may not operate properly where a profuse drain may accumulate within the circuit. The solenoid valves cannot be used at such places. It is recommended to use them at places where there is no accumulation of drain or where drain can be separated or discharged securely by means of a drain trap or auto drain.

In case of solenoid valve for steam, it is desirable to take measures such as the low temperature steam purge, etc. in order to short cut the temperature rising time of solenoid valve. When air is supplied from a compressor, the air is in high temperature so that it is likely to generate drain if air is cooled at a far end. It becomes necessary to provide an after-cooler or air dryer at the exit of compressor in order to remove water or moisture effectively.

10) Water hammer

Where excessive surges of pressure, like the water hammer, occur, the solenoid valve may be damaged or its life could be reduced. The solenoid valve cannot be used where pressure surges occur frequently.

It is necessary to install an accumulator such as a water hammer arrestor, etc. to eliminate the pressure surge.

#### 1.2 Safety of solenoid valve

Sources of risk on a system are found not only on the devices in use but also in the operating conditions or system configuration. When selecting a model of solenoid valve, it is necessary to take into consideration not only the device as a separate unit but also the safety in all circumstances, including the installation, adjustment, regular operation, trouble, disposal, or other.

1) Application as an emergency shut-off valve

Magflow solenoid valve is not designed as a valve to secure safety as required for an emergency shut-off valve, or the like. It cannot be used as an emergency shut-off valve.

2) Sealing of pressure

Since the solenoid valve is designed to allow some leakage in use, it cannot be used to such applications as an installation on a pressure vessel, including vacuum, which needs to maintain the pressure at a constant level for an extended period of time.

1.3 Safety of electrical section

The solenoid valve switches its functions using a solenoid (electromagnet). When selecting a model and electrical options for the solenoid, it is necessary to take into consideration the following matters same as other electrical devices.

- Dustproof/waterproof Classes for waterproof, or other, are marked in accordance with JIS C0920.
- 2) Sudden interruption of power supply (Power failure, emergency stop)
- Voltage fluctuation on the power supply section and intrusion of electric surge
- 4) Leakage current at the time of PLC (sequencer) output OFF MAGFLOW solenoid valves are not adapted to the following conditions, which are peculiar to the installation site. It should be refrained from the use under these conditions or provide a power distribution system provided with safety measures.
  - 1) Influence of external magnetic field
  - 2) Bypassed electric current from related control circuits

3) Induction voltage caused by thunderbolt

#### 1.4 Pilot type solenoid valve

Pilot type solenoid valves on which the main valve is switched with the output pressure from a small pilot solenoid valve are used generally because it can be operated with a small size device

## **General Handling Precautions**

and small power. Since these valves cannot operate unless there is a differential pressure larger than certain level between the entrance and exit ports, it is recommended to select a direct-acting type solenoid valve when it is necessary to control a minute pressure.

In case of 3-port solenoid valve, since it cannot operate unless there is a differential pressure larger than certain level between the entrance and exit ports, the backpressure at the exhaust port affects its operation. Although there is no problem if the backpressure is in the size that could occur at the silencer of exhaust port, it is prohibited to choke the passage of exhaust flow too much or connect a long pipe to the exhaust port. Details on the influence of backpressure are described in individual manuals. If there is any question, consult our Sales Department.

#### 1.5 Reverse flow

Install a solenoid valve in accordance with the direction indicated with arrow at the JIS's graphic symbol in the catalogue or manual. Operations of the solenoid valve cannot be guaranteed when it is used under the condition of backpressure or reverse flow. There is no problem with a slow reverse flow as experienced during maintenance or when the pump or compressor is stopped.

A failure may occur if the valve body stays at an intermediate position when resuming operation after a stop under an abnormal condition. When a reverse flow occurs at the stop or if there is any question concerning the start after an abnormal stop, consult our Sales Department.

#### 1.6 Manual operation

When a solenoid valve allows a manual operation and has a lock for operating position, make sure to release the lock after the manual operation.

#### (2) Installing Magflow solenoid valve

Although the solenoid valve is an accurate operating device, there are great varieties in the purpose of use, operating conditions and environment. It makes us difficult to presume all of related risks (causes) at the stage of designing. Depending on situations, the solenoid valve may lose its functions or capacities earlier than the maintenance and inspection intervals as designated by us.

In order to avoid such situations, install the solenoid valves as described below.

#### 2.1 Space

Select a place convenient for installation or maintenance. Since many solenoid valves are retrofitted to the main equipment, consideration for their maintenance is likely sacrificed. Make sure to secure a sufficient space to assure the safety.

#### 2.2 Check method after installation

When driving an actuator like pneumatic cylinder with a solenoid valve, start the actuator with a small load and under slow speed condition, after installing the equipment and pipes, and then bring it gradually to the rated operating condition while checking movements of solenoid valve and actuator to see if there is any abnormality or air leakage

2.3 Sudden projection of pneumatic cylinder
After the installation or maintenance, confirm that the cylinder is at the same position as the control (target) position of solenoid valve, before recharging air. If they are not matched, the pneumatic cylinder may move suddenly toward the control position.

In order to prevent the risk of unmatched positioning, it is recommended to install a slow start valve at the IN side of solenoid

Note:In relation to the paragraph 2.4 below, when installing a slow start valve at the IN side of pilot solenoid valve, adjust the bypass valve of slow start valve in such a manner that the minimum differential working pressure of solenoid valve is maintained. If the bypass valve is choked too much, the supply pressure to the pilot of solenoid valve becomes smaller than the minimum differential working pressure and, as a result, it could malfunction the solenoid valve.

In the same way, when recharging air by opening the manual valve, open the manual valve at a short period of time observing the pressure gauge, till the lower limit value of the working pressure of pilot solenoid valve is secured, and then inject air slowly by operating the manual valve.

#### 2.4 Securing the pilot pressure

Install the pilot solenoid valve, taking care of the following points.

1) Adjust the inlet pressure of solenoid valve at higher than the

- lower limit of working pressure. When the allowance at the air source is limited, particularly, it may go below the lower limit value of working pressure owing to the fluctuation of pressure during operation.
- 2) When a very long pipe is connected to the IN side of solenoid valve or when using a pipe of which diameter is smaller than

the port, the inlet pressure drops as a result of pressure drop associated with the flow.

Note: When ending the work after feeding a given volume of air, it is effective to install an auxiliary tank next to the inlet port for the prevention of pressure drop. Install a pressure gauge at the vicinity to confirm that the inlet pressure did not drop.

#### 2.5 Indication

When installing a solenoid valve where it is impossible to see the nameplate, provide a substituting indication where it can be seen easily.

#### 2.6 Using a solenoid valve for extended period of time

After operating the solenoid valve for a long time, the solenoid becomes very hot as much as it cannot be touched by hand as the temperature on the coil rises. This is normal for a solenoid valve. Avoid touching it carelessly after operating for an extended period of time because it could burn the hand.

#### 2.7 Residual pressure

Even after shutting down the power supply to the system or solenoid valve, the fluid pressure or fluid may not be discharged from the system. Since the residual pressure could cause unexpected movements of cylinder, sufficient care must be taken on the risk of bursting residual pressure even during the installation, in addition to other risks.

#### 2.8 Exhaust

When discharging the fluid from the exit or exhaust port of solenoid valve, a jet with the velocity of sound at the maximum could blow out. The jet causes hazard by noise or other physical injuries by the jet itself and fragments or dust dispersed by the jet. Where someone may approach the exit or exhaust port, make sure to install a silencer in order to suppress noise and control the fluid.

#### 2.9 Training

When installing a system or conducting the maintenance services as referred to below, only personnel who have sufficient experience and knowledge must be allowed performing the job. (We provide some training courses for handling pneumatic devices.) If there is any question, consult our Sales Department.

#### Maintenance of Magflow solenoid valve

Maintenance should be performed as described below. If any individual manual is necessary, consult our Sales Department.

#### 3.1 Daily inspection

- 1) When the fluid is compressed air, the condensed water (drain) in the system could disrupt the operation of solenoid valve because the water contains impurities in the piping. Install a filter at the IN side and drain the water once every day.
- 2) While the equipment is operating, check visually the solenoid valve for any abnormality or any abnormal operating sound by hearing. If necessary, while the flow of fluid is stopped, inspect screws on the solenoid valve for looseness. If any internal or external leakage is observed from the exit, exhaust port or pipe joints, conduct the periodic inspection and repair as required.
- 3) With solenoid valves for high temperature fluids like steam, etc., the main body of solenoid valve also becomes extremely hot.If touched carelessly, burns could result. While the equipment is running, observe the solenoid valve for any abnormality in appearance visually or abnormal operating sound by hearing. If necessary, while the flow of fluid is stopped and after confirming that the valve cooled down sufficiently, inspect screws on the solenoid valve for looseness. If any internal or external leakage is observed from the exit, exhaust port or pipe joints, conduct the periodic inspection and repair as required.

  3.2 Periodic inspection

Perform the following periodic inspection once every half or full year. After shutting down the power supply and the pressure source, disassemble the solenoid valve. Carefully inspect respective parts, record if any abnormality is discovered and repair them as required.

2) During the periodic inspection at the second year, disassemble and inspect the product. Repair necessary sections. Solenoid assembly, coil, packing and some other parts need to replace periodically. Replace components of which lives have expired. Even if it is less than 2 years, if the solenoid valve has run out the durable operation cycles<sup>1)</sup>, which are specified for individual solenoid valves, disassemble, inspect and replace parts as required.

Note1: [Example of the durable operation cycles at laboratory]

YS30, YS33 Series : 2 million cycles
YS20, YS21 Series (20A or under) : 1 million cycles
YS20, YS21 Series (20A or over) : 0.5 million cycles
The cycles listed above are obtained under
The cycles listed above are obtained under the test conditions specified by us. For parts like diaphragm, etc., users are encouraged to determine optimum inspection intervals depending

## Flow control solenoid valves and Valve Systems

## General Handling Instructions and Precautions

on the materials, environment of actual installation place, maintenance records, or the like.

3) When a solenoid valve has not been operated for an extended period of time, the reliability of restart is deteriorated due to the precipitation/outflow of lubrication film, or other. JIS specifies the minimum operating frequency to be once every 30-day for the solenoid valves. In spite of this regulation, the solenoid valve should be put to the preventive inspection by operating periodically for confirmation even before the term expires.

3.3 Residual energy

Before carrying out any maintenance accompanied with actual work, shut down the pressure source and the power supply to the equipment (or maintenance block) and completely discharge

the electric charge and fluid retained in the equipment. Utmost care must be taken especially when discharging any high temperature fluid like steam, etc. Evacuate people from around the equipment and perform the work with sufficient care for safety. Main body of solenoid valve also becomes extremely hot. Confirm that the valve temperature has dropped safely before starting the work. Touching the solenoid valve carelessly could result in burns. Confirm that moveable sections will not start to move during maintenance. Fix them mechanically if necessary. Other than the moveable parts, there are sections, which could drop off during the work or which have sharp edges. Measures to prevent accidents

should be taken to assure the safety in all aspects of maintenance work.

#### 3.4 Communication

When conducting any work as a group, every member must be informed clearly at such occasions as the shut down of power supply, completion of residual pressure discharge, resumption of power or air supply.

#### 4 Place to use the solenoid valve

When installing a solenoid valve at any of the following places, some special adaptations are necessary in terms not only of the compliance to the functional specifications but also to laws or regulations. If you have any question, consult our Sales Department at the phase of planning.

1) Special application conditions not referred to in the catalogue

2) When any material risks are foreseen to people, assets, environment, or other

Example: Explosive atmosphere2), nuclear engineering facilities, vehicle, medical equipment, equipment related to the Occupational Healt and Safety Law or the High Pressure Gas Security Law, etc.

Note2: Various explosion-proof solenoid valves are available from our products line for applications in general gas explosion inflicting atmosphere.

## **Users Instructions**

This section provides general precautions concerning the solenoid valve and equipment on which the solenoid valve is assembled. It is indispensable to observe them as well in order to assure a sufficient safety.



## **Caution** 1 Transportation

#### 1.1 Weight

For the safety of operators, use appropriate tools and machinery positively, without relying solely on the human power, when carrying a heavy large size solenoid valve or solenoid valve unit. Weight of solenoid valve is found in the catalogue and the design documentation. On the contrary, small size solenoid valves are so fragile that they may be damaged by excessive human power if due cares are neglected. It is strictly prohibited to carry a solenoid valve by holding the lead wires.

When loading, unloading or moving around a solenoid valve, take care to hold securely not to drop it.



## Caution 2 Storing

#### 2.1 Storage during transport

When installing a solenoid valve at a place exposed to rain or wind or in an inferior atmosphere, deliver it to the site just before the installation. When it is obliged to store for some time at the installation site, do not unpack the contents and cover the package with a sheet, or the like.

2.2 Storing place

Store the solenoid valve as follows to protect it from contamination or deterioration of materials.

- 1) Avoid a place exposed to high temperatures or humidity, and select a clean place free from dust.
- 2) When storing a solenoid valve as a spare component for more than a year, store it in the shipping package or after providing equivalent protection.
- 3) When it has been stored for more than a year, the packings may be stuck due to lack of lubrication. Practice a running in before using it.
- 4) As the storage period extends, the packings are likely to receive the permanent deform, dimensional change or deterioration. It is necessary to check the operating condition of solenoid valve occasionally and, if any abnormal condition is observed, it should be disassembled, inspected. Replace any deformed or deteriorated parts.



## (!\ Warning 3 Installation environment

#### 3.1 Vibration, impacts

1) Install a solenoid valve separated from sections subject to excessive impacts or vibration by hoses or pipes. However, if an unnecessarily long pipe is connected at the exit side, it affects the system's response adversely.

2) When it is forced to install the solenoid valve at a place receiving excessive impacts or vibration, install it by way of a damping pad, or the like. Also apply a locking means to mounting screws to fix/tighten them securely. After starting operations, periodically check the tightened sections to avoid loosening or deform of screws, and retighten as required.

3.2 Handling during installation

Do not stand on the solenoid valve or the piping, or hook the wires on the devices used for the work during installation.

3.3 Atmosphere

Take care of the atmosphere at the installation place. Avoid places where it is exposed to rain, wind, direct sunlight, salt damage, corrosive gas, chemicals, organic solvent, steam, etc. We have some anticorrosion measures for certain kinds of atmosphere. Consult our Sales Department for details.

3.4 Operating temperature

Restrict the ambient temperature and the fluid temperature within the specified operating temperature ranges. Special attention is called for regarding the following cases.

- 1) Life of coil varies depending on the thermal deterioration of insulation. High temperature environment and continued operations with power on should be avoided as much as possible.
- Application under low temperatures
   Where the temperatures drop to 5°C or under with possible freezing, use insulation materials and a heater. For the details of optimum ranges of ambient and fluid temperatures, refer to the catalogue.
- 3) When using the pneumatic pressure, air temperatures may rise considerably at the vicinity of air compressor, causing the thermal deterioration on the solenoid valve packing or troubles owing to difference of the thermal expansion between parts.



#### Warning

#### 4 Modification

Do not modify in any event the solenoid valve because it could cause risks that cannot be foreseen during designing.



## Caution 5 Stop of pneumatic cylinder on the way by the solenoid valve

Since minute leaks are permissible at the sealed sections in the solenoid valve and the cylinder, it is difficult to stop the cylinder on the way for a long time. If it is indispensable, a mechanical retaining device like a brake, lock or latch should be installed.



## Caution 6 Spray lubrication by a lubricator

When started to use a solenoid valve with the lubrication specification, continue the lubrication.

## **General Handling Precautions**

#### 6.1 Types of lubricant

- 1) Use JIS K 2213 Turbine oil VG32 or VG46 as the lubricant for the lubricator.
- 2) Check the lubrication quantity by the lubricator by the number of oil drops. One drop is about 0.03 cm3. Standard quantity is 1.5 – 2.5 drops per 1m<sup>3</sup> of air.
- 3) When solenoid valves of respective specifications have been disassembled and inspected, assemble the parts after applying specified greases. Consult our Sales Department for any questions concerning the type of grease. Solenoid valves, which are fabricated with the oil inhibition specification, cannot be disassembled for inspection. If it is necessary to disassemble, ask for the inspection and service of solenoid valve to our Sales department.

#### 

#### 7.1 Sequence control

Sequence control of an actuator assembled with a solenoid valve that uses compressed air should be performed as follows as much as possible.

- 1) Move to next step after detecting the position.
- 2) Apply the interlock on the electric circuit of solenoid valve, which controls any actuator other than the one that is used for the present step.

#### 7.2 Power failure or fault on air source

- 1) When the solenoid valve has been stopped by the emergency stop on the way of sequence as a result of power failure or interruption of power supply, select the normal (pause) position of solenoid valve in such a way that the cylinder for the present step stops or goes to the safe position.
- 2) When the solenoid valve has stopped on the way of sequence, if it is dangerous to restart from the position, return it to the start position orderly by operating the actuators individually. Further, indicate the reset procedure clearly.
- 3) When the solenoid valve has stopped on the way, if air in the piping is bled, the cylinder may drop by the gravity or start to move suddenly when the air supply is resumed, resulting in physical or mechanical damage. Make sure to return to the start position first and then bleed air.
- 4) Give an allowance to the air tank capacity such that, even if the air source has failed on the way of cycle, remaining work can be completed.



## Warning 8 Exhaust of residual pressure

On a circuit incorporating a check valve and a pilot check valve, it may fall in the state that air is charged. When any risk by the residual pressure is suspected, provide a residual pressure relief valve at the corresponding position to release the pressure individually or provide an indicator for warning of residual pressure. On the circuit diagram of such system, indicate that there is a manual valve for the residual pressure exhaust valve.



## 9.1 Pressure drop

## 

#### If a pneumatic device has a long pipe at the terminal or inlet of factory piping, necessary pressure may not be supplied to the device as a result of pressure drop on the pipe. It is necessary to secure a proper supply pressure to the device by producing a proper design of piping at the phase of planning or providing an auxiliary air tank, if the solenoid valve operates intermittently.

#### 9.2 Air filtering

Remove solid contaminants from the air supplied to the solenoid valve by feeding the air through a filter with the nominal filtration rating of 40µm or under. Cool the air sufficiently to remove drain or oil in the state of liquid through a filter or drain separator. If the packing or other parts are exposed to contaminated and high temperature compressed air, the life of product could be reduced extremely as a result of deterioration.

Steam generated by a boiler contains a lot of drain. Always install a drain trap.

#### 9.3 Piping work

- 1) Select pipe materials depending on the fluid, and make sure to remove burrs produced by the thread cutting. When using the air pressure, always use white (galvanized) steel pipes.
- 2) Blow with air (flushing) or cleanse the inside of pipes to remove dust, moisture or oil before connecting them.
- 3) When wrapping the seal tape around the seal of threaded end of pipe, wrap the tape leaving 1.5 - 2 threads from the end

- of thread by 2 to 3 turns in the direction opposite to the screwing direction for the air pressure or 4 to 5 turns for the oil pressure.
- 4) When screwing a pipe or joint in the solenoid valve, tighten it with a wrench of adequate size as much as no fluid will leak from the threaded section. Avoid tightening it forcibly. Otherwise, it may crack the pipe connecting port of solenoid valve or cause a leakage or malfunction by the contamination with torn chips of sealing material.
- 5) When screwing in a pipe, joint, or other, screw in by 4 to 5 threads for 6A 25A (Rc1/8 Rc1). It is recommended to practice the wrapping with the seal tape and screwing in procedure before the actual work.
- 6) Fix the solenoid valve (large one, particularly) with a special support because it is insufficient to support with the piping only. For a smaller solenoid valve connected to steel pipes may be supported with the piping but the pipes should be supported securely with pipe clamps, or the like, at positions closer to the valve.

## 

- 1) Confirm that the voltage values and the alternate current (AC)/ direct current (DC) are matched between the power supply and the solenoid valve.
- 2) When a TRIAC is used at the AC output of PLC (sequencer), the leak current at the time of OFF may influence the operations of solenoid or indicator lamp. In such occasion, contact the PLC maker or our Sales Department by presenting the output specification of PLC to inquire for a method to reduce leak current.
- 3) Electromagnetic induction surges produced at the cut OFF of power supply to the solenoid extremely reduce the life of contactors, etc. on the electric circuit. For our solenoid valves without the surge absorber, install a surge absorber, or include the surge absorber in your required specifications when placing
- 4) When lead wires are connected to the solenoid valve, support the lead wires after giving some allowance in the length and connect using appropriate connecting terminals. When using conduit tubes, connect wires with care not to exert an external force to the housing, support the conduit tube at a position close to the valve to protect the threaded section of conduit tube on the housing from external force.



## 

When you need any solenoid valve of special specifications, consult our Sales Department by presenting the operating

When the fluid does not allow the contamination of flow passage with oil, we can fabricate the inside of solenoid valve with the oil inhibiting specification. If there are any other special requirements on the solenoid valve, consult our Sales Department.

- 1) Fluid not included in the guide for selection
- 2) Applications in a high/low temperature environment or high heat radiation environment
- 3) Applications where there are problems related to ozone or salt damage
- 4) Explosive atmosphere



## Warning Disposal

- 1) Dispose the solenoid valves without incineration. If they are thrown into fire, they may explode or generate toxic gases.
- 2) When disposing solenoid valves after sorting, sort the parts based on the materials as listed in the catalogue or instruction manual. The solenoid valve does not contain any materials not classified as general industrial waste.

## Table Categorized by Series

							Po	ort siz	e				Val	ve ty	ре			
		Series	Operation type	6 A	8 A	10 A	15 A	20 A	25 A	32 A	40 A	50 A	, open	closed	rsal	Orifice size	Cv value	
		S	Opera	Rc 1/8	Rc 1/4	Rc 3/8	Rc 1/2	Rc 3/4	Rc 1	Rc 1_1/4	Rc 1_1/2	Rc 2	Normally open	Normally closed	Universal	(mm)		
	ر المالية الما	YS 30	Direct-acting (soft seal)	•	•	•	-	_	_	_	_	_	•	•	_	1.2~9.5	0.05 ~ 1.7	
		YS 21	Pilot (diaphragm)	_	_	•	•	•	•	•	•			•	_	15.9 ~ 32.0	3.3 ~ 28.0	
2-Port		YS 20	Pilot (operates with no differential pressure)	_	_	•	•	•	•	•	•	•	•	•	_	15.9 ~ 32.0	3.3 ~ 27.0	
		YS 27	Pilot (operates with no differential pressure)	_	_	_	_	_	•	•	•	•	•	•	_	25.0 ~ 32.0	13.0 ~ 28.0	
		YS 23	Pilot (piston)	_	_	•	•	•	•	•	•	_	_	•	_	21.0~40.0	4.1 ~ 25.0	
		YS 33	Direct-acting (soft seal)	•	•	_	_	_	_	_	_	_	•	•	•	1.6 ~ 4.4	0.09 ~ 0.38	
3-Port		YS 203/204	Pilot (diaphragm)	_	_	•	•	*	*	_	_	_	•	•	_	15.9	3.3 · 4.4	
		YS 32	Pilot (piston)	_	•	•	_	_	_	_	_	_	•	•	_	Exhaust side : 8.7 Pressure side : 7.1	1.2	

	Max. Fluid	Вс	dy	Co	oil/ ation			Hou	sing					Appl	icable	e fluic	l		
Max. Working pressure (MPa)	temperature (°C)  Temperature varies according to a coil and seat materials. Please refer to page 77 for the details.	Stainless steel	Bronze or brass	Class F	Class H	Open frame	Grommet	Conduit	NEMA 4.7 explosion- and drip-proof	Explosion-and drip-proof	NEMA 4 drip-proof	Air	Gas	Water	Steam	Vacuum	Kerosene / oil	Drug solution	Page
Max. 7.20	Max. 50	•	•					•	•	•		•	•	•	•	•			10
Max. 1.37	Max. 50		•	•				•					•	•		ı			18
Max. 0.96	Max. 50	•	•	•	•		•	•	•				•	•					26
Max. 0.86	Max. 50	•	•	-	•	_		•	_	*	•	•	•	•		•			34
Max. 0.9	Max. 180	_	•	_	•	•	•	•	•	_	_	_	_	_	•	_	_	_	40
Max. 1.37	Max. 50	•	•	•	•	•	•	•	•		_		•	•	_	•			46
Max. 1.02	Max. 50	_	•	•	•		•	•			_		•	_	_	_	_	_	52
Max. 0.85	Max. 50	-	•	•	•	•	•	•	•	•	_	•	•	-	_	_	•	_	57

# Port Solenoid

Mini-type Direct-acting

YS301 Normally closed type

**YS302** 

Normally open type

YS30 series 2-port solenoid valves are available in NC or NO type,

with port sizes Rc1/8 to 3/8. The compact design enables space-saving installation.



## Standard Specifications

		1	
Va	lve operation	Normally closed	Valve opens when solenoid is energized.
typ	е	Normally open	Valve opens when solenoid is de-energized.
Ро	rt size		Rc1/8 · 1/4 · 3/8
Ori	fice size		1.2 ~ 9.5mm
	Body		Brass, stainless steel
SI	Seal / seat		Nitrile rubber, fluorine rubber, PTFE, ethylene propylene rubber
Materials		Standard	Conduit type(NEMA1)
M	Housing	Others	Explosion-proof enclosure (d2G4, Exd II BT4), Drip-proof, housing with terminal box, and others. See Selection Guide (p.67-71).
Ra	ted voltage		AC100V50/60Hz, 110V60Hz DC24V AC110V50Hz, 120V60Hz DC100V AC200V50/60Hz, 220V60Hz DC120V AC220V50Hz, 240V60Hz DC125V
Alle	owable voltage f	luctuation	-15% to 10% of applicable voltages
Ins	ulation class		Continuous rating class F and H
Lea	adwire length		Min. 450mm
An	nbient	Max.	50°C (Temperature may differ depending on coil and fluid temperature. See p.77 for details.)
ten	nperature	Min.	-20°C (Temperature may depending on seat materials. See p.77 for details.)
Ins	tallation position	1	As desired
Ар	plicable standar	ds	(Consult us for details.)
Ор	tions, others		Mounting bracket, manual operating system, neon lamp, surge absorber, oil-free
Op	tions, others		iniounting bracket, manual operating system, neon lamp, surge absorber, oil-free


<sup>•</sup> Please consult us for other specifications.

## Valve Selection List

Make sure to confirm the operating pressure differential when selecting a valve.


(Bc)	Operating pressure difference of the control of the					ential	nperatı	8	consu	wer mption V)	class	S <sub>Z</sub>		Model code			
Port size	,	Orifice size	Cv valu	Min.	Air/g wat keros		Ste	eam DC	% Max. fluid ter °C	Housin	AC	DC	Insulation	Voltage 50/60	Brass body	Stainless steel body (SUS430F)	Stainless steel body (SUS303)

N	orm	nally	/ Cl	ose	d	_						_ D∈	e-energ	jized	Energized	
ty	pe								,		٨			IN Ø	IN	
	1.2	0.05	0	7.20	6.86	-	-	50	Α	10	10	F	100	YS301AF88N9AC3	YS301AF88J2AC3	
	2.4	0.21	0	2.74	1.37	-	-	50	Α	10	10	F	100	YS301AF88N9AC9	YS301AF88J2AC9	
1/8	3.2	0.36	0	1.37	0.96	-	-	50	Α	10	10	F	100	YS301AF88N9AD5	YS301AF88J2AD5	
	4.8	0.49	0	0.68	0.48	-	-	50	Α	10	10	F	100	YS301AF88N9AE1	YS301AF88J2AE1	
	4.8	0.49	0	-	-	0.68	0.48	170	Α	10	10	Н	100		YS301AH88S2AE1	
	1.2	0.05	0	7.20	6.86	-	-	50	Α	10	10	F	100	YS301AF88N9BC3	YS301AF88J3BC3	*
	1.6	0.10	0	4.80	2.05	_	_	50	Α	10	10	F	100	YS301AF88N9BC5	YS301AF88J3BC5	*
	2.0	0.14	0	3.43	1.64	_	_	50	Α	10	10	F	100	YS301AF88N9BC7	YS301AF88J3BC7	*
	2.4	0.21	0	2.74	1.37	_	_	50	Α	10	10	F	100	YS301AF88N9BC9	YS301AF88J3BC9	*
1/4	2.8	0.28	0	2.05	1.16	_	_	50	Α	10	10	F	100	YS301AF88N9BD3	YS301AF88J3BD3	*
174	3.2	0.36	0	1.37	0.96	_	_	50	Α	10	10	F	100	YS301AF88N9BD5	YS301AF88J3BD5	*
	4.0	0.44	0	1.02	0.68	_	_	50	Α	10	10	F	100	YS301AF88N9BD7	YS301AF88J3BD7	*
	4.8	0.65	0	0.68	0.48	_	_	50	Α	10	10	F	100	YS301AF88N9BE1	YS301AF88J3BE1	*
	4.8	0.65	0	_	_	0.68	0.48	170	Α	10	10	Н	100		YS301AH88S3BE1	<u> </u>
	6.4	0.85	0	0.24	0.10	_	_	50	Α	10	10	F	100	YS301AF88N9BE7	YS301AF88J3BE7	<u> </u>
	3.2	0.36	0	1.37	0.96	-	-	50	Α	10	10	F	100	YS301AF88N9CD5	YS301AF88J3CD5	<u> </u>
	4.0	0.44	0	1.02	0.68	-	-	50	Α	10	10	F	100	YS301AF88N9CD7	YS301AF88J3CD7	
	4.8	0.65	0	0.68	0.48	-	-	50	Α	10	10	F	100	YS301AF88N9CE1	YS301AF88J3CE1	*
3/8	4.8	0.65	0	-	-	0.68	0.48	170	Α	10	10	Н	100		YS301AH88S3CE1	
	6.4	0.85	0	0.34	0.13	-	-	50	Α	10	10	F	100	YS301AF88N9CE7	YS301AF88J3CE7	
	7.2	1.00	0	0.24	0.10	-	-	50	Α	10	10	F	100	YS301AF88N9CF1	YS301AF88J3CF1	
	9.5	1.70	0	0.13	0.034	_	_	50	Α	10	10	F	100	YS301AF88N9CF5	YS301AF88J3CF5	*

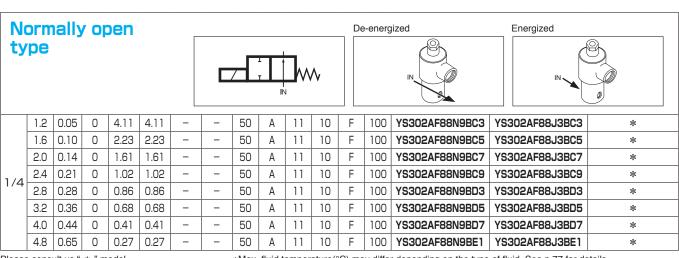


Please consult us " \* " model.

\*Max. fluid temperature(°C) may differ depending on the type of fluid. See p.77 for details.

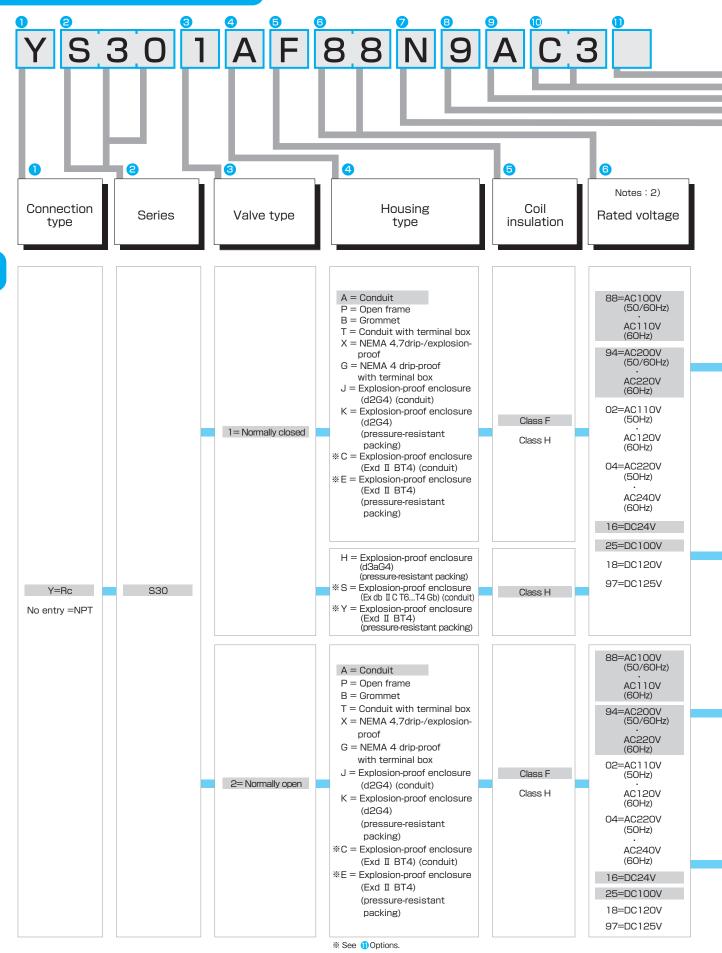



Notes: 1) Gray marked portions are standard specifications.

- 2) Consult us for other voltage specifications. Note that voltage fluctuation for some DC voltage cases is ±10%.
- 3) See Selection Guide (p.66) for combination of seat and shading ring.
- 4) Please consult us for stainless steel (SUS303) .

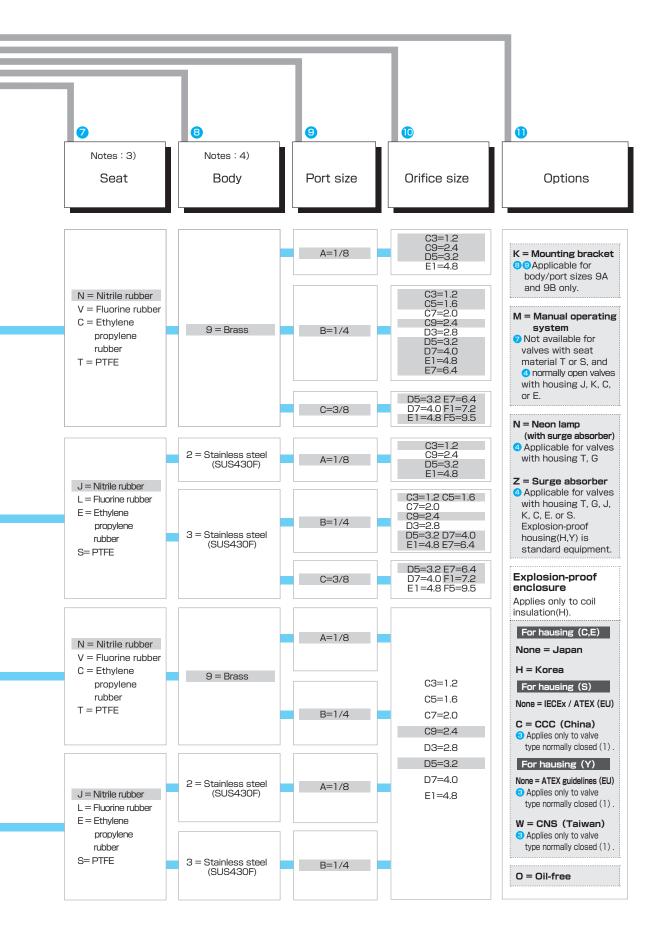

## Structure / Operation

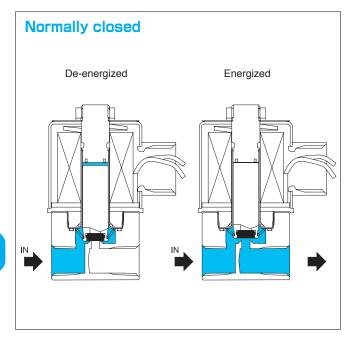

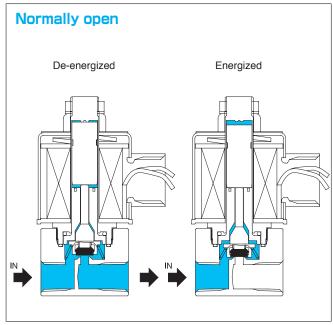

## Coil Data

Model o	ode	YS	301	YS	302
Frequenc	y (Hz)	50	60	50	60
Apparent power	Issuance	37	30	43	37
(VA)	Retention	18	13	23	16
Power consumption	AC	1	0	1	1
(W)	DC		1	0	


## Notes: AC power consumption is based on the data at 100/200VAC. Data may slightly change depending on housing types.


## Product Mass


												Jnit : kg
	Pody	Port size					Hou	sing				
	Body	(Rc)	Α	Р	В	Т	Х	G	J/C	K/E/H	S	Υ
		A(1/8)	0.5	0.5	0.5	0.6	0.7	0.8	1.1	1.2	2.4	1.4
	Brass	B(1/4)	0.5	0.5	0.5	0.6	0.7	0.0	1.1	1.2	2.4	1.4
	(9)	C(3/8)	0.6	0.5	0.5	0.6	0.8	0.8	1.2	1.3	2.5	1.5
	Stainless steel (2,3)	A(1/8)	0.5	0.4	0.4	0.6	0.7	0.8	1.1	1.2	2.4	1.4
		B(1/4)	0.6	0.5	0.6	0.6	0.8	0.9	1.2	1.3	2.5	1.5
	(2,3)	C(3/8)	0.6	0.6	0.6	0.7	8.0	0.9	1.2	1.3	2.5	1.5

## **External Dimensions**

Dimensions for conduit housing (A)

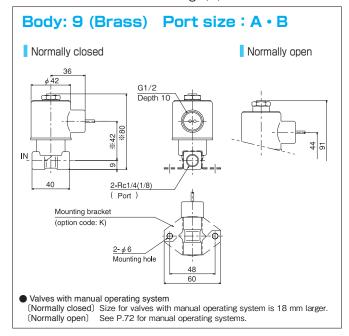


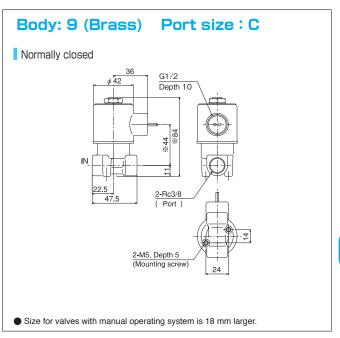

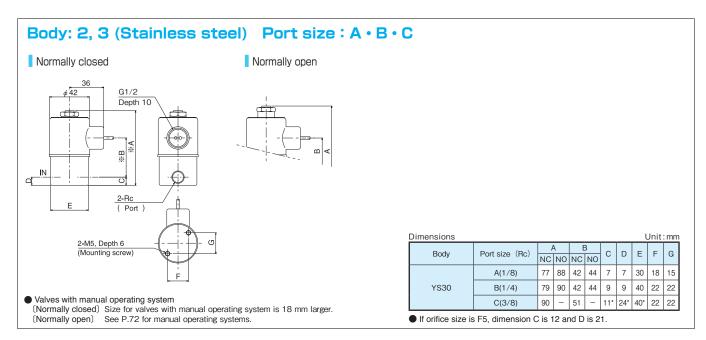



<sup>\*</sup>See P.72 for manual operating systems.



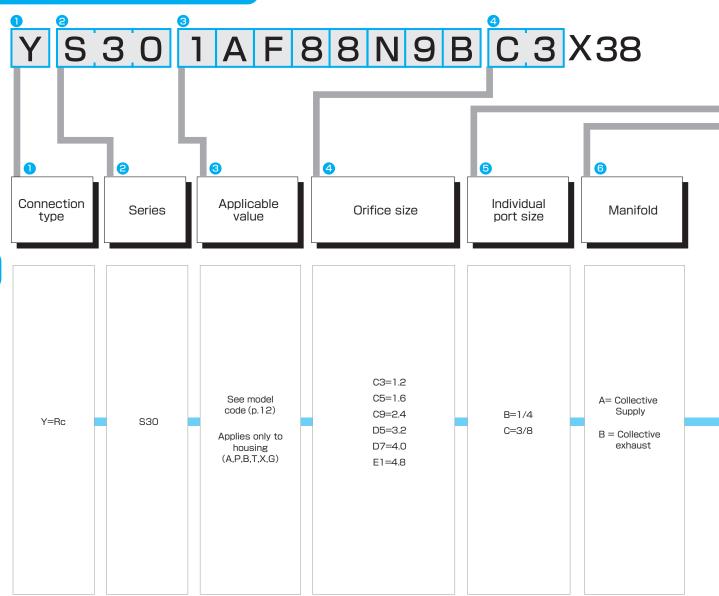


## **External Dimensions**

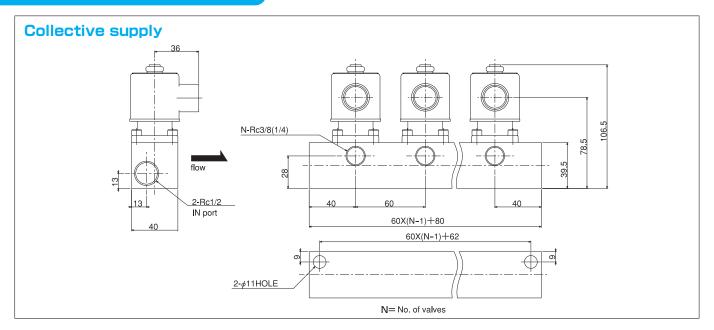

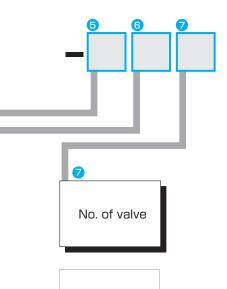

## External Dimensions

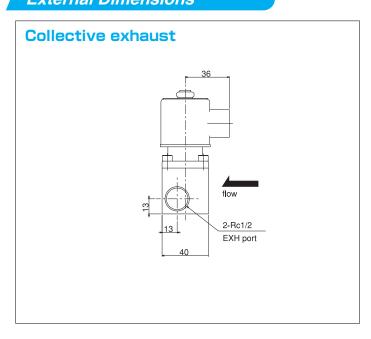

# Y521

# Port Solenoid Valves

**Pilot-acting** 

YS211 Normally closed type

YS212 Normally open type

YS21 series 2-port solenoid valves are pilot-acting diaphragm valves, available for NC or NO operation. With wide range of port sizes from Rc3/8 to 2, the valves meet diverse applications.



## Standard Specifications

Va	ve operation	Normally closed	Valve opens when solenoid is energized.
typ	е	Normally open	Valve opens when solenoid is de-energized.
Ро	rt size		Rc3/8 · 1/2 · 3/4 · 1 · 1_1/4 · 1_1/2 · 2
Ori	fice size		15.9、19.1、25.0、32.0mm
	Body		Brass, stainless steel, bronze
SI	Seal / seat		Nitrile rubber, fluorine rubber, ethylene propylene rubber
Materials		Standard	Conduit type(NEMA1)
Ĭ	Housing	Others	Explosion-proof enclosure (d2G4, Exd II BT4), Drip-proof, housing with terminal box, and others. See Selection Guide (p.67-71).
Ra	ted voltage		AC100V50/60Hz、 110V60Hz DC24V AC110V50Hz、 120V60Hz DC100V AC200V50/60Hz、 220V60Hz DC120V AC220V50Hz、 240V60Hz DC125V
Alle	owable voltage f	luctuation	-15% to 10% of applicable voltages
Ins	ulation class		Continuous rating class F and H
Lea	adwire length		Min. 450mm
An	nbient	Max.	50°C (Temperature may differ depending on coil and fluid temperature. See p.77 for details.)
ten	nperature	Min.	-17°C (Temperature may depending on seat materials. See p.77 for details.)
Ins	tallation position		As desired
Ар	plicable standard	ds	(Consult us for details.)
Ор	tions, others		Mounting bracket, neon lamp, surge absorber, oil-free Manual operating system (The maximum operating pressure differential is 1.0Mpa, in case of S212/YS212 [Normally open type] .port size 3/8,1/2,3/4,and rated voltage AC.)
		r other enecifications	


<sup>•</sup> Please consult us for other specifications.

## Valve Selection List

Make sure to confirm the operating pressure differential when selecting a valve.

	Œ.			Ор	erating	pressur MPa	re differe	ential		rature			wer mption	တ္တ		Mode	l code
(BC)									edwe	ng	()	N)	class	(S z			
Port size	t size	Cv va	Min.	Ai inert		Wa	ater	Kero	sene	Max. fluid to	Housir	AC	DC	nsulation	Voltage 50/60	Brass or bronze (Rc 2) body	Stainless steel body
	0			AC	DC	AC	DC	AC	DC	*				_			


	Normally closed type						<b>/</b> ▷	T IN	<u> </u>		De-en	ergized IN,			)	Energized	
3/8	15.9	3.3	0.02	1.37	1.02	1.02	0.68	1.02	0.68	50	А	10	10	F	100	YS211AF88N6CG4 YS211AF88	J8CG4
1/2	15.9	4.1	0.02	1.37	1.02	1.02	0.68	1.02	0.68	50	А	10	10	F	100	YS211AF88N6DG4 YS211AF88L	I8DG4
3/4	19.1	5.5	0.02	1.37	1.02	1.02	0.68	1.02	0.68	50	А	10	10	F	100	YS211AF88N6EG5 YS211AF88	J8EG5
1	25	13	0.03	1.37	1.02	1.02	1.02	0.68	0.68	50	А	10	10	F	100	YS211AF88N6FG9 YS211AF88	J8FG9
1_1/4	32	19	0.03	1.37	1.02	1.02	1.02	0.58	0.58	50	А	10	10	F	100	YS211AF88N6GJ2 YS211AF88L	J8GJ2
1_1/2	32	25	0.03	1.37	1.02	1.02	1.02	0.58	0.58	50	А	10	10	F	100	YS211AF88N6HJ2 YS211AF88L	J8HJ2
2	32	28	0.03	1.37	1.02	1.02	1.02	0.58	0.58	50	А	10	10	F	100	YS211AF88N6JJ2 YS211AF88.	J8JJ2

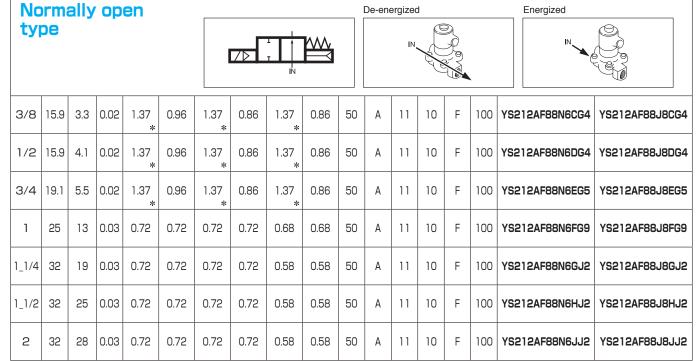


\*Max. fluid temperature(°C) may differ depending on the type of fluid. See p.77 for details.

 $<sup>* \</sup>textit{Mark}: \textit{The maximum operational pressure difference is 1.0 MPa, in case of operating system of a manual.} \\$ 




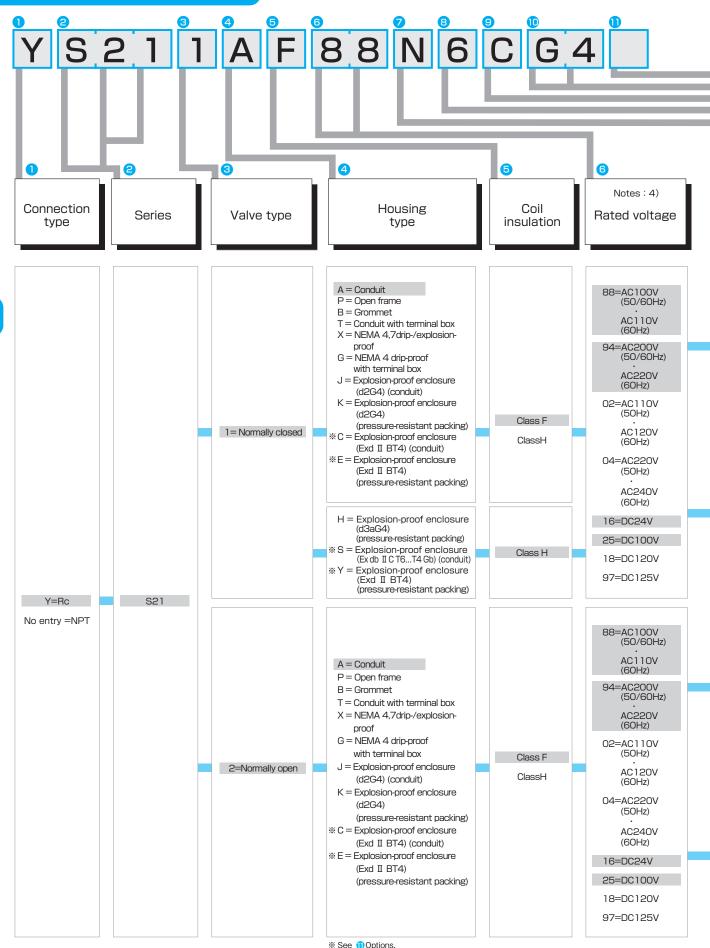


- Notes: 1) Gray marked portions are standard specifications.
  - 2) See Selection Guide (p.66) for combination of seat and shading ring.
  - 3) If port size is Rc2, body code 6 (= bronze) applies.
  - 4) Consult us for other voltage specifications. Note that voltage fluctuation for some DC voltage cases is ±10%.

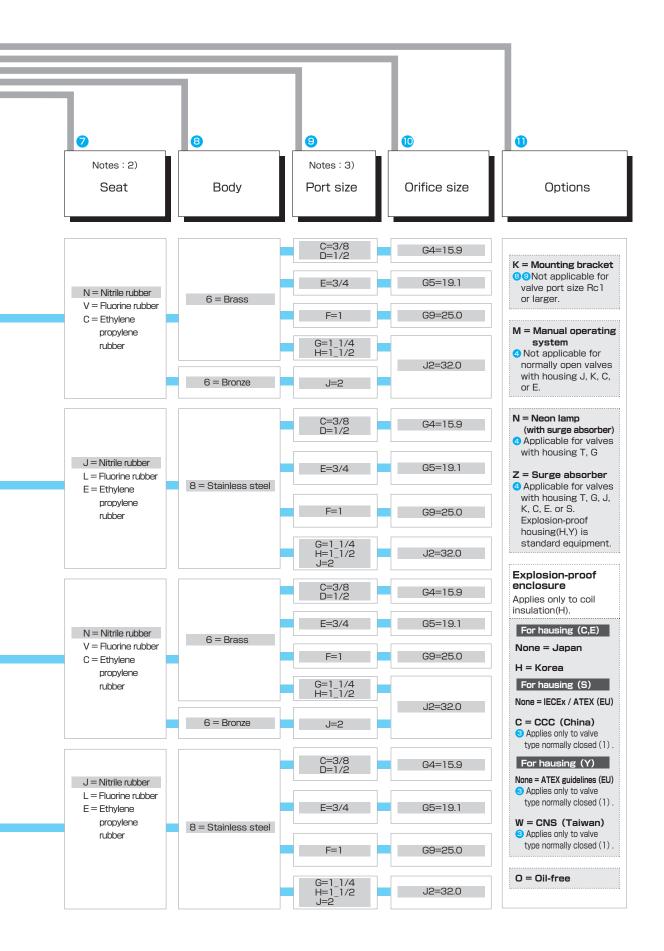

## Structure / Operation

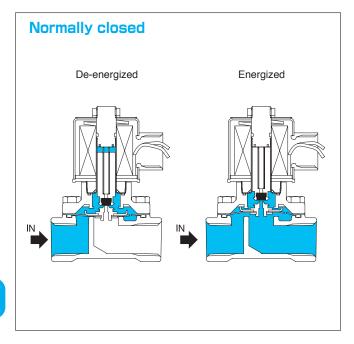

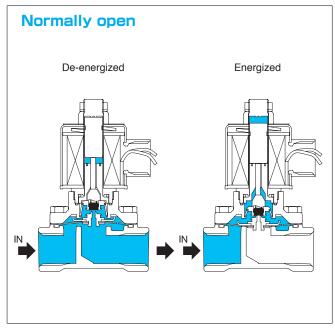

#### Coil Data

Model o	code	YSa	211	YSa	212
Frequenc	y (Hz)	50	60	50	60
Apparent power	Issuance	37	30	56	51
(VA)	Retention	18	13	23	16
Power consumption	AC	1	0	1	1
(W)	DC	1	0	1	0

Notes: • AC power consumption is based on the data at 100/200VAC.

Data may slightly change depending on housing types.


## **Product Mass**


Unit:kg Housing Port size Body (Rc) Α Р В Т J/C K/E/H S Υ Χ G C(3/8)1.0 0.9 0.9 2.9 1.9 1.0 1.2 1.2 1.6 1.7 D(1/2)E(3/4) 1.0 0.9 0.9 1.0 1.2 1.2 1.5 1.7 2.9 1.8 Brass (6) 1.8 F(1) 1.9 2.1 2.1 2.5 2.6 3.8 2.8 1.8 1.9  $G(1_1/4)$ 2.7 2.7 2.7 2.8 2.9 3.0 3.3 3.4 4.6 3.6 H(1\_1/2) Bronze (6) 5.1 J(2) 4.2 4.1 4.1 4.2 4.4 4.4 4.8 4.9 6.1 C(3/8)8.0 8.0 8.0 0.9 1.0 1.1 1.4 1.5 2.7 1.7 D(1/2) E(3/4) 2.9 1.0 0.9 0.9 1.0 1.2 1.2 1.6 1.7 1.9 Stainless 2.1 3.8 2.8 F(1) 1.9 1.8 1.9 1.9 2.2 2.5 2.6 steel(8)  $G(1_1/4)$ 2.9 2.9 2.9 3.0 3.1 3.2 3.5 3.6 4.8 3.8 H(1\_1/2) J(2) 3.4 3.3 3.4 3.5 3.6 3.7 4.0 4.1 5.3 4.3

21


#### **External Dimensions**


Dimensions for conduit housing (A)

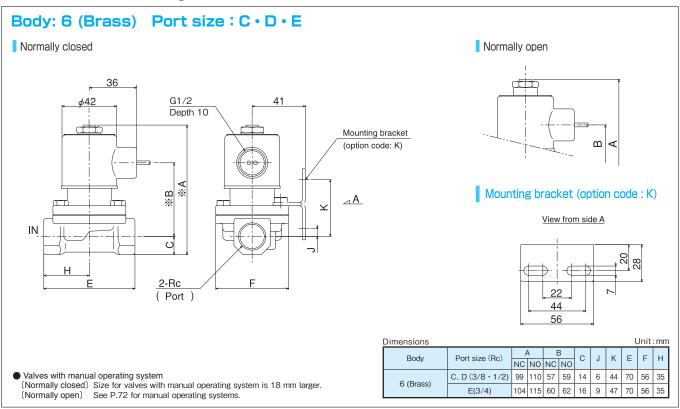

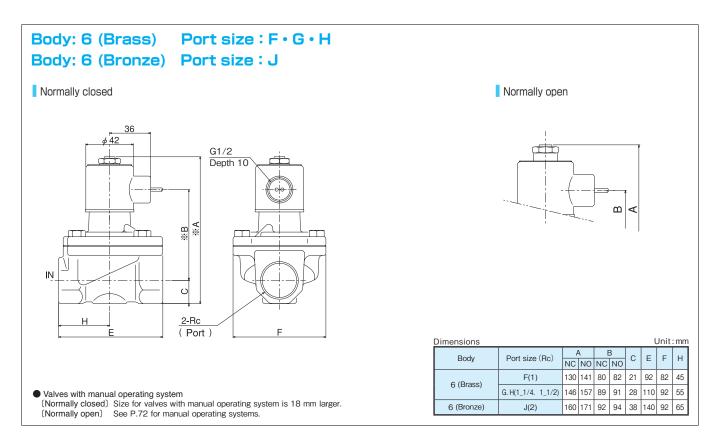

<sup>\*</sup>See P.72 for manual operating systems.

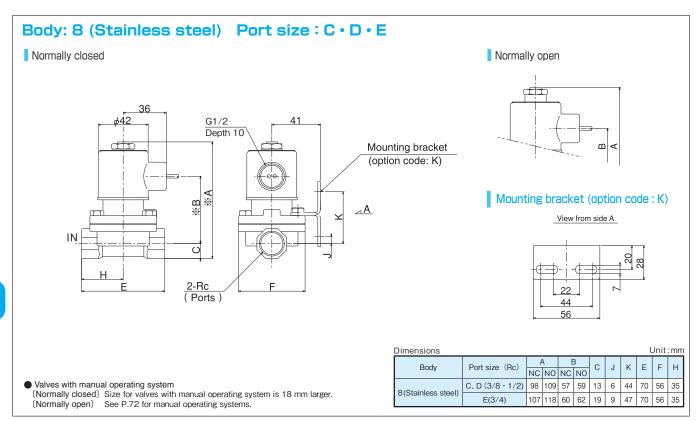

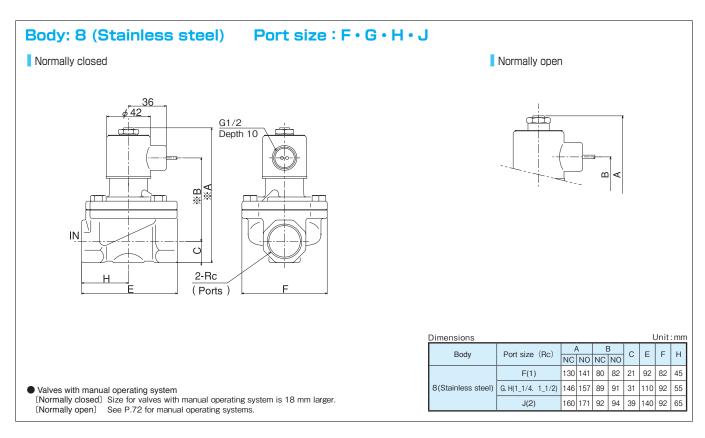

<sup>\*</sup>See P.72 for manual operating systems.



## Y520

## Air / Inert Gas / Water / Kerosene/ Vacuum

# Port Solenoid Valves

Zero-differential Pressure Pilot-acting

YS201 Normally closed type

YS202 Normally open type

YS20 series 2-port solenoid valves are hanging diaphragm valve that start operation with zero differential pressure. The valves are applicable for pressures from -100 kPa to 0.96 MPa.



## Standard Specifications

Va	lve operation	Normally closed	Valve opens when solenoid is energized.									
typ	е	Normally open	Valve opens when solenoid is de-energized.									
Ро	rt size		Rc3/8 · 1/2 · 3/4 · 1 · 1_1/4 · 1_1/2 · 2									
Ori	ifice size		15.9、19.1、25.0、32.0mm									
	Body		Brass, stainless steel									
ls:	Seal / seat		Nitrile rubber, ethylene propylene rubber, fluorine rubber									
Materials		Standard	Conduit type(NEMA1)									
M	Housing	Others Explosion-proof enclosure (d2G4, Exd II BT4), Drip-proof, housing with terminal box, and others. See Selection Guide (p.67-71).										
Ra	ted voltage		AC100V50/60Hz、110V60Hz DC24V AC110V50Hz、120V60Hz DC100V AC200V50/60Hz、220V60Hz DC120V AC220V50Hz、240V60Hz DC125V									
Alle	owable voltage f	luctuation	-15% to 10% of applicable voltages									
Ins	sulation class		Continuous rating class F and H									
Lea	adwire length		Min. 450mm									
An	nbient	Max.	50°C (Temperature may differ depending on coil and fluid temperature. See p.77 for details.)									
ten	nperature	Min.	-17°C (Temperature may depending on seat materials. See p.77 for details.)									
Ins	tallation position		As desired									
Ар	plicable standard	ds	(Consult us for details.)									
Ор	otions, others		Mounting bracket, neon lamp, surge absorber, oil-free  Manual operating system (The maximum operating pressure differential is 1.0Mpa, in case of S202/YS202 [Normally open type] .port size 3/8,1/2,3/4,and rated voltage AC.)									

Please consult us for other specifications.

<sup>•</sup> In some cases the valve may not fully open/close with slight supply-pressure.

## Valve Selection List

Make sure to confirm the operating pressure differential when selecting a valve.

(Rc)	Port size (Rc) Orifice size (mm)	Ф		Op	erating	ential		perature	200	Power consumption (W)		class	(V)	Model code		
t size		Cv valu	Min.		ir/ gas		ater	Kero	sene	% Max. fluid tem °C	Housing	AC	DC	Insulation c	Voltage ( 50/60H	Brass or bronze (Rc 2) body


No tyl		ally	clo	osed			<b>7</b> ▶	IN	<b>1</b>		De-en	ergizec IN,	1 C		)	Energized	
3/8	15.9	3.3	0	0.96	0.61	0.96	0.61	0.61	0.48	50	А	10	10	F	100	YS201AF88N5CG4	YS201AF88J7CG4
1/2	15.9	4.1	0	0.96	0.61	0.96	0.61	0.61	0.48	50	А	10	10	F	100	YS201AF88N5DG4	YS201AF88J7DG4
3/4	19.1	5.5	0	0.96	0.61	0.96	0.61	0.61	0.48	50	А	10	10	F	100	YS201AF88N5EG5	YS201AF88J7EG5
1	25	11	0	0.68	-	0.34	-	-	-	50	А	10	-	F	100	YS201AF88N5FG9	YS201AF88J7FG9
1_1/4	32	18	0	0.34	-	_	-	-	-	50	А	10	-	F	100	YS201AF88N5GJ2	YS201AF88J7GJ2
1_1/2	32	23	0	0.34	-	-	-	-	-	50	А	10	-	F	100	YS201AF88N5HJ2	YS201AF88J7HJ2
2	32	27	0	0.34	-	_	-	_	_	50	А	10	-	F	100	YS201AF88N5JJ2	YS201AF88J7JJ2


No	rma	ally	ор	en							De-en	ergized	d			Energized	
ty	type						/b			IN,			<u> </u>				
3/8	3/8 15.9 3.3 0 1.37 0.86				1.37	0.86	1.37	0.86	50	А	11	10	F	100	YS202AF88N5CG4	YS202AF88J7CG4	
1/2	15.9	4.1	0	1.37	0.86	1.37	0.86	1.37	0.86	50	А	11	10	F	100	YS202AF88N5DG4	YS202AF88J7DG4
3/4	3/4 19.1 5.5 0 1.37				1.37	0.86	1.37	0.86	50	А	11	10	F	100	YS202AF88N5EG5	YS202AF88J7EG5	

\*Max. fluid temperature(°C) may differ depending on the type of fluid. See p.77 for details.

<sup>\*</sup>Mark: The maximum operational pressure difference is 1.0MPa, in case of operating system of a manual.

- Notes: 1) Gray marked portions are standard specifications.
  2) See Selection Guide (p. 66) for combination of seat and shading ring.
  3) Normally closed valves with port size Rc1 or larger are not applicable for DC voltage specifications.
  For such specifications select YS27 series valves.
  4) If port size is Rc2, body code 5 (= bronze) applies.
  5) Consult us for other voltage specifications. Note that voltage fluctuation for some DC voltage cases is ±10%.

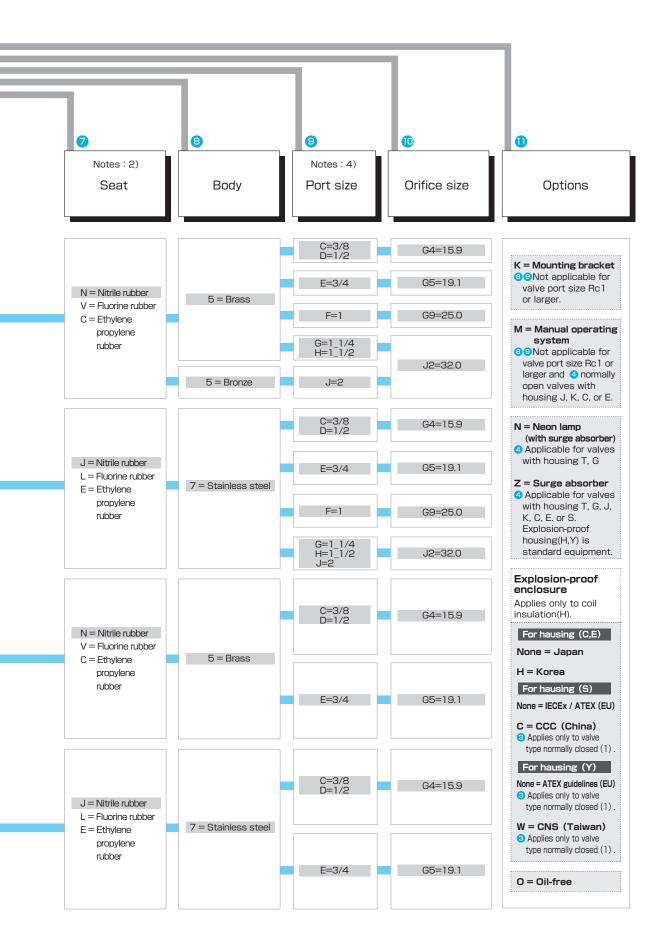

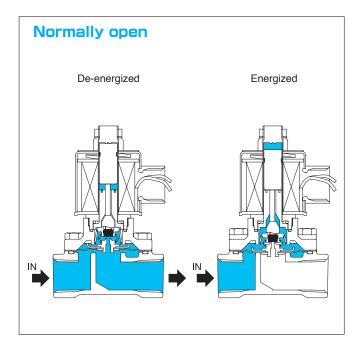

Coil Data

Model o	code	YSa	201	YS202				
Frequenc	y (Hz)	50	60	50	60			
Apparent power	Issuance	37	30	43	37			
(VA)	Retention	22	15	24	18			
Power consumption	AC	1	0	11				
(W)	DC	10						

Notes: • AC power consumption is based on the data at 100/200VAC.

Data may slightly change depending on housing types.


## **Product Mass**


Unit:kg Housing Port size Body (Rc) Α Р В Т J/C K/E/H S Υ Χ G C(3/8)1.0 0.9 0.9 2.9 1.9 1.0 1.2 1.2 1.6 1.7 D(1/2) E(3/4) 1.0 0.9 0.9 1.0 1.2 1.2 1.6 1.7 2.9 1.9 Brass (5) 1.8 1.8 F(1) 1.8 2.0 2.1 2.4 2.5 3.7 2.7 1.9  $G(1_1/4)$ 2.7 2.7 2.7 2.8 2.9 3.0 3.3 3.4 4.6 3.6 H(1\_1/2) Bronze (5) 5.0 J(2) 4.1 4.1 4.1 4.2 4.3 4.4 4.7 4.8 6.0 C(3/8)8.0 8.0 8.0 0.9 1.0 1.1 1.4 1.5 2.7 1.7 D(1/2) E(3/4) 1.2 2.9 1.0 0.9 0.9 1.0 1.2 1.6 1.7 1.9 Stainless 2.1 3.7 2.7 F(1) 1.8 1.8 1.8 1.9 2.0 2.4 2.5 steel(7)  $G(1_1/4)$ 2.9 2.8 2.9 3.0 3.1 3.2 3.5 3.6 4.8 3.8 H(1\_1/2) J(2) 3.4 3.3 3.3 3.4 3.6 3.6 4.0 4.1 5.3 4.3

**20** 

## 外形寸法図 External Dimensions

Dimensions for conduit housing (A)

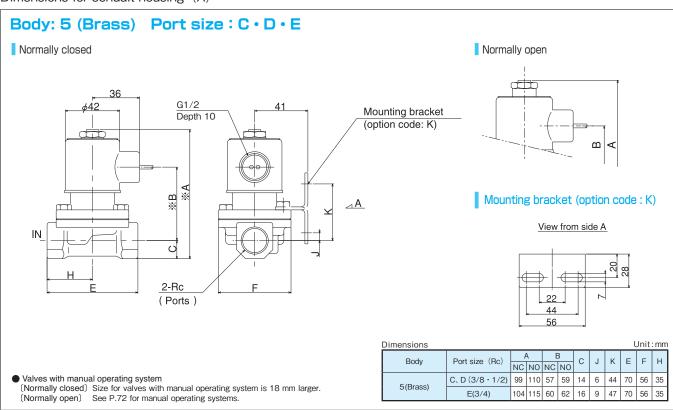


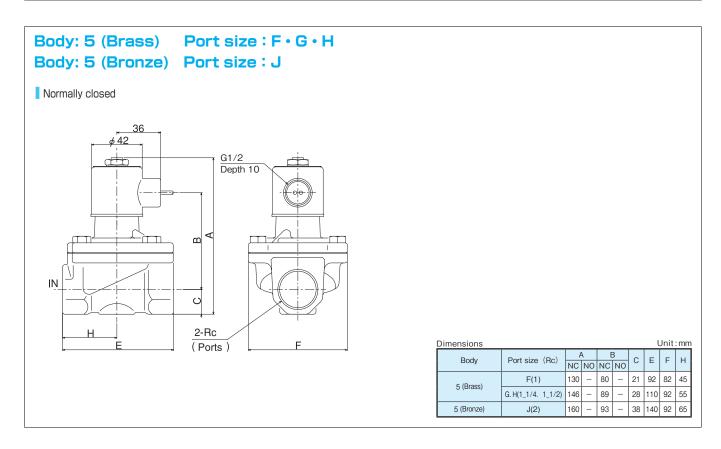


<sup>\*</sup>See P.72 for manual operating systems.

## **External Dimensions**

#### Dimensions for conduit housing (A)

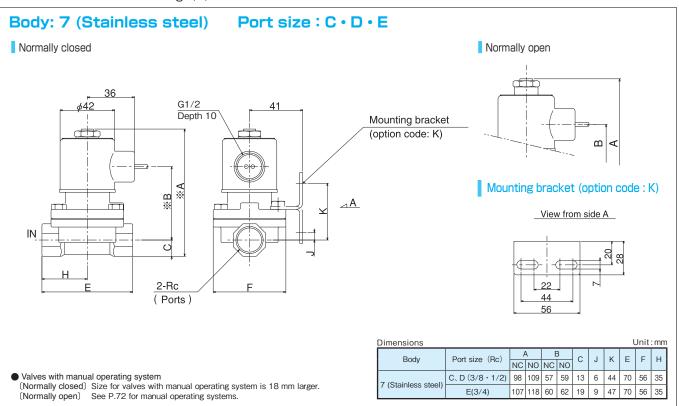

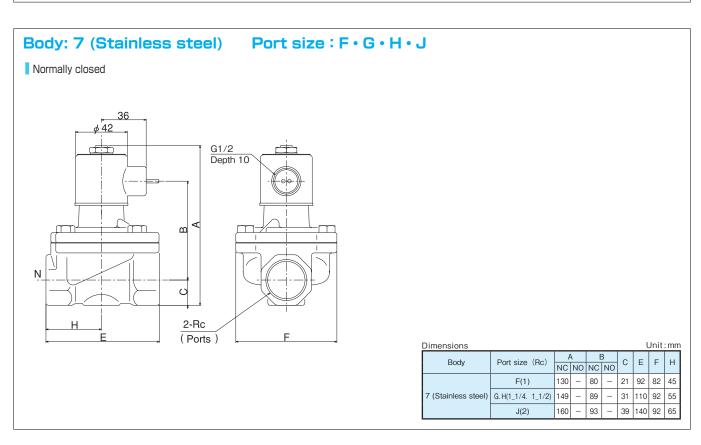

<sup>\*</sup>See P.72 for manual operating systems.



## Y527

## Air / Inert Gas / Water / Kerosene / Vacuum

# Port Solenoid Valves

Zero-differential Pressure Pilot-acting

YS271 Normally closed type

Y\$272 Normally open type

YS27 series 2-port solenoid valves are hanging diaphragm valve that start operation with zero differential pressure. The valves are applicable for wide range of pressures, from -100 kPa to 0.86 MPa.



## Standard Specifications

Va	ve operation	Normally closed	Valve opens when solenoid is energized.									
typ	e .	Normally open	Valve opens when solenoid is de-energized.									
Ро	rt size		Rc1 · 1_1/4 · 1_1/2 · 2									
Or	fice size		25.0、32.0mm									
	Body		Brass, stainless steel, bonze									
SI	Seal / seat		Nitrile rubber, ethylene propylene rubber, fluorine rubber									
Materials		Standard	Conduit type(NEMA1)									
M	Housing	Others	Drip-proof, housing with terminal box, and others. See Selection Guide (p.67-71).									
Ra	ted voltage		AC100V50/60Hz, 110V60Hz DC24V AC110V50Hz, 120V60Hz DC100V AC200V50/60Hz, 220V60Hz DC120V AC220V50Hz, 240V60Hz DC125V									
All	owable voltage f	luctuation	-15% to 10% of applicable voltages									
Ins	ulation class		Continuous rating class H									
Le	adwire length		Min. 450mm									
An	bient	Max.	50°C (Temperature may differ depending on coil and fluid temperature. See p.77 for details.)									
ter	nperature	Min.	-17°C (Temperature may depending on seat materials. See p.77 for details.)									
Ins	tallation position		Place the valve with solenoid standing upright.									
Ар	plicable standard	ds	(Consult us for details.)									
Ор	tions, others		Neon lamp, surge absorber, oil-free									


- Please consult us for other specifications.
- In some cases the valve may not fully open/close with slight supply-pressure.

## Valve Selection List

Make sure to confirm the operating pressure differential when selecting a valve.

(Rc)	mm)			Ор	erating	MPa	e differe	ential		perature		consu	Power consumption (W)		(\)	Model code	
Port size (F	Orifice size (r	Cv value	Min.	inert gas Water Kerosen			osene DC	* Max. fluid temp	Housing	AC	DC	Insulation class	Voltage (\ 50/60Hz	Brass or bronze (Rc 2) body	Stainless steel body		


No ty		ally	clo	osed			De-energized									Energized	
1	25	13	0	0.86	0.86	0.68	0.68	0.49	0.49	50	А	17.5	22.5	Н	100	YS271AH88N5FG9	YS271AH88J7FG9
1_1/4	32	19	0	0.86	0.86	0.34	0.34	0.49	0.49	50	А	17.5	22.5	Н	100	YS271AH88N5GJ2	YS271AH88J7GJ2
1_1/2	32	25	0	0.86	0.86	0.34	0.34	0.49	0.49	50	А	17.5	22.5	Н	100	YS271AH88N5HJ2	YS271AH88J7HJ2
2	32	28	0	0.86	0.86	0.34	0.34	0.49	0.49	50	А	17.5	22.5	H	100	YS271AH88N5JJ2	YS271AH88J7JJ2

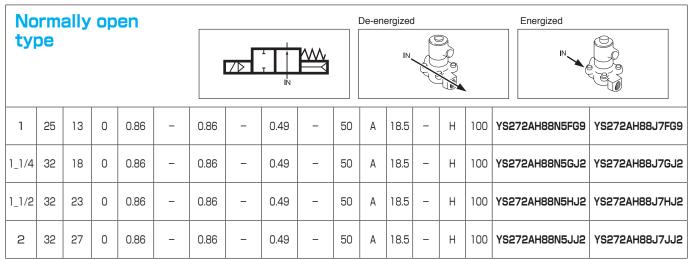


\*Max. fluid temperature(°C) may differ depending on the type of fluid. See p.77 for details.




- Notes: 1) Gray marked portions are standard specifications.
  - 2) See Selection Guide (p. 65) for combination of seat and shading ring.
  - 3) If port size is Rc2, body code 5 (= bronze) applies.
  - 4) Consult us for other voltage specifications. Note that voltage fluctuation for some DC voltage cases is  $\pm 10\%$ .

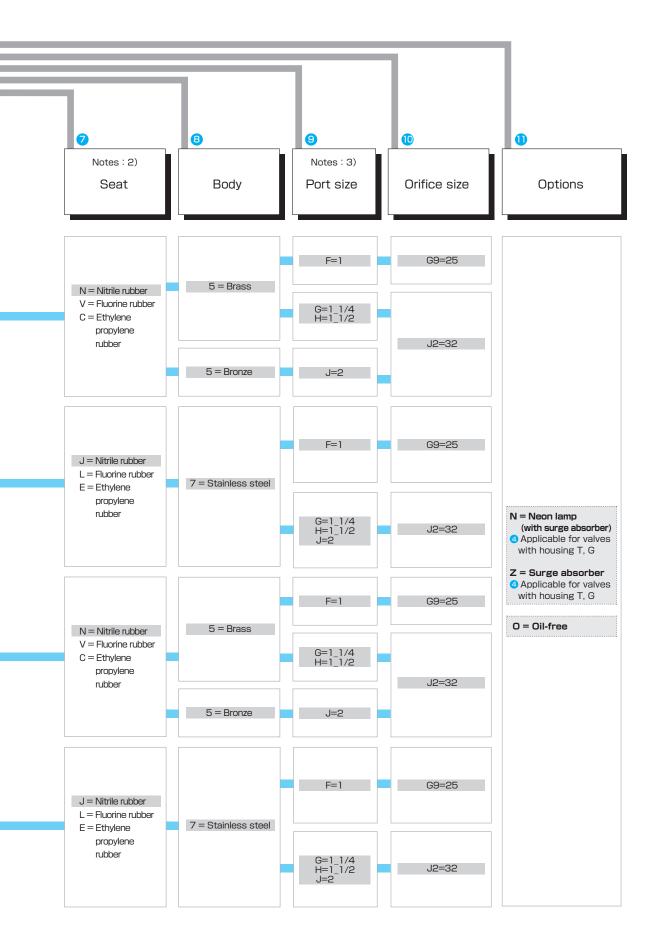

# Structure / Operation

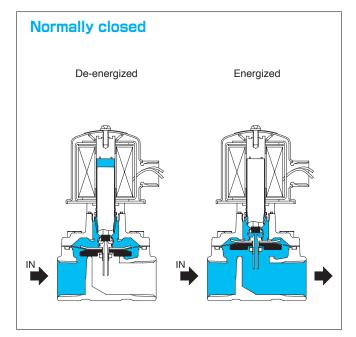

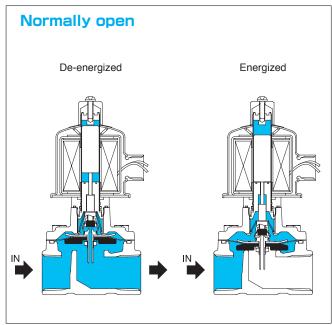



## Coil Data

Model o	code	YS2	271	YS2	272	
Frequenc	y (Hz)	50	60	50	60	
Apparent power	Issuance	150	130	160	130	
(VA)	Retention	32	25	40	30	
Power consumption	AC	17	7.5	18.5		
(W)	DC	22	2.5	_		

Notes: 

AC power consumption is based on the data at 100/200VAC.


Data may slightly change depending on housing types.


# Product Mass

	Port size		Hou	sing	Unit:kg
Body	(Rc)	А	Т	W	G
Drago (5)	F(1)	2.4	2.5	2.4	2.5
Brass (5)	G(1_1/4) H(1_1/2)	3.3	3.4	3.3	3.4
Bronze (5)	J(2)	4.7	4.8	4.7	4.8
	F(1)	2.4	2.5	2.4	2.5
Stainless steel (7)	G(1_1/4) H(1_1/2)	3.5	3.5	3.5	3.5
	J(2)	4.0	4.0	4.0	4.0

#### **External Dimensions**

Dimensions for conduit housing (A)

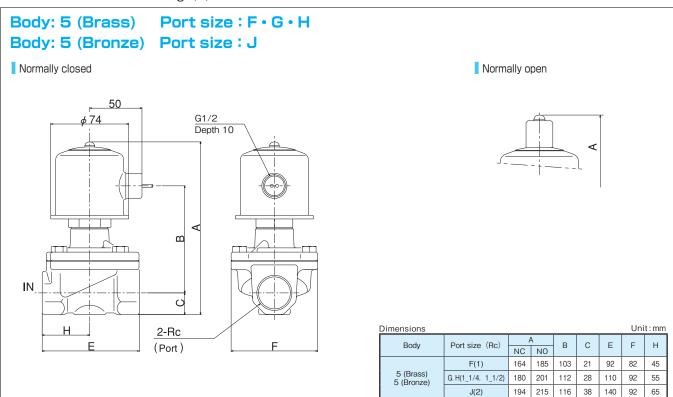

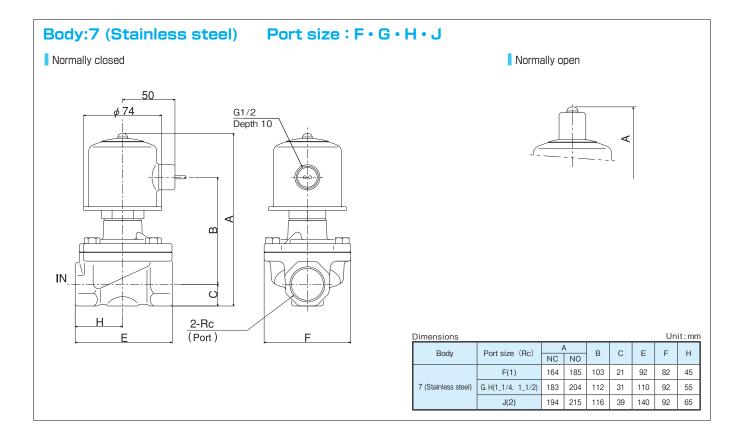

# **Y523**

# Port Solenoid Valves

**Pilot-acting** 

**YS23** 

Normally closed type

By original piston structure, realized high durability.



# Standard Specifications

Va typ	lve operation	Normally closed	Valve opens when solenoid is energized.							
	rt size	l	Rc3/8 · 1/2 · 3/4 · 1 · 1_1/4 · 1_1/2							
Ori	ifice size		21.0、30.0、40.0mm							
	Body		Brass							
l SE	Seal / seat		PTFE							
Materials	Standard		Conduit type(NEMA1)							
Ĭ	Housing Others		IEMA4 drip-proof See Selection Guide (p.66-70).							
Ra	ted voltage		AC100V50/60Hz、 110V60Hz AC110V50Hz、 120V60Hz AC200V50/60Hz、 220V60Hz AC220V50Hz、 240V60Hz							
All	owable voltage f	uctuation	-10% to 10% of applicable voltages							
Ins	ulation class		Continuous rating class H							
Le	adwire length		Min. 450mm							
An	nbient	Max.	60°C							
ter	temperature Min.		5°C							
Ins	tallation position		Installation of the valve with its head up is recommended.							
Ар	plicable standard	ds	(Consult us for details.)							

Please consult us for other specifications.


# Valve Selection List

Make sure to confirm the operating pressure differential when selecting a valve.


(Rc)	(mm)	ne		Operating pressur MPa		emperature	20	consu	wer mption V)	class	25	Model code
Port size	Orifice size	Cv val	Min.	Ste	Steam AC DC		Housin	AC	DC	Insulation	Voltage 50/60P	Brass body

1	Normally closed type					De-ene	IN (	6			Energized		
3/8	21	4.1	0.1	0.9	-	180	А	10	_	Н	100	YS231AH88S6CG6	
1/2	21	5.5	0.1	0.9	-	180	А	10	-	Н	100	YS231AH88S6DG6	
3/4	30	10	0.1	0.9	-	180	А	10	-	Н	100	YS231AH88S6EJ1	
1	30	12	0.1	0.9	-	180	А	10	_	Н	100	YS231AH88S6FJ1	
1_1/4	40	19	0.1	0.9	-	180	А	10	_	Н	100	YS231AH88S6GJ6	
1_1/2	40	25	0.1	0.9	-	180	А	10	_	Н	100	YS231AH88S6HJ6	




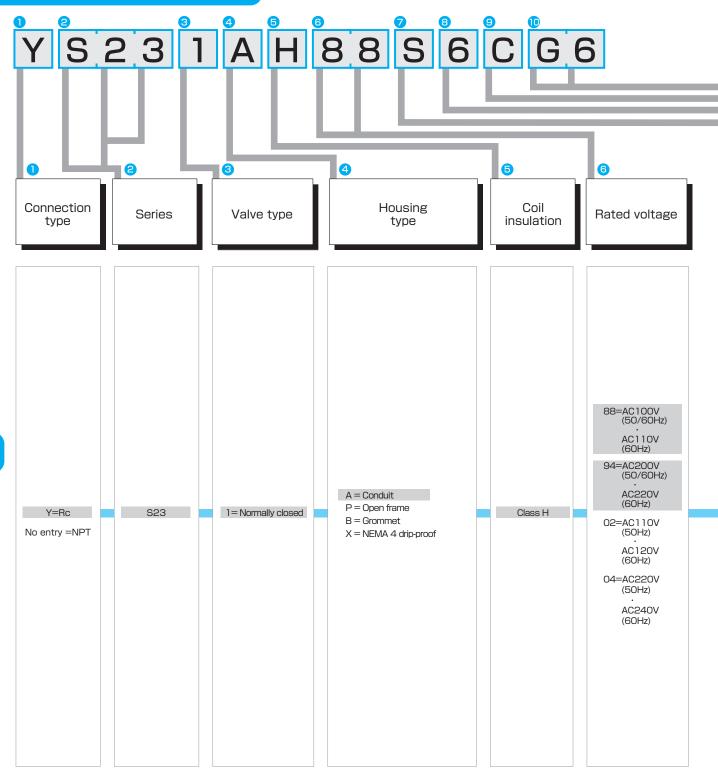

Notes: 1) Gray marked portions are standard specifications.

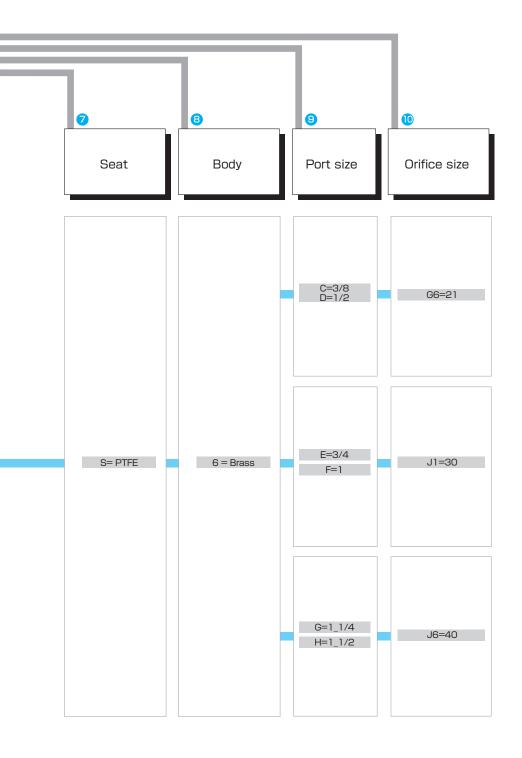

# Structure / Operation

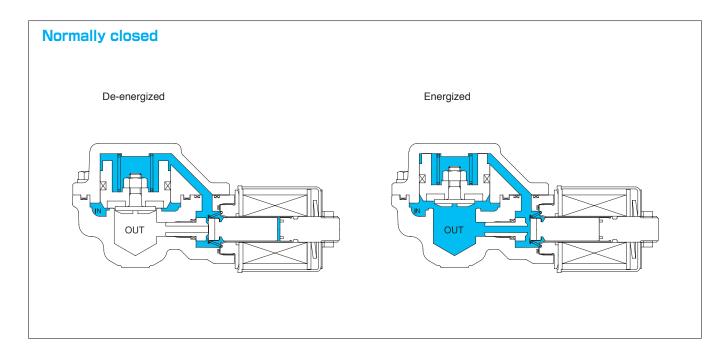

# Coil Data

(W)

#### YS231 Model code 60 Frequency (Hz) 50 37 30 Apparent power Issuance (VA) Retention 18 13 Power consumption

AC

# Product Mass

					Unit:k					
Body	Port size	Housing								
Бойу	(Rc)	Α	Р	В	Х					
	C(3/8)	1.5	1.4	1.5	1.7					
	D(1/2)	1.0	1.4	1.5	1.7					
Brass (6)	E(3/4)	2.8	2.7	2.8	3.0					
Dia55 (0)	F(1)	۵.0	۷.7	2.0	3.0					
	G(1_1/4)	6.2	6.1	6.2	6.4					
	H(1_1/2)	0.2	0.1	0.2	0.4					

Notes: 

AC power consumption is based on the data at 100/200VAC.


Data may slightly change depending on housing types.


10


### **External Dimensions**

Dimensions for conduit housing (A)



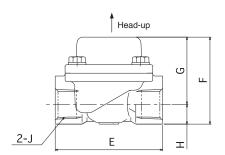

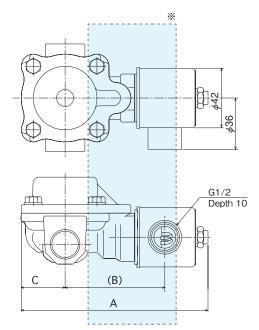

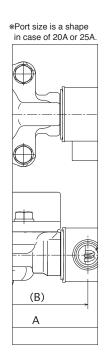

Port size (Rc)	А	В	С	Е	F	G	Н	J
10A	135	104	31	76	61.5	<i>1</i> 75	14	Rc3/8
15A	133	104	51	70	01.5	47.5	14	Rc1/2
20A	155	115	41	102	81.5	61	20.5	Rc3/4
25A	100	115	41	102	01.5	01	20.5	Rc1
32A	181	125	56	130	112.5	92 F	30	Rc1_1/4
40A	101	123	50	130	112.5	02.0	50	Rc1_1/2

# Port Solenoid

**Mini-type Direct-acting** 

YS333 Normally closed type

Normally open type

YS336 Universal type

YS33 series mini-type 3-port solenoid valves are available in NC, NO, and universal types with port size Rc 1/8 or 1/4. With the compact design, the valves are also suitable for use as pilot valves.



### **Standard Specifications**

		Normally closed	Pressure is supplied to secondary port when solenoid is energized.							
Va typ	lve operation e	Normally open	Pressure is exhausted from secondary port when solenoid is energized.							
``		Universal type	Valve can be used for NC or NO operation by switching pressure ports.							
Ро	rt size		Rc1/8 · 1/4							
Or	fice size		1.6 ~ 4.4mm							
	Body		Brass, stainless steel							
	Seal / seat		Nitrile rubberr, fluorine rubber, ethylene propylene rubbe							
rials	Poppet fork		Polyacetal, stainless steel							
Materials		Standard	Conduit type(NEMA1)							
	Housing	Others	Explosion-proof enclosure (d2G4, Exd II BT4), Drip-proof, housing with terminal box, and others. See Selection Guide (p.67-71).							
Ra	ted voltage		AC100V50/60Hz, 110V60Hz DC24V AC110V50Hz, 120V60Hz DC100V AC200V50/60Hz, 220V60Hz DC120V AC220V50Hz, 240V60Hz DC125V							
All	owable voltage f	luctuation	-15% to 10% of applicable voltages							
Ins	ulation class		Continuous rating class F and H							
Le	adwire length		Min. 450mm							
An	nbient	Max.	50°C (Temperature may differ depending on coil and fluid temperature. See p.77 for details.)							
ter	nperature	Min.	-20°C (Temperature may depending on seat materials. See p.77 for details.)							
Ins	tallation position	l	As desired							
Ар	plicable standar	ds	(Consult us for details.)							
Op	tions, others		Mounting bracket, manual operating system, neon lamp, surge absorber, oil-free							

Please consult us for other specifications.

#### Valve Selection List

4.4 0.38

0

0.31

0.16

50 N


Α

10 10

Make sure to confirm the operating pressure differential when selecting a valve.

3c) mm)			Opera	ting pressure MPa					Pov		v		Mode	el code		
(Bc)	E	alue		Ma	эх.	ember	<b>_</b>	ا ا	(V		clas	S <sub>Z</sub>				
Port size	Port size		Min.	Air/ine Keroser	rt gas/ ne/water	Max. fluid to	Seat	Housi	AC	DC	Insulation	Voltage 50/60	Brass body	Stainless steel body		
	0			AC	DC	*					_					


	orm pe	ally	clo	sed		Supply = Port 2						e-ener	gized 2	Energized 2 3		
	1.6	0.09	0	1.37	1.09	<sup>2</sup>	3 N	A	10	10	F	100	YS333AF88N4AC5			
1/8	2.4	0.15	0	1.02	0.78	50	N	Α	10	10	F	100	YS333AF88N4AC9			
	3.2	0.26	0	0.57	0.41	50	N	Α	10	10	F	100	YS333AF88N4AD5			
	1.6	0.09	0	1.37	1.09	50	N	Α	10	10	F	100	YS333AF88N4BC5		YS333AF88J8BC5	
1/4	2.4	0.15	0	1.02	0.78	50	N	Α	10	10	F	100	YS333AF88N4BC9		YS333AF88J8BC9	
3.2 0.31 0 0.57		0.41	50	N	Α	10	10	F	100	YS333AF88N4BD5	BD5 YS333AF88J8B					
	4.4 0.38 0 0.31 0.16 50 N A				10	10	F	100	YS333AF88N4BD8							

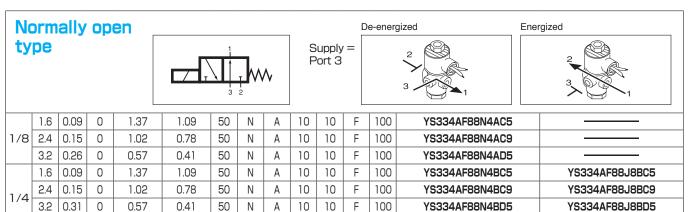

F


100

YS334AF88N4BD8

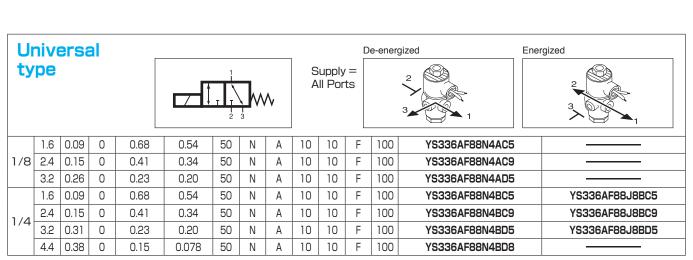



 $\hbox{*Max. fluid temperature ($^\circ$C) may differ depending on the type of fluid. See p.77 for details.}$ 

- Notes: 1) Gray marked portions are standard specifications.
  - 2) See Selection Guide (p. 66) for combination of seat and shading ring.
  - 3) Consult us for other voltage specifications. Note that voltage fluctuation for some DC voltage cases is ±10%.
  - 4) When heat resistance is necessary, please choose it.

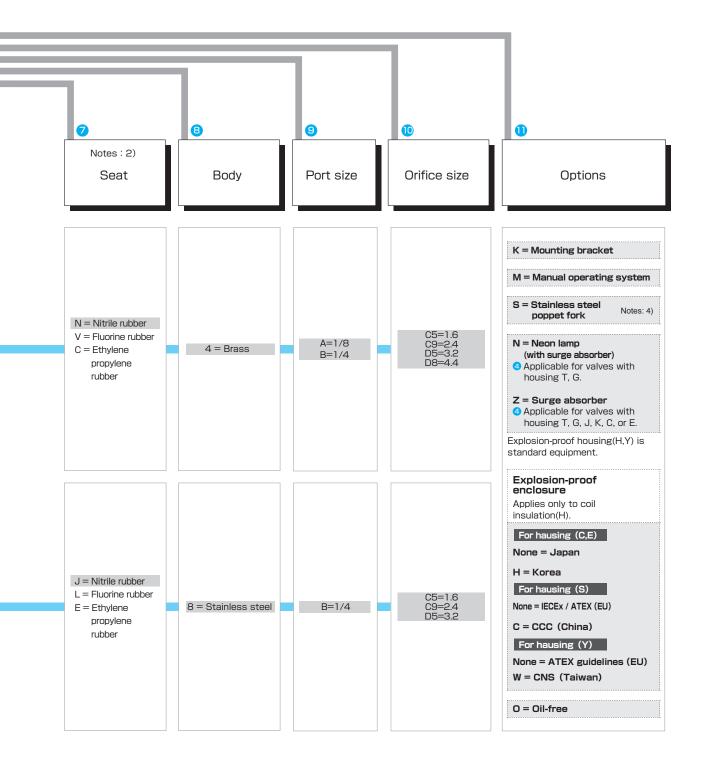

# Structure / Operation

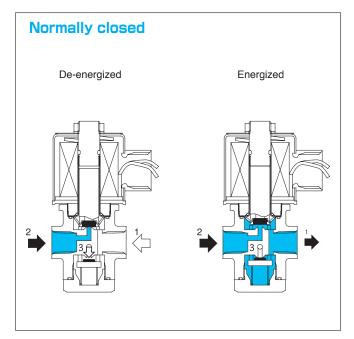

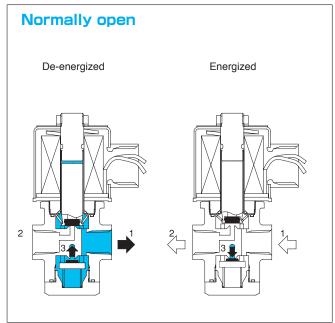

# Coil Data

Frequenc	y (Hz)	50	60		
Apparent power	Issuance	37	30		
(VA)	Retention	18	13		
Power consumption	AC	10			
(W)	DC	1	0		


# Notes: AC power consumption is based on the data at 100/200VAC. Data may slightly change depending on housing types.


## Product Mass

										l	Jnit:kg	
Body	Port size (Rc)		Housing									
Бойу		Α	Р	В	Т	Х	G	J/C	K/E/H	S	Υ	
Proce (4)	A(1/8)	0.6	0.6	0.6			0.9	1.2		2.5		
Brass (4)	B(1/4)				0.7	0.0			1 2		1.5	
Stainless steel (8)	B(1/4)	0.6			0.7	0.8			1.3			

#### **External Dimensions**

Dimensions for conduit housing (A)

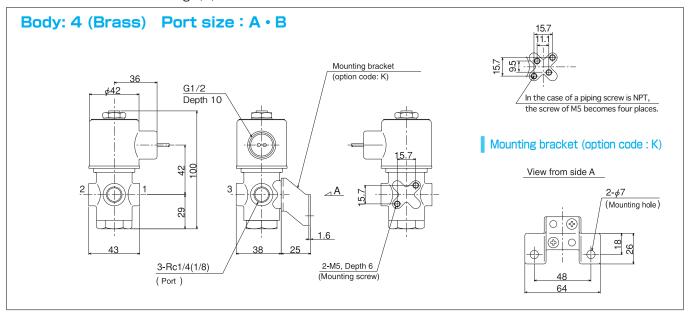

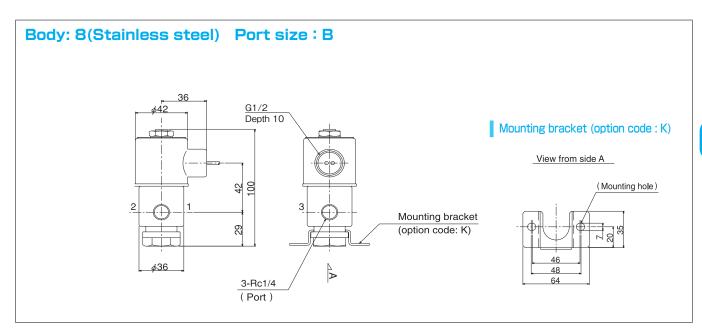

<sup>\*</sup>See P.72 for manual operating systems.

# Solenoid

**Pilot-acting** 

YS203 Normally closed type

YS204 Normally open type

YS203/204 series pilot-operated diaphragm style 3-port solenoid valves show distinguished performance in high flow rate applications. The valves have no sliding parts, thus free from damage by contaminated fluids. The valves function with high reliability.



## Standard Specifications

Va	lve operation	Normally closed	Pressure is supplied to secondary port when solenoid is energized.							
typ	е	Normally open	Pressure is exhausted from secondary port when solenoid is energized.							
Ро	rt size		Rc3/8 · 1/2 (Please consult us for Rc 3/4 · 1)							
Or	ifice size		15.9mm							
	Body		Brass							
	Seal / seat		Nitrile rubberr, fluorine rubber, ethylene propylene rubbe							
rials	Poppet fork		Polyacetal, stainless steel							
Materials		Standard	Conduit type(NEMA1)							
	Housing	Others	Explosion-proof enclosure (d2G4, Exd II BT4), Drip-proof, housing with terminal box, and others. See Selection Guide (p.67-71).							
Ra	ted voltage		AC100V50/60Hz、 110V60Hz							
All	owable voltage f	luctuation	-15% to 10% of applicable voltages							
Ins	ulation class		Continuous rating class F and H							
Le	adwire length		Min. 450mm							
An	nbient	Max.	50°C (Temperature may differ depending on coil and fluid temperature. See p.77 for details.)							
ter	nperature	Min.	-17°C (Temperature may depending on seat materials. See p.77 for details.)							
Ins	tallation position	1	As desired							
Ар	plicable standar	ds	(Consult us for details.)							
Ор	tions, others		Mounting bracket, manual operating system, neon lamp, surge absorber, oil-free							
a Di		r other enecifications								

Please consult us for other specifications.


# Valve Selection List

Make sure to confirm the operating pressure differential when selecting a valve.

	Ē		Opera	iting pressure MPa	e differential	rature			Pov		SS		
size (Rc)	ize (m	value		Ma	ax.	d tempe °C	Seat	Jsing	(W	V)	on cla	ige (V) 60Hz	Model code
Port s	rifice s	S	Min	Air/ine	ert gas	Max. fluid	S	구	AC	DC	Insulati	Volta 50/6	
	0			AC	DC	*							


	Normally closed type  3/8   15.9   3.3   0.05   1.02   1.02					□ □	<b>/</b> ▷ 1	1 T T	Ė	<b></b> ✓	D	e-ener	gized Energized	A A
3/8	15.9	3.3	0.05	1.02	1.02	50	N	А	10	10	F	100	YS203AF88N5CG	4
1/2	15.9	4.4	0.05	1.02	1.02	50	N	А	10	10	F	100	YS203AF88N5DG	4

	Normally open type						A A A A A A A A A A A A A A A A A A A						gized	Energized
3/8	15.9	3.3	0.05	1.02	1.02	50	N	A	10	10	L	100	YS20	04AF88N5CG4
1/2	15.9	4.4	0.05	1.02	1.02	50	N	А	10	10	F	100	YS20	04AF88N5DG4

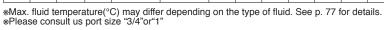




#### **Model Code**

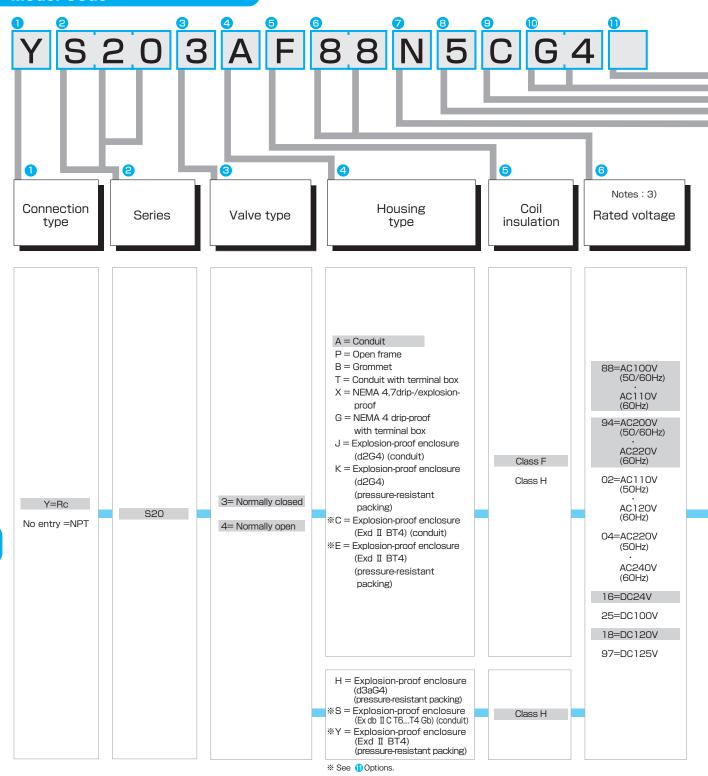

54


Notes: 1) Gray marked portions are standard specifications.


- 2) See Selection Guide (p. 66) for combination of seat and shading ring.
- 3) Consult us for other voltage specifications. Note that voltage fluctuation for some DC voltage cases is ±10%.
- 4) When heat resistance is necessary, please choose it.

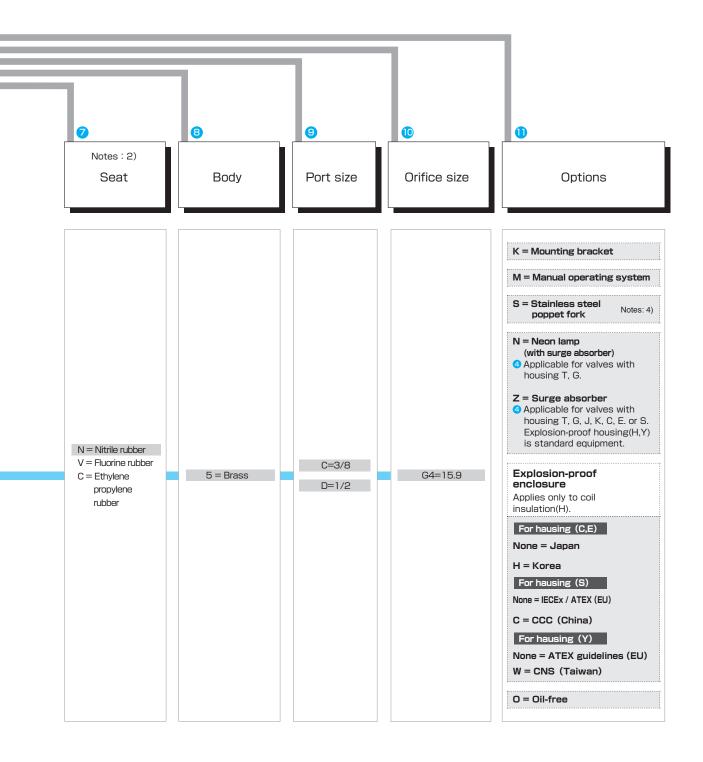



# Structure / Operation

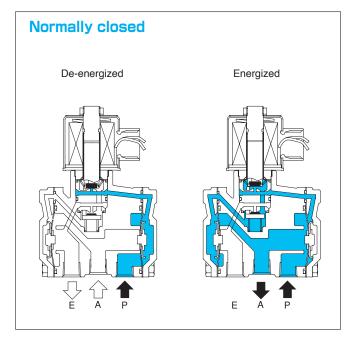

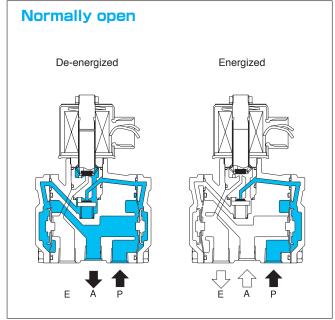

## Coil Data

Frequenc	y (Hz)	50	60			
Apparent power	Issuance	37	30			
(VA)	Retention	18	13			
Power consumption	AC	10				
(W)	DC	1	0			


# Notes: AC power consumption is based on the data at 100/200VAC. Data may slightly change depending on housing types.

# Product Mass

											Jnit:kg
Body	Port size					Hous	sing				
Бойу	(Rc)	Α	Р	В	Т	Χ	G	J/C	K/E/H	S	Υ
Proce (5)	C(3/8)	1.6	16	16	17	10	1 0	2.2	2.3	2 5	2.5
Brass (5)	D(1/2)	1.0	1.0	1.0	1.7	0	้.	ح.ح	د.ی	3.5	د.ن

### **External Dimensions**

Dimensions for conduit housing (A)

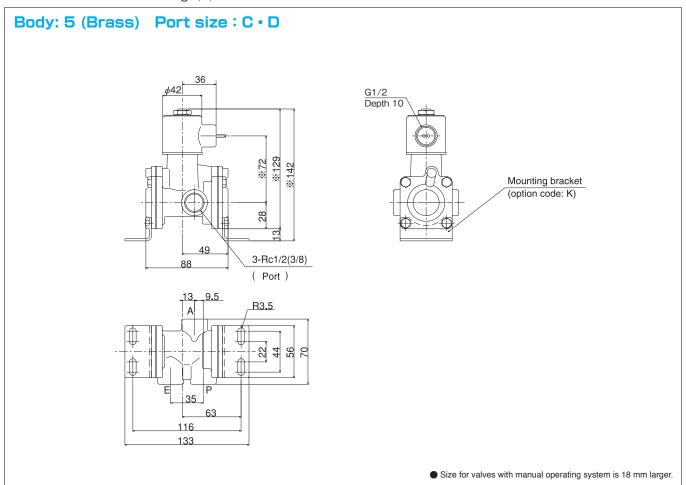

<sup>\*</sup>See P.72 for manual operating systems.



# Y532

# Port Solenoid

**Pilot-acting** 

YS321 Normally closed type

YS322 Normally open type

YS32 series pilot-operated piston style 3-port solenoid valves show distinguished performance in high flow rate applications.

The valves have large orifice.

The valves have high reliability as quick exhaust valve.



## Standard Specifications


Va	lve operation	Normally closed	Pressure is supplied to secondary port when solenoid is energized.							
typ	oe e	Normally open	Pressure is exhausted from secondary port when solenoid is energized.							
Ро	rt size		Rc1/4 · 3/8							
Or	ifice size		Pressure side : 7.1mm Exhaust side : 8.7mm							
	Body		Brass							
	Seal / seat		Nitrile rubberr, fluorine rubber							
rials	Poppet fork		Polyacetal, stainless steel							
Materials		Standard	Conduit type(NEMA1)							
_	Housing	Others	Explosion-proof enclosure (d2G4, Exd II BT4), Drip-proof, housing with terminal box, and others. See Selection Guide (p.67-71).							
Ra	ited voltage		AC100V50/60Hz、 110V60Hz							
All	owable voltage f	luctuation	-15% to 10% of applicable voltages							
Ins	sulation class		Continuous rating class F and H							
Le	adwire length		Min. 450mm							
An	nbient	Max.	50°C (Temperature may differ depending on coil and fluid temperature. See p.77 for details.)							
ter	nperature	Min.	-17°C (Temperature may depending on seat materials. See p.77 for details.)							
Ins	stallation position	1	As desired							
Ар	plicable standar	ds	(Consult us for details.)							
Ор	tions, others		Manual operating system,neon lamp, surge absorber							
• 51	11. 6	r other enecifications	·							


Please consult us for other specifications.

## Valve Selection List

Make sure to confirm the operating pressure differential when selecting a valve.


	Ê		Opera	ating pressure MPa	e differential	rature			Pov		SS		
(Rc)	m) e	value		Ма	эх.	tempe	٠,	28	(V	v)	clas	S z N	
Port size	rifice size	Cv va	Min.	Air/ine Kero	rt gas/ sene	Max. fluid to	Seat	Housi	AC	DC	nsulation	Voltage 50/60	Model code
	0			AC	DC	*							

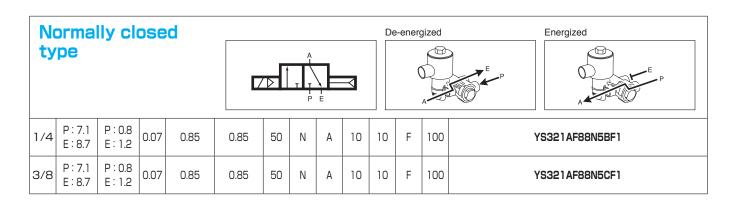

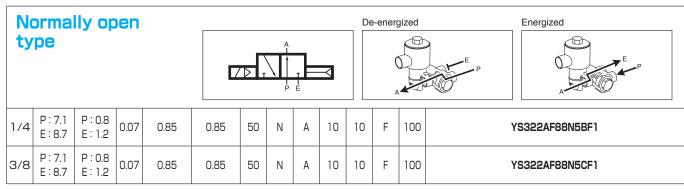


 $\hbox{$\#$Max. fluid temperature (°C) may differ depending on the material of sheet. See p. 77 for details.}$ 




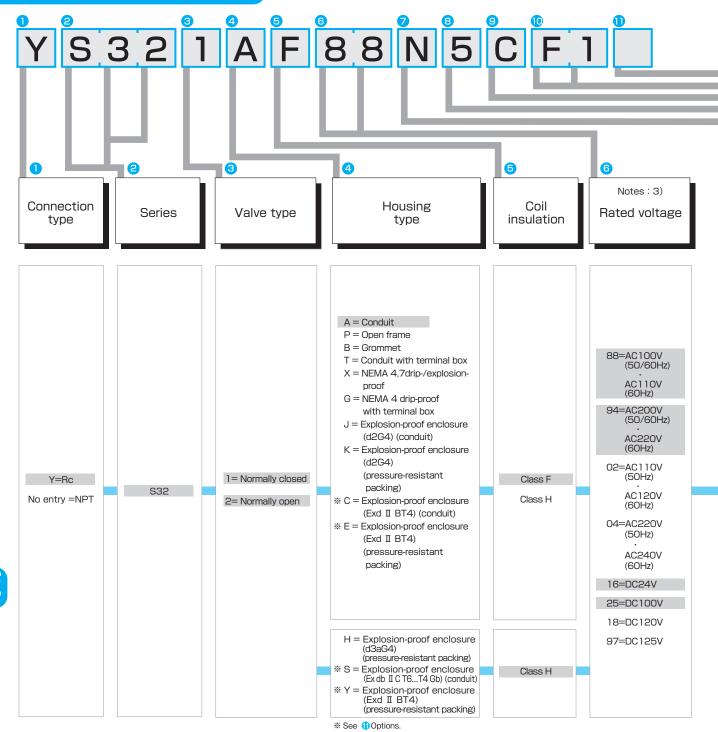


- Notes: 1) Gray marked portions are standard specifications.
  - 2) See Selection Guide (p. 66) for combination of seat and shading ring.
  - 3) Consult us for other voltage specifications. Note that voltage fluctuation for some DC voltage cases is ±10%.
  - 4) When heat resistance is necessary, please choose it.

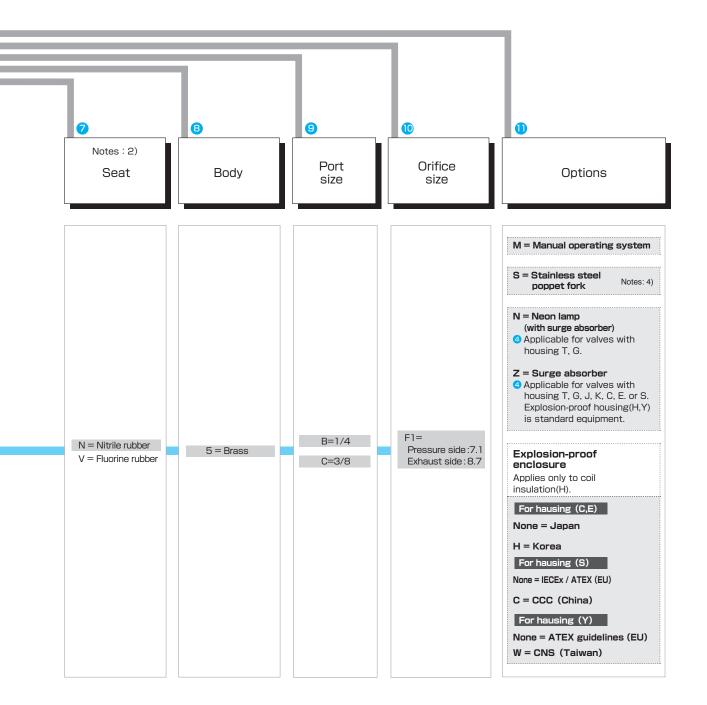

# Structure / Operation

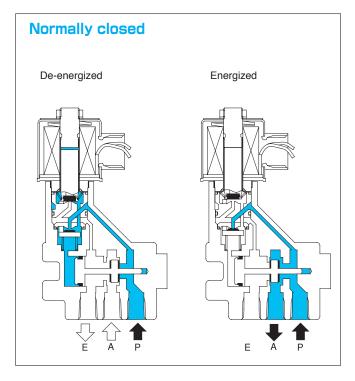

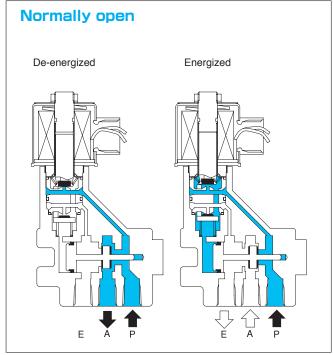

## Coil Data

Frequenc	y (Hz)	50	60
Apparent power	Issuance	37	30
(VA)	Retention	18	13
Power consumption	AC	1	0
(W)	DC	1	0


# Notes: AC power consumption is based on the data at 100/200VAC. Data may slightly change depending on housing types.

## Product Mass

											Unit : k
Pody	Port size					Hou	sing				
Body	(Rc)	Α	Р	В	Т	Х	G	J/C	K/E/H	S	Υ
Brass	B(1/4)	1 1	1 1	1 1	1.0	1.0	1 /	1 7	1.8	2.0	2.0
(5)	C(3/8)	1.1	1.1	1.1	1.2	1.3	1.4	1.7	1.0	3.0	2.0

## **External Dimensions**

## Dimensions for conduit housing (A)

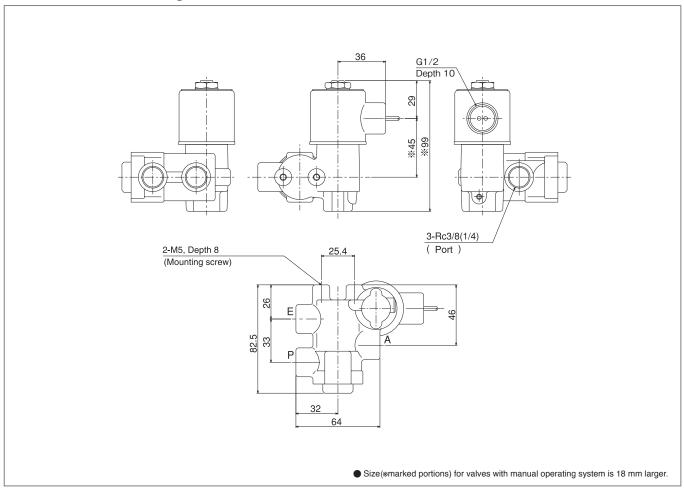


\*See P.72 for manual operating systems.



# Valve Selection Guide

This valve selection guide can be used for various application requirements. Please read carefully and select the valve that best suits your application.

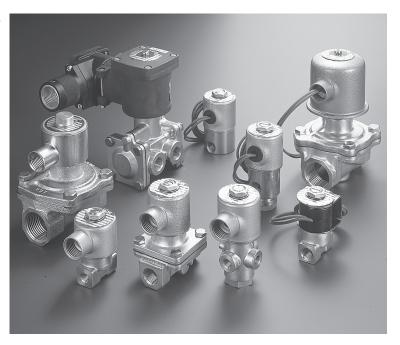

# **Selection Guide**

# **INFOMATION**

# General Handling Precautions

Handling precautions for selection of MAGFLOW series solenoid valves.

Page

2

# Selection Guide by Fluid / Material

General guide for use in selecting materials suitable for the fluid used

65
Page

3

### Seal / Seat and Shading Ring

Guide to determine combination of seal/seat and shading ring for a valve.

66
Page

4

#### Coil / Housing

Detailed description of coil types and characteristics, application, and appearance of various housings to select coils and housings suitable for desired applications/specifications.

67
Page

5

# Determination of Flow Rate

Guide to determine flow rate of the applicable fluid, including flow rate graphs by 3 fluid types (liquid, gas, steam), correction coefficient graphs, and exercises.

73
Page

6

#### Glossary

Explanation of terms used in this catalogue, i.e., basic function and performance of solenoid valves.

Page



# 1 Selection Guide by Fluid / Material

				Seat/sea	ıl		SI	nading ri	ng		Body						
Fluid / Material	Specific gravity	Nitrile rubber	Ethylene propylene rubber	*Chloropylene rubber	Fluorine rubber rubber	PTFE	per	eř	mnu	Sta	inless s	teel	ıze	SS	- Wnu		
	Spec	(NBR)	(MOda) Ethylene	Chloro CLIO	(MX4) Fluorin	(PTFE)	Copper	Silver	* Aluminum	SUS 303 304	SUS 316	SUS 430F	Bronze	Brass	* Aluminum		
Acetone	0.79	X		×	×	(i ii/	0	0	0	0	0	0	0	0	0		
Acetylene	0.91	0	0	$\triangle$	0	0	×	×	0	0	0	0	×	×	0		
Argon	1.38	0		0						0	0	0	×	×	×		
Ammonia (liquid/gas)	0.6	$\triangle$		0	×	0	×	×	0	0	0	0	×	×	0		
Ink (non-alkaline)		0		$\triangle$	0	0		$\triangle$		×	0	0			$\triangle$		
Ethanol	0.79	0	0	0	0	0	0	0	0	0	0	0	0	0	0		
Chlorine gas	2.49	×	×	×	0	0	Δ	0	$\triangle$	×	0	×	Δ	×			
Gasoline	0.75		×	×	0	0	Δ	0	$\triangle$	0	0	0	0	0			
Seawater	1.05	×	×	×	×	×	×	×	×	×	×	×	×	×	×		
Hydrogen peroxide water (bleach)	1.44	$\triangle$	$\triangle$	×	0	0	×	×	0	$\triangle$	0	$\triangle$	×	×	0		
Oxygen	1.11	$\triangle$		0	0	$\triangle$	0	0	0	0	0	0	0	0	0		
Carbon tetrachloride	1.59	×	×	×	0	0	$\triangle$	0	×	0	0	0	0	$\triangle$	×		
Pure acetic acid	1.06	$\triangle$	×	$\triangle$	×	0	×	0	0	0	0	0	×	×	0		
Pure water	1.0	0	0		0	0	0	0		0	0	0					
Edible oil			×		0		0			0	0	0		0			
Sodium hydroxide (<30%)		0	0	×	×	0	×	0	×	0	0	0	×	×	×		
Acetic acid 10%				0			×	0	0	0	0	0	×	×	0		
Deionized water	1.0	0	0		0	0	0	0		0	0	0					
Hydrocarbon		$\triangle$	×	×	0	0	0	0	0	0	0	0	0	0	0		
Carbon dioxide	1.57	$\triangle$	$\triangle$	$\triangle$	Δ	0	0	0	0	0	0	0	0	0	0		
Aerated water		0		0	0	0	0		0		0	0	$\circ$	0	0		
Turpentine oil	0.87	0	×	$\triangle$	0	0	0	0	0	0	0	0	$\circ$	0	0		
Toluene	0.87	0	×	×	0	0	0	0	0	0	0	0		0	0		
Kerosene	0.8	0	×	0	0	0	0	0	0	0	0	0	0	0	0		
Naphtha	0.76	0	×	×	0	0	0	0	0	0	0	0	$\circ$	0	0		
Light oil	8.0	$\triangle$	×	0	0	0	$\triangle$	0	0	0	0	0	0	0	0		
Perchloro ethylene		×	×	×	0	0	0	0	$\triangle$	0	0	0	0	0	$\triangle$		
Butane	2.07	$\triangle$	×	0	0	0	0		0	0	0	0	0	0	0		
Brake fluid		×	0	×	×	0	×	0	×	0	0	0	×	×	×		
Freon R11		0	×	0	×	0	0	0	0	0	0	0	0	0	0		
Freon R12		0	×	0	×	0	0	0	0	0	0	0	0	0	0		
Freon R13		0	$\triangle$	0	×	0	0	0	0	0	0	0	0	0	0		
Condensed water	1.0	0	0	$\triangle$	$\triangle$	0	0	0	0	0	0	0	0	$\triangle$	0		
Benzine	0.88	×	×	×	0	0	0	0	0	0	0	0	0	0	0		
Boiler feed water	1.0	0		$\triangle$	Δ	0	0	0	0	0	0	0	0	$\triangle$	0		
Methanol	0.81	0	0	0	×	0	0	0	0	0	0	0	0	0	0		
Methyl ethyl ketone		×	0	×	×	0	0	0	0	0	0	0	0	0	0		
Turbine oil	0.91	0	×	0	0	0	0	0	0	0		0		0	0		
Phosphoric acid		$\triangle$	0	$\triangle$	0	0	$\triangle$	0	×	$\triangle$	0	×	$\triangle$	0	×		
Sulfuric acid	1.83	×	×	×	×	×	×	×	×	×	×	×	×	×	×		
Anhydrous chloric acid		×		×	0	0	$\triangle$			×	×	0	$\triangle$	×			

 <sup>● \*</sup>Please consult us for details about products using aluminum materials.
 Note) This table is a general selection guide and does not guarantee the performance of products. Sufficient tests should be performed and results confirmed before use.
 ○ : Suitable ○ : Can be used △ : Can be used in certain conditions × : Cannot be used

# 2 Seal / Seat and Shading Ring

# Combination of seal/seat YS and shading ring Seat

Code No.	Seal/seat	Shading ring
N	Nitrile rubber	Copper
V	Fluorine rubber	Copper
С	Ethylene propylene rubber	Copper
Т	PTFE	Copper

Code No. T,Q is only for YS30 series.
Code No. S is only for YS30 or YS23 series.

Code No.	Seal/seat	Shading ring
J	Nitrile rubber	Silver
L	Fluorine rubber	Silver
E	Ethylene propylene rubber	Silver
S	PTFE	Silver

Code No.	Seal/seat	Shading ring
Α	Nitrile rubber	Aluminum
В	Fluorine rubber	Aluminum
Р	Ethylene propylene rubber	Aluminum
Q	PTFE	Aluminum

#### Cord for exclusive use of the special use.


Code No.	Purpose	Seal/ seat	Shading ring	The seriese to apply			Special specifications
н	High vacuum use	Fluorine rubber	Copper	YS30、YS20、YS2	7	Working pressure	1.3 × 10 <sup>-4</sup> Pa (abs) ~ Atmosphere
М	Middle vacuum use	Nitrile rubber	Copper	YS30、YS20、YS27、YS33		Working pressure	0.13Pa (abs) ~Maximum working pressure differential
0	Oxygenuse	Fluorine rubber	Copper	All Series		Use the grea	se with applied to oxygen
D	Warm water	Fluorine rubber	Copper	Body : Brass	YS30 YS21	Fluid	5∼99°C
D	use	Fluorine rubber	Silver	Body : Stainless Steel	YS20 YS27	temperature	5.~ 330 %

<sup>• (</sup>abs): Absolute pressure

<sup>\*:</sup> In the case of explosion-proof housing,please refer to P.76 table.

Coil: Class H

# 3 Coil / Housing

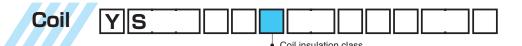

■d2G4 (2-port solenoid valves)		Certification No.
Class F	Normally closed	T56437
Class F	Normally open	T38166
Class H	Normally closed	T56438
Class n	Normally open	T38168

(3-port solenoid valves)	Certification No.
Class F	T56437
Class H	T56438

#### ■d3G4 (2-port solenoid valves)

Class H	Normally closed	T6ØØ99

#### (3-port solenoid valves)

Class H	Т6ØØ99
---------	--------

#### ■ Exd II BT4 (2-port solenoid valves)

Class F	Normally closed	TC16743
Glass F	Normally open	TC16745
Class H	Normally closed	TC16744
Class H	Normally open	TC16746

#### (3-port solenoid valves)

Class F	TC16743
Class H	TC16744

#### ■ II 2G Exd II BT4 Gb (EU) (2-port solenoid valves)

Class H Normally closed TÜV 11 ATEX7945
---

#### (3-port solenoid valves)

Class H	TÜV 11 ATEX7945X
---------	------------------

#### ■ Explosion-proof for Korea Exd II BT4 (2-port solenoid valves)

Class H	Normally closed	11 - AV4B0 - Ø196
	Normally open	13 - AV4BO - Ø492

#### (3-port solenoid valves)

Class H 11 – AV4B0 – Ø196
---------------------------

#### ■ Ex db II C T6...T4 Gb (IEC Ex) (2-port solenoid valves)

Class H	Normally closed	IECEx SIR 19.0053X

#### (3-port solenoid valves)

Class H	IECEx SIR 19.0053X
---------	--------------------

#### ■ Ex db II C T6...T4 Gb (EU) (2-port solenoid valves)

Class H	Normally closed	CSANe 20ATEX1044X
0100011	rvormany biooca	OUNING LUNILATION

#### (3-port solenoid valves)

Class H CSANe 20ATEX1044X
---------------------------

#### ■ Ex d II C T4 ~ T6 Gb (CCC China) (2-port solenoid valves)

Class H	Normally closed	A number changes at every official approval.
---------	-----------------	--

#### (3-port solenoid valves)

Class H	A number changes at every official approval.

#### ■ Exd II BT4 Gb X (Taiwan) (2-port solenoid valves)

Class H Normally closed	A number changes at every official approval.
-------------------------	--

#### (3-port solenoid valves)

#### ■d2G4 · Class NK (Nippon kaiji kyokai) (2-port solenoid valves)

Class F	Normally closed	Ø2T6Ø1
Class H	Normally closed	Ø2T6Ø1


#### (3-port solenoid valves)

Class F	Ø2T6Ø1
Class H	Ø2T6Ø1

#### Cable size (pressure-resistant packing type) d2G4 Exd II BT4

Specified size	Applicable cable size		
φ8	φ 7.5 ~ 8,4		
φ9	φ 8.5 ~ 9.4		
φ 10	φ 9.5 ~ 10.4		
<i>φ</i> 11	φ 10.5 ~ 11.4		
φ 12	φ 11.5 ~ 12.4		
φ 13	φ 12.5 ~ 13.4		

# 3 Coil / Housing

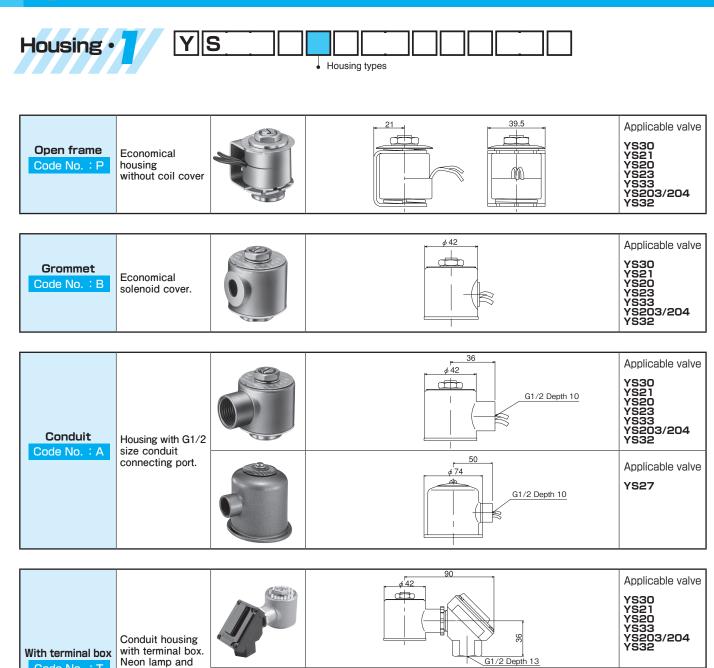

φ<sup>7</sup>74

G1/2 Depth 13


Applicable valve

**YS27** 


Code No.: T

surge absorber are


optionally available.

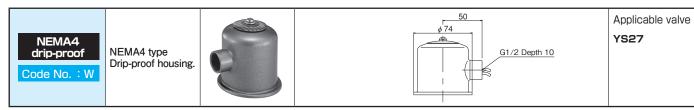


% Conforms to JIS C 0920 (IEC 60529) protection class: IP 55.

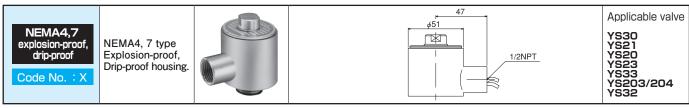


% Conforms to JIS C 0920 (IEC 60529) protection class: IP 65.

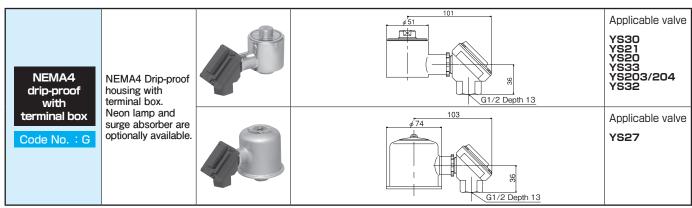

% Only for indoor use conforming to JIS C 0920 (IEC 60529) protection class: IP 55.

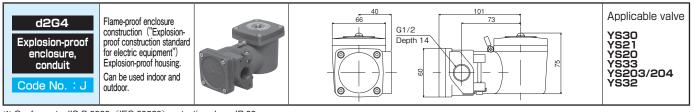


% Conforms to JIS C 0920 (IEC 60529) protection class: IP 66.

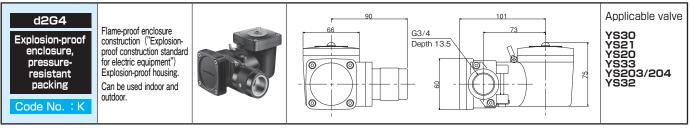


% Conforms to JIS C 0920 (IEC 60529) protection class: IP 66.


# 3 Coil / Housing

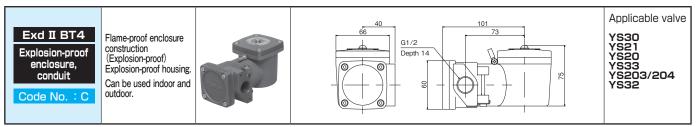


% Conforms to JIS C 0920 (IEC 60529) protection class: IP 66.

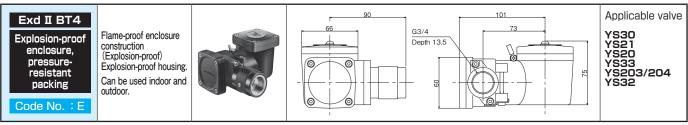


% Conforms to JIS C 0920 (IEC 60529) protection class: IP 66.

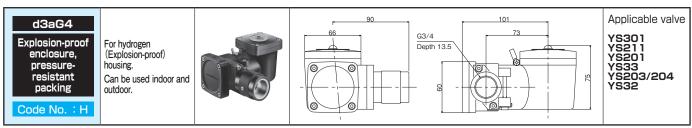


% Conforms to JIS C 0920 (IEC 60529) protection class: IP 66.

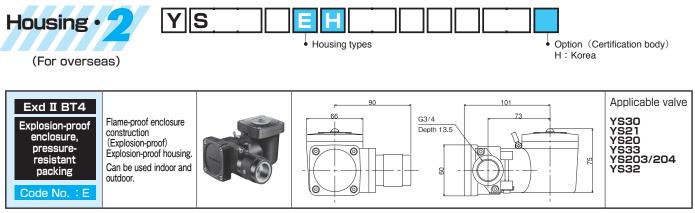


% Conforms to JIS C 0920 (IEC 60529) protection class: IP 66.

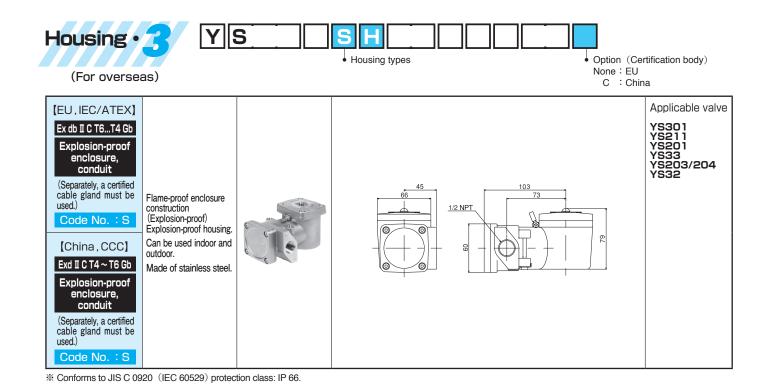

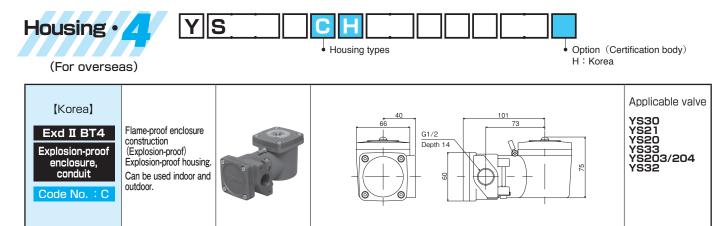



Conforms to JIS C 0920 (IEC 60529) protection class: IP 66.

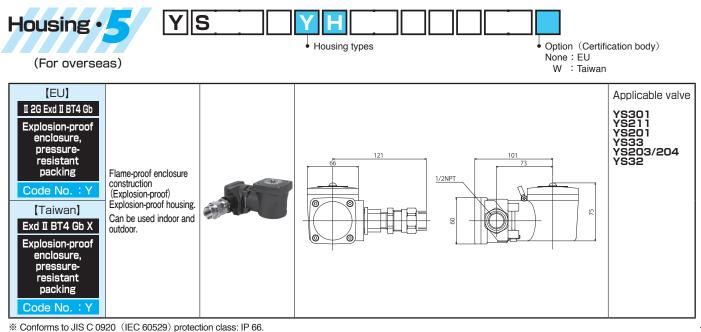


# 4 Manual Operating System (Option Code: M)

#### **■**YS30

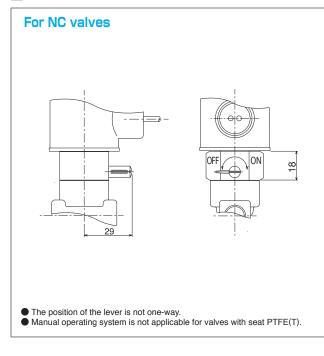


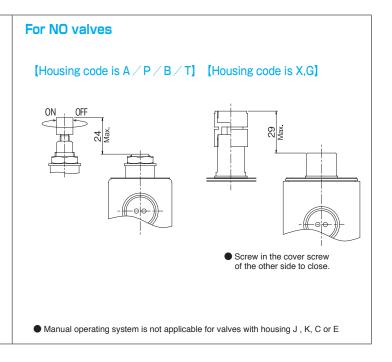


#### ■YS21 / YS20

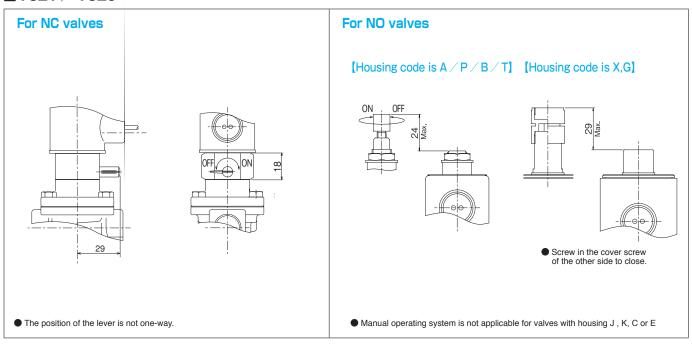

#### **■**YS33

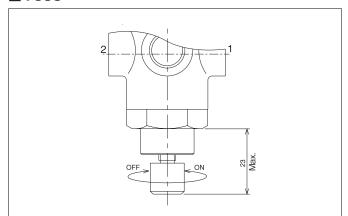

# ■YS32 · YS 203

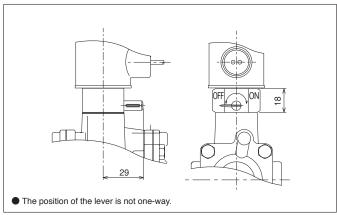


# **5** Determination of Flow Rate


Flow media: Liquid




 Fluid viscosity should be more than 65mm<sup>2</sup>/s.

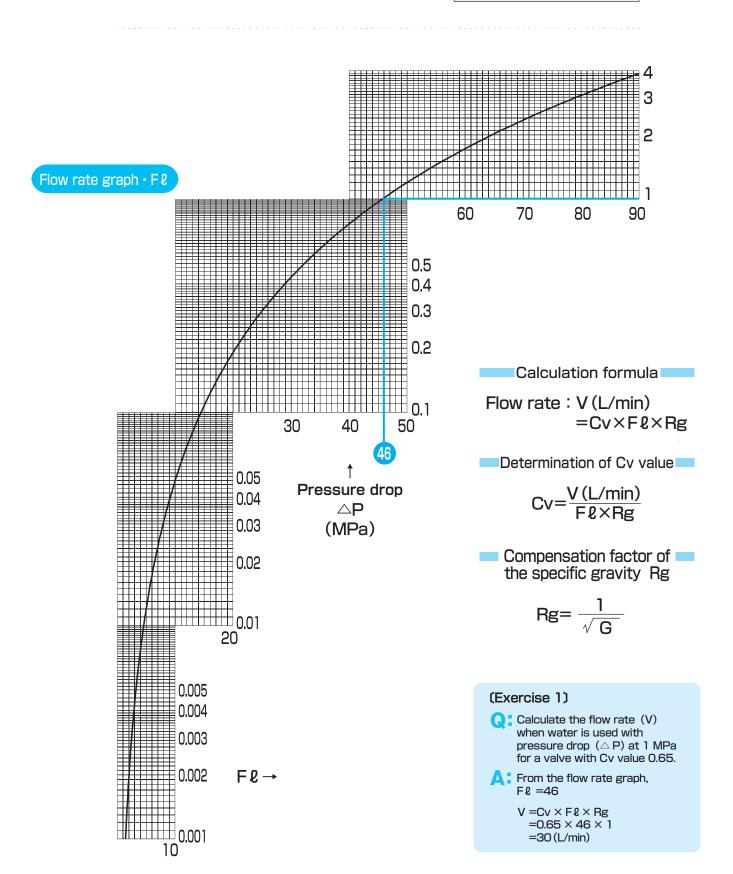

# Determination of Flow Rate

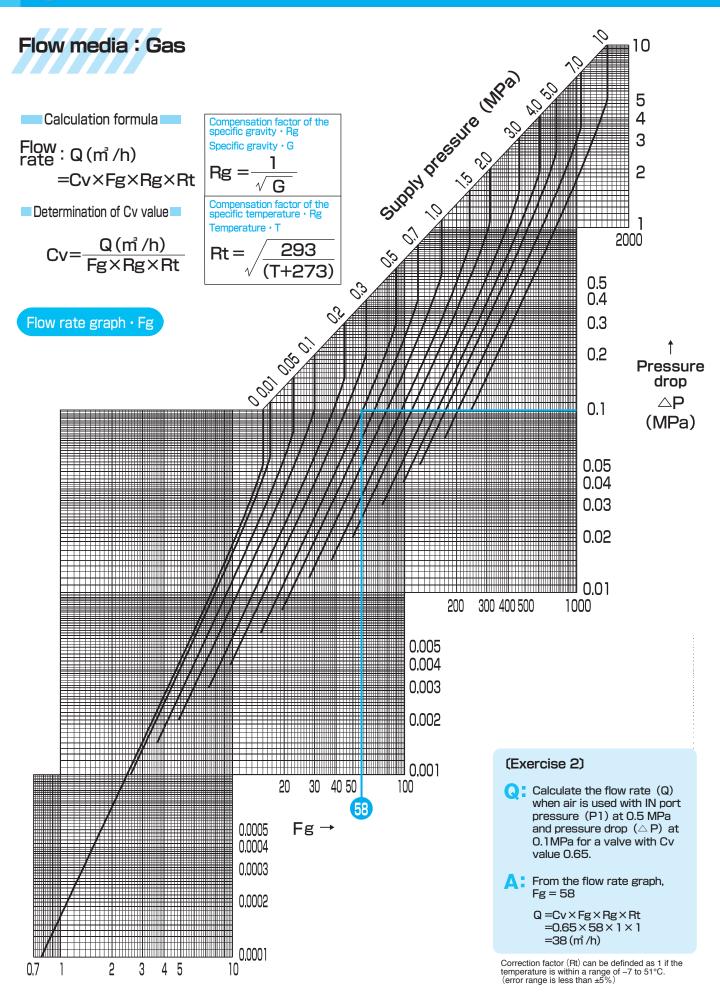

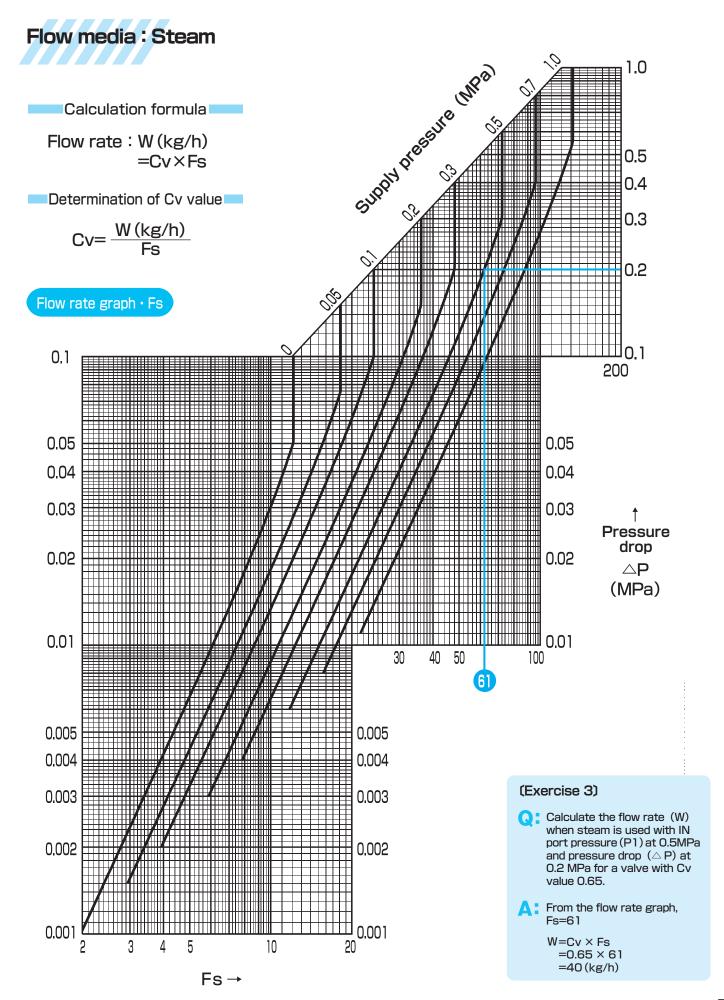


# 6 Electric circuit

## Leadwire type

Housing code: A,P,B,X,W


None option

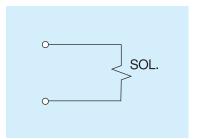

## d2G4、Exd II BT4

Housing code: J,K,C,E


None option

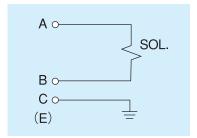


#### With terminal box


Housing code: T,G

None option

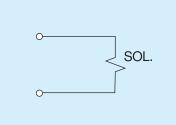

w/ surge absorber

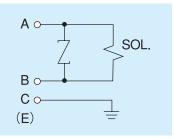


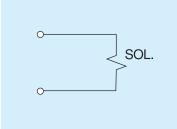


d3aG4

Housing code: H


w/ surge absorber

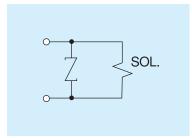

w/ surge absorber

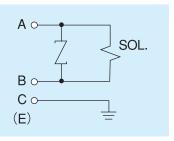


Indicator w/ surge absorber (AC circuit, DC100V, DC120V)

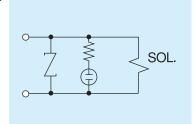


Exd II BT4, Exd II CT

Housing code: S,Y

w/ surge absorber

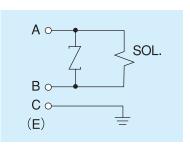

Indicator w/ surge absorber (DC24V)

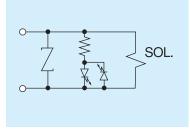

\* DC solenoid valves have no polarity.

# Glossary

#### 1. Orifice size

Internal diameter of main valve seat, expressed in millimeter (mm).

#### 2. Cv value

Volume of water that passes through a valve with a pressure drop of 0.007 MPa (approx. 1psi), expressed in GPM (3.785 L/min ≒ 1


#### 3. Operating pressure differential

#### Maximum operating pressure differential:

Upper limit of pressure differential for a solenoid valve to be operated accurately; or maximum operating pressure at IN port of a solenoid valve.

#### Minimum pressure differential:

Lower limit of pressure differential for a solenoid valve to be operated accurately. For a pilot valve, at least minimum operating pressure described in the catalogue is needed.

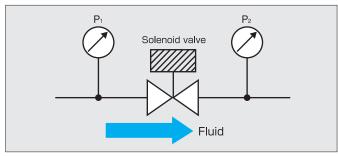

 $\begin{array}{l} P^1 = IN \ port \ pressure \ (primary \ pressure) \\ P^2 = OUT \ port \ pressure \ (secondary \ pressure) \\ \triangle \ P = P^1 \ - P^2 \ (pressure \ drop) \end{array}$ 

#### 4. Consumption power

Consumption power of a solenoid valve is expressed in watt (W). If AC power is used, it is also expressed in volt/ampere (VA) at issuance and retention.

Making current is a momentary current that occurs when AC coil is energized, while holding current is a current returned to normal after excessive making current disappears. Each current value is determined by dividing VA by voltage.

Making current (A) = 
$$\frac{VA \text{ (issuance)}}{\text{voltage (V)}}$$

Holding current (A) = 
$$\frac{VA \text{ (retention)}}{\text{voltage (V)}}$$

For a solenoid valve using DC power, making current does not appear. Therefore rated current is determined by dividing consumption power by voltage.

$$DC(A) = \frac{DC \text{ consumption power (W)}}{\text{voltage (V)}}$$

Refer to the Coil Data for consumption power and apparent power of each valve.

#### 5. Fluid temperature / ambient temperature

Fluid temperature is the temperature of fluid applied to a solenoid valve, while ambient temperature is the temperature surrounding the valve. These temperature values are determined based on the valve component materials, seal/seat materials, allowable temperature limit according to coil insulation class, etc.

Especially coil insulation class is an important factor for determining ambient and fluid temperature.


Max. ambient temperature = (temperature of an insulation class)-(coil temperature rise)

Effect of fluid temperature should also be considered as one of the main factors.

A solenoid valve consists of materials that are sensitive to heat, including rubber/plastic seals or seats.

For MAGFLOW series solenoid valve, data are based on ambient temperature at 50°C for class F and 80°C for class H coils. General temperature range is shown below.

#### Fluid temperature range/ Ambient temperature range

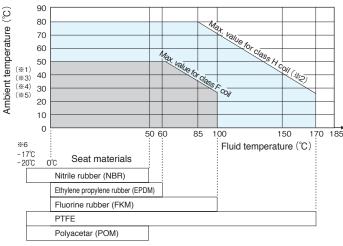

- \*1: For the fluid temperature range and ambient temperature range, the limit of the heat resistance class (H or F) of the coil and the lower value of the seal and sheet material are applied.
- \*2: For DC type, max. ambient temperature should be 50°C and the valve should be used within the temperature range shown in the above graph.
   \*3: Some materials are available for higher temperature depending on the fluid used. Consult us for details.
- \*4: Terminal box with housing (T, G) is made of resin and ambient temperature
- should be max. 50°C \*5: Ambient temperature for YS27 series should be max. 60°C for class H coil.
- \$6: In the case of explosion-proof housing, please refer to next table.
  \$7: See standard specification for min. fluid temperature and ambient temperature.
  \$8: In operating temperatures of 5°C or less, provide adequate measures against freezing.

Refer to the Valve Selection List for maximum fluid temperature based

on the above graph. Please contact us if you wish to use it at a higher temperature.

#### 2-port solenoid valves Explosion-proof


Housing	Coil		Flow path	Ambient temperature	fluid temperature	
	F	Normally closed			55℃	60℃
J,K,H	Г	Normally open			55℃	55℃
0,10,11	Н	Normally closed			60℃	60℃
		Normally open			55℃	55℃
	F	Normally closed			55℃	55℃
C.E		Normally open			40℃	40℃
U,L	Н	Normally closed			60℃	60℃
		Normally open			60℃	60℃
Υ	H Normally closed			60℃	60℃	
Housing	Coil	Flow path	power consumption	Temperature class	Ambient temperature	fluid temperature
		Normally closed DC		T6	35℃	35℃
	Н		AC	T5	50℃	50℃
s				T4		60℃
0				T6	50℃	50℃
			DC	T5	60℃	60℃
				T4	60℃	60℃


#### 3-port solenoid valves Explosion-proof

	· · · · · · · · · · · · · · · · · · ·						
Housing	Coil		Flow path	Ambient temperature	fluid temperature		
J,K,H	F			55℃	60℃		
0,10,11	Н					60℃	
C,E	F					55℃	
U,E	Н					60°C	
Υ	Н				60℃	60℃	
Housing	Coil	Flow path	power	Temperature	Ambient	fluid	
nousing			consumption	class	temperature	temperature	
	I H I			T6	35℃	35℃	
			AC	T5	50℃	50℃	
s		Normally		T4		60℃	
٥		closed		T6	50℃	50℃	
			DC	T5	60℃	60℃	
				T4	60℃	60℃	

#### What's d2G4 / Exd II BT4?

For explosion-proof construction of electric equipment, the construction standards and technical standards, specifying 6 explosion-proof constructions each, are established according to the application, type of explosive gas used, or location of the equipment. Such specifications are expressed in codes such as "d2G4" and "Exd II BT4." Each of the codes has the following meanings.

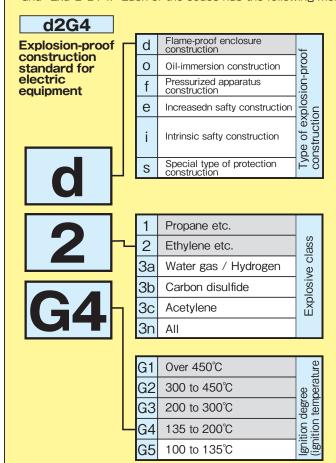

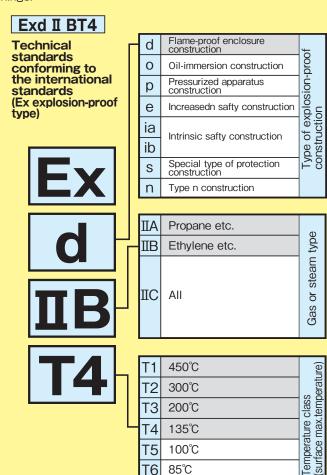

Explosive gas classification according to explosive class and ignition degree (construction standard)

Ace	ylonitrile Ethyl etone acetate	Ethanol	Gasoline	Apotoldobudo	
1 Car mi Eth	monia roluerie rbon Propane onoxide Benzene ane Methanol etic acid Methane	Isopentyl acetate 1-Butanol Butane	Dimethyl ether Hexane	Acetaldehyde Diethyl ether	
2		Ethylene Ethylene oxide			
3 a Wa b c	ter gas Hydrogen	Acetylene ter gas /Hydroger	n/Acetylene/Cart	oon disulfide	Carbon disulfide

Explosive gas classification according to gas or steam type and temperature class (Ex explosion-proof type)

T6

85°C

	Temperature class Gas or steam type	T1	T2	Т3	T4	T5	Т6
	ΠA	Acetone Benzene Ammonia Methane Ethane Acetic acid Ethyl acetate Toluene	1-Butanol Butane Propane Methanol	Hexane	Acetaldehyde Trimethylamine		
	IB	Acrylonitrile Carbon monoxide	Ethanol Ethylene Ethylene oxide	Dimethyl ether	Diethyl ether		
	IIC	Water gas Hydrogen	Acetylene				Carbon disulfide
Note) gray marked are applicable range of Exd II BT4.							

Distributing Agent

Note) gray marked are applicable range of d2G4.

# **KONAN®**

#### KONAN ELECTRIC CO.,LTD.

#### **Tokyo Branch**

#### Osaka Branch

Hankyu Terminal Bldg.1-4, Shibata 1-chome, Kitaku, Osaka 530-0012, Japan Phone:+81-6-6373-6701 Fax:+81-6-6373-6740

Seibu Branch

Momiji Hiroshima Hikarimachi Bldg.12-20, Hikarimachi, 1-chome, Higashiku, Hiroshima,

International Operation Division 4-97, Uedahigashimachi, Nishinomiya, Hyogo, 663-8133, Japan Phone:+81-798-48-5931 Fax:+81-798-40-6659

URL=https://www.konan-em.com/



Tohoku Office Phone:+81-22-215-1195 Hokkaido Office Phone:+81-11-792-7451 Nagoya Office Phone:+81-52-581-6541 Kanazawa Office Phone:+81-76-233-1411

Takamatsu Office Phone:+81-87-835-0411 Hiroshima Office Phone:+81-82-568-0071 Kitakyushu Office Phone:+81-93-541-0281

2015.12

Please note that this catalog is subject to revision without notice