


Solenoid Valve for Pneumatic System Solenoid Valve **SVR Series**


- *Small Body but Secure Large Flow Rate*
- *Valve width .41" (10.5mm)*
- *9 Valve Selections*
- *Intake / Output port size is changeable by Cartridge Fitting*

- *Available from control pressure 0psi (0MPa)*
Usually pilot valves are operated by 30psi (0.2MPa) or more, but SVR Series has an external pilot valve and air. It is possible to get SVR Series operate under 30psi (0.2MPa).

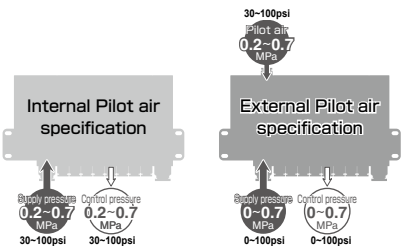


Construction

● **2-Position, 5-Port, Single Solenoid Valve (SVR10S)**

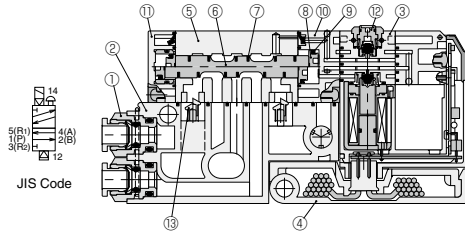

| No. | Part | Material (Treatment) |
|-----|---------------------------|----------------------|
| ① | Fitting Assy | |
| ② | Manifold-block | PBT |
| ③ | Pilot Valve Assy | |
| ④ | Electrical componet Ass'y | |
| ⑤ | Valve Body | Aluminum Alloy |
| ⑥ | Spool | Aluminum Alloy |
| ⑦ | Spool Seal Rubber | NBR |
| ⑧ | Piston | POM |
| ⑨ | Piston Seal Rubber | NBR |
| ⑩ | Intermediate Block | PBT |
| ⑪ | End Block | PBT |
| ⑫ | Manual Button | POM |
| ⑬ | Check Valve Assy | |


● **2-Position, 5-Port, Double Solenoid Valve (SVR10D)**

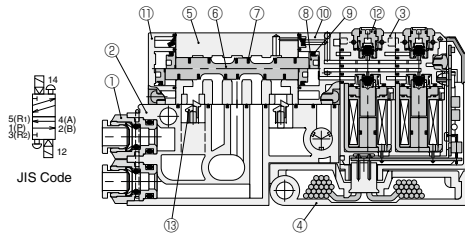


| No. | Part | Material (Treatment) |
|-----|---------------------------|----------------------|
| ① | Fitting Assy | |
| ② | Manifold-block | PBT |
| ③ | Pilot Valve Assy | |
| ④ | Electrical componet Ass'y | |
| ⑤ | Valve Body | Aluminum Alloy |
| ⑥ | Spool | Aluminum Alloy |
| ⑦ | Spool Seal Rubber | NBR |
| ⑧ | Piston | POM |
| ⑨ | Piston Seal Rubber | NBR |
| ⑩ | Intermediate Block | PBT |
| ⑪ | End Block | PBT |
| ⑫ | Manual Button | POM |
| ⑬ | Check Valve Assy | |

● 2-Position, 3-Port, Solenoid Valve


4(A), 2(B), Normally Closed (Twin 3-Way Valve) (SVR10E)

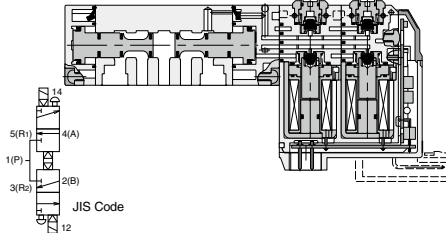


4(A), 2(B), Normally Open (Twin 3-Way Valve) (SVR10F)

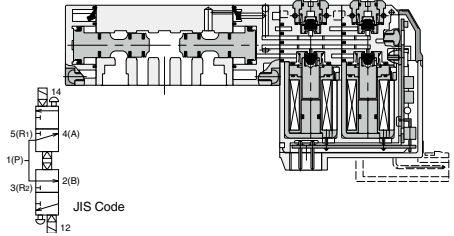

4(A), Normally Closed, 2(B), Normally Open (Twin 3-Way Valve) (SVR10G)

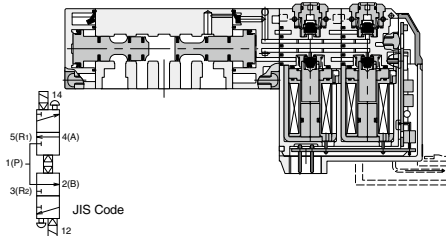


4(A), Normally Open, 2(B), Normally Closed (Twin 3-Way Valve) (SVR10H)

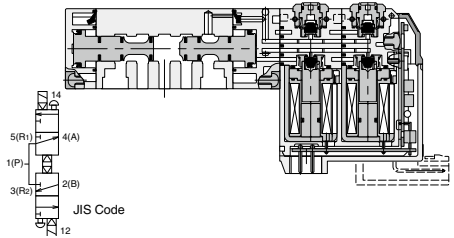


● 3-Position, 5-Port, Double Solenoid Valve


Closed Center (SVR10A)

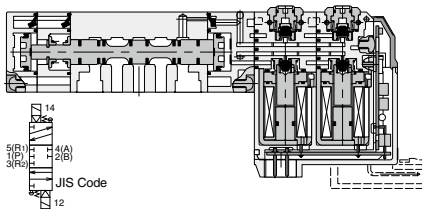


Exhaust Center (SVR10R)

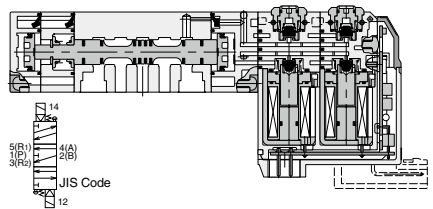

Pressure Center (SVR10P)

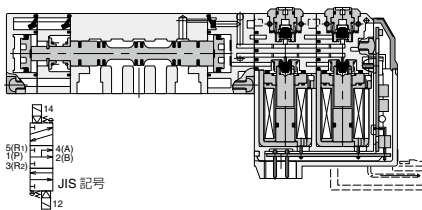

Model Designation (Example)

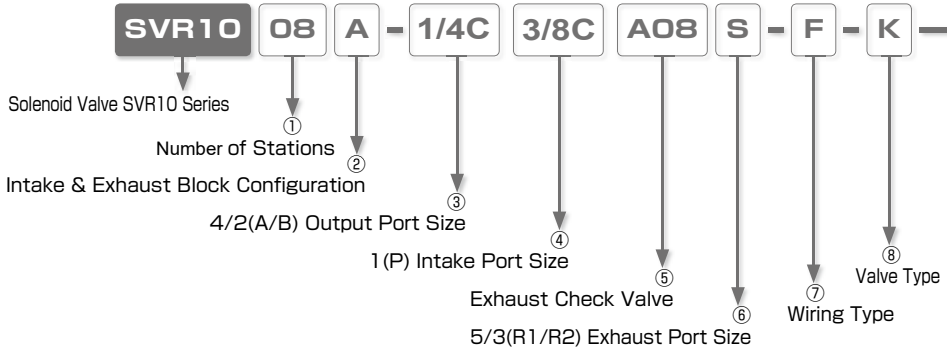


① Number of Stations

| Code | 02 | 03 | 04 | 05 | 06 | 07 | 08 | 09 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 |
|-----------------|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
| No. of stations | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 |

❖ Max. 12 stations for Sub-D/Flat cable connector specifications

② Intake & Exhaust Block Configuration

| Code | A | B |
|---------------|------------|----------|
| Specification | Both Sides | One Side |




③ 4/2(A/B) Output Port Size

| Fitting Type | Push-In Fitting (inch) | | | | | Push-In Fitting (mm) | | | | |
|------------------|--------------------------|------|-------|------|----------|----------------------|----|----|----|-------|
| Code | 1C | 1/8C | 5/32C | 1/4C | 5/16C(※) | 2C | 3C | 4C | 6C | 8C(*) |
| Size (O.D.) | Combination of Port Size | ø1/8 | ø5/32 | ø1/4 | ø5/16 | ø1.8 | ø3 | ø4 | ø6 | ø8 |
| Piping direction | Side | | | | | | | | | |

* Compression Fitting Special for Urethane tube.

④ 1(P) Intake Port Size

| Fitting Type | Push-In Fitting (inch) | | | Push-In Fitting (mm) | | |
|------------------|------------------------|-------|------|----------------------|----|-----|
| Code | 1/4C | 5/16C | 3/8C | 6C | 8C | 0C |
| Size (O.D.) | ø1/4 | ø5/16 | ø3/8 | ø6 | ø8 | ø10 |
| Piping direction | Side | | | | | |



1(P) Intake Port Size

4(A)/2(B) Output Port Size

⑤ Exhaust Check Valve

No Code : Without Check Valve


A□ : With Check Valve

| Code | A01 | A02 | A03 | A04 | A05 | A06 | A07 | A08 | A09 | A10 |
|------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| Qty | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 |
| Code | A11 | A12 | A13 | A14 | A15 | A16 | A17 | A18 | A19 | A20 |
| Qty | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 |


* This option is not selectable for purchasing a Manifold-block only. Select Exhaust Check Valve Assy (SVR-EXV) for a Manifold-block separately.

⑥ 5/3(R1/R2) Exhaust Port Size

| Fitting Type | Push-In Fitting (mm) | | | Push-In Fitting (inch) | | | Silencer (Open-air Exhaust) |
|--------------|----------------------|-------|------|------------------------|----|-----|-----------------------------|
| Code | 1/4 | 5/16 | 3/8 | 6 | 8 | 0 | S |
| Size (O.D.) | ø1/4 | ø5/16 | ø3/8 | ø6 | ø8 | ø10 | - |




5/3(R1/R2) Exhaust Port

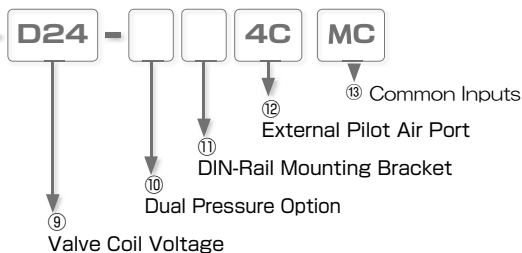

⑦ Wiring Type

| Code | Wiring Type |
|------|-------------------------------------|
| D | Sub-D connector |
| S | Individual Plug-in Connector |
| F | Flat Cable (Ribbon Cable) Connector |



⑧ Valve Type

| Code | # of Port | # of Position | Valve Type |
|------|-----------|---------------|---|
| S | 5 | 2 | Single Solenoid |
| D | 5 | 2 | Double Solenoid |
| E | 3 | 2 | 4(A), 2(B). Normally Closed (Twin 3-Way Valve) |
| F | 3 | 2 | 4(A), 2(B). Normally Open (Twin 3-Way Valve) |
| G | 3 | 2 | 4(A). Normally Closed, 2(B). Normally Open (Twin 3-Way Valve) |
| H | 3 | 2 | 4(A). Normally Open, 2(B). Normally Closed (Twin 3-Way Valve) |

| Code | # of Port | # of Position | Valve Type |
|------|-----------|---------------|-----------------------|
| A | 5 | 3 | Closed Center |
| R | 5 | 3 | Exhaust Center |
| P | 5 | 3 | Pressure Center |
| K | - | - | Combination of Valves |
| B | - | - | Block Plate |
| M | - | - | Manifold-block Only |

⑨ Valve Coil Voltage

| Code | D24 | A100 |
|--------------|-------|--------|
| Coil Voltage | DC24V | AC100V |

⑩ Dual Pressure Option

| Code | No Code | P |
|-----------------|-----------------|---------------|
| Supply Pressure | Single Pressure | Dual Pressure |

* Please specify where on the manifold to mount using the order form. (Refer to page 100).

For the manifold type with Dual Pressure, Intake & Exhaust Block "A" (Intake & Exhaust Block on Both Sides) is only selectable.


⑪ DIN-Rail Mounting Bracket

| Code | No Code | D |
|---------------|-----------------|------------------|
| Bracket Spec. | Without Bracket | With Bracket (*) |

* 1 set (2pcs) is equipped.

⑫ External Pilot Air

| Code | Spec. | Fitting Size & Type |
|---------|--------------------|-------------------------------|
| No Code | Internal Pilot Air | - |
| 4C | External Pilot Air | 5/32" or ø4mm · Straight Type |
| 6C | External Pilot Air | ø6mm · Straight Type |
| 4L | External Pilot Air | 5/32" or ø4mm · Elbow Type |
| 6L | External Pilot Air | ø6mm · Elbow Type |




⑬ Common Polarity Specification

No code: Positive common

MC: Negative common (Make to order production)

❖ Negative common, MC is selectable when coil voltage is 24VDC

Model Designation of Mounting Valve (Example)

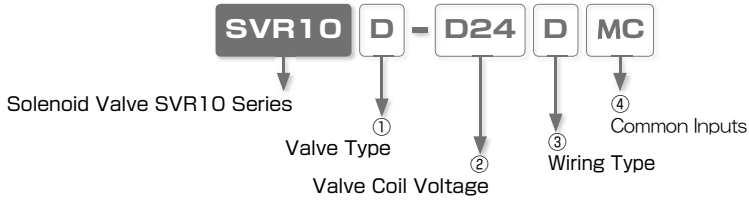

① Valve Type

| Code | # of Port | # of Position | Valve Type |
|------|-----------|---------------|---|
| S | 5 | 2 | Single Solenoid |
| D | 5 | 2 | Double Solenoid |
| E | 3 | 2 | 4(A), 2(B). Normally Closed (Twin 3-Way Valve) |
| F | 3 | 2 | 4(A), 2(B). Normally Open (Twin 3-Way Valve) |
| G | 3 | 2 | 4(A). Normally Closed, 2(B). Normally Open (Twin 3-Way Valve) |
| H | 3 | 2 | 4(A). Normally Open, 2(B). Normally Closed (Twin 3-Way Valve) |

| Code | # of Port | # of Position | Valve Type |
|------|-----------|---------------|-----------------|
| A | 5 | 3 | Closed Center |
| R | 5 | 3 | Exhaust Center |
| P | 5 | 3 | Pressure Center |
| B(※) | - | - | Block Plate |

※ Leave ② and ③ blank, when the valve type is "B".

② Valve Coil Voltage

| Code | D24 | A100 |
|--------------|-------|--------|
| Coil Voltage | DC24V | AC100V |

③ Wiring Type

| Code | Wiring Type |
|------|---|
| D | Concentrated wiring (Sub-D connector, Flat cable connector) |
| S | Individual Plug-in Connector |


④ Common Polarity Specification

No code : Positive common

MC : Negative common

❖ Negative common, MC is selectable when coil voltage is 24VDC


Model Code of Exhaust Check Valve

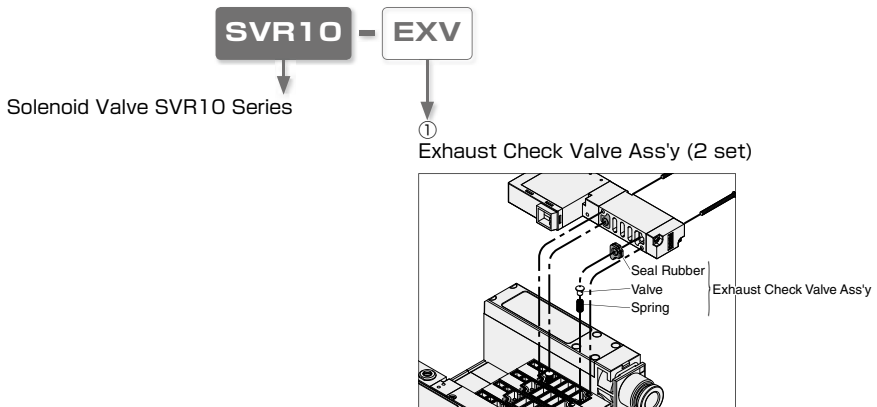

Ordering Example

| Model Series | Number of Stations ① | IN & EX Block Config. ② | Output ③ | Intake ④ | Check Valve ⑤ | Exhaust ⑥ | Wiring ⑦ | Valve Type ⑧ | Coil Vol. ⑨ | Dual Pressure ⑩ | DIN Rail ⑪ | External Pilot Air Port ⑫ | Common Inputs ⑬ |
|--------------|-------------------------|----------------------------|-------------|-------------|------------------|--------------|-------------|-----------------|----------------|--------------------|---------------|------------------------------|--------------------|
| SVR10 | 08 | A | 1C | 0C | A03 | S | F | K | D24 | P | D | 4C | MC |

| Station No. | Output | Check Valve | Valve Type | Dual Pressure |
|-------------|--------|-------------|------------|---------------|
| St. 1 | 1/4 | | SVR10 D | ○ |
| St. 2 | 6 | | SVR10 D | |
| St. 3 | 4 | A | SVR10 D | |
| St. 4 | 1/4 | A | SVR10 D | |
| St. 5 | 4 | A | SVR10 D | |
| St. 6 | 1/8 | | SVR10 S | |
| St. 7 | 3 | | SVR10 S | |
| St. 8 | 3 | | SVR10 B | |

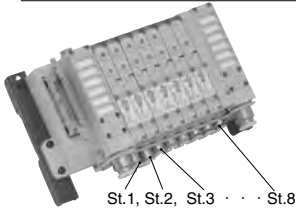

* Station Number is counted St.1, St.2, St.3 . . . St.8 from left side with the tube fittings at the front as shown in the figure.

Order Form: SVR 10 Series

From : _____

Order # : _____ Date : _____

Requested EX-W PISCO Date : _____ Quantity : _____

| Model Series | Number of Stations ① | Intake / Exhaust Port ② | Output Port Size ③ | Intake Port Size ④ | Exhaust Check Valve ⑤ | Exhaust Port Size ⑥ | Wiring Type ⑦ | Valve Type ⑧ | Coil Voltage ⑨ | Dual Pressure Option ⑩ | DIN Rail Bracket ⑪ | External Pilot Air Port ⑫ | Common Inputs ⑬ |
|--------------|-------------------------|----------------------------|-----------------------|-----------------------|--------------------------|------------------------|------------------|-----------------|-------------------|---------------------------|-----------------------|------------------------------|--------------------|
| SVR10 | | | | | | | | | | | | | |

| Station Number | Output | Check Valve | Valve Type | Dual Pressure |
|----------------|--------|-------------|------------|---------------|
| St. 1 | | | SVR10 | ○ |
| St. 2 | | | SVR10 | |
| St. 3 | | | SVR10 | |
| St. 4 | | | SVR10 | |
| St. 5 | | | SVR10 | |
| St. 6 | | | SVR10 | |
| St. 7 | | | SVR10 | |
| St. 8 | | | SVR10 | |
| St. 9 | | | SVR10 | |
| St. 10 | | | SVR10 | |
| St. 11 | | | SVR10 | |
| St. 12 | | | SVR10 | |
| St. 13 | | | SVR10 | |
| St. 14 | | | SVR10 | |
| St. 15 | | | SVR10 | |
| St. 16 | | | SVR10 | |
| St. 17 | | | SVR10 | |
| St. 18 | | | SVR10 | |
| St. 19 | | | SVR10 | |
| St. 20 | | | SVR10 | |

Specifications

Manifold

| | | | | | | |
|-------------------------------------|--|---|---------------------------|-------------------------------|-------------------------------|------------------------------|
| Item | | Model | | SVR10□□-□-D | SVR10□□-□-F | SVR10□□-□-S |
| | | | | Sub-D connector | Flat (Ribbon) Cable Connector | Individual Plug-in Connector |
| Fluid Medium | | Air | | | | |
| Operating Pressure Range | | 30~100psi (0.2-0.7MPa) (0 to 100psi ((0 to 0.7MPa with External Pilot Air Port)) Pressure range of External Pilot Air Port: 30 to 100psi (0.2 to 0.7MPa) | | | | |
| Pressure Proof | | 150psi (1.05MPa) | | | | |
| Operating Temp. Range | | 40~120°F (5~50°C) | | | | |
| Installing Direction | | No Restriction (*2) | | | | |
| Vibration Resistance | | 49m/s ² | | | | |
| Impact Resistance | | 150m/s ² | | | | |
| Max. Mountable Number of Valve Unit | | Max. 12 units | | | Max. 20 units | |
| Wiring Type | | Type | Sub-D connector | Flat (Ribbon) Cable Connector | Individual Plug-in | |
| | | Number of Pins | 2 to 4 stations: 9 pins | 2 to 4 stations: 10 pins | 3 pins | |
| | | | 5 to 12 stations: 25 pins | 5 to 9 stations: 20 pins | | |
| | | | | 10 to 12 stations: 26 pins | | |
| Silencer | | Standard equipment only for open-air exhaust type with (5(R1) and 3(R2) Port). | | | | |

*1. When twin 3-way valve is mounted: 30 to 100psi (0.2 to 0.7Mpa)

*2. Refer to "Warning" in "Detailed Safety Instructions".

Main Valve

| | | | | | | | |
|--------------------------|--|---|--|---|------------|----------------------------|--------------------------------------|
| Item | | Model | | SVR10S | SVR10D | SVR10A SVR10R SVR10P | SVR10E SVR10F SVR10G SVR10H |
| | | | | Indirectly activated pneumatic operation by pilot valve | | | |
| Valve Type | | Indirectly activated pneumatic operation by pilot valve | | | | | |
| Valve Structure | | Spool Valve (Elastic Seal) | | | | | |
| Number of Positions | | 2-Position | | | 3-Position | | 2-Position |
| Number of Ports | | 5-Port | | | | | 3-Port × 2 |
| Valve Function | | Single | | Double | | | Single × 2 |
| Number of pilot points | | 1 | | 2 | | | |
| Response Time (*1) | | → ON | | 13msec | 10msec | 10msec (*2) | 12msec |
| | | → OFF | | 8msec | — | 15msec (*2) | 11msec |
| Max. Operation Cycle | | 5Hz | | | | | |
| Min. Excitation Time | | — | | 50msec | | — | — |
| Vibration Resistance | | 49m/s ² | | | | | |
| Impact Resistance | | 150m/s ² | | | | | |
| Lubrication | | Not Required | | | | | |
| Operating Pressure Range | | 0.2 to 0.7MPa (0 to 0.7MPa by External Pilot Air Port) | | | | | |

*1.The value at supply air: 72.5psi (0.5MPa) with DC24V

*2. Response Time for 3-Position represents the value from Neutral Position to ON and from ON to Neutral Position (OFF).

■ Pilot Valve

| Item | Rated Voltage | DC24V | AC100V |
|------------------------------|--------------------------------|---------------|--------|
| | Operating System | Direct Acting | |
| Valve Structure | Elastic Seal, Poppet Valve | | |
| Tolerance of Voltage Range | DC21.6 ~ 26.4V | AC90 ~ 110V | |
| Power Consumption (with LED) | 0.7W | 1VA | |
| Surge Protection Circuit | Surge Absorber | Bridge Diode | |
| Manual Operation | Push-Lock Button | | |
| Max. Operating Pressure | 100psi (0.7MPa) | | |
| Operation Displaying LED | LED (4(A) : Green, 2(B) : Red) | | |

■ Flow Characteristics

| Model | | SVR10S-□ SVR10D-□ | | SVR10A-□ | | SVR10R-□ | | SVR10P-□ | | SVR10E-□ SVR10G-□(NC) SVR10H-□(NC) | | SVR10F-□ SVR10G-□(NO) SVR10H-□(NO) | |
|--|------------------|----------------------|------|----------|------|----------|------|----------|------|--|------|--|------|
| | | *1 | Cv | *1 | Cv | *1 | Cv | *1 | Cv | *1 | Cv | *1 | Cv |
| 1(P) → 4(A), 2(B) | Output Port Size | | | | | | | | | | | | |
| | ø5/16, ø8mm (*2) | 6.0 | 0.33 | 4.7 | 0.25 | 4.7 | 0.25 | 6.8 | 0.37 | 3.5 | 0.19 | 5.9 | 0.32 |
| | ø1/4, ø6mm | 6.0 | 0.33 | 4.7 | 0.25 | 4.7 | 0.25 | 6.8 | 0.37 | 3.5 | 0.19 | 5.9 | 0.32 |
| | ø5/32, ø4mm | 4.0 | 0.22 | 3.8 | 0.21 | 3.8 | 0.21 | 4.3 | 0.23 | 3.3 | 0.18 | 4.0 | 0.22 |
| | ø1/8, ø3mm | 2.6 | 0.14 | 2.6 | 0.14 | 2.6 | 0.14 | 2.6 | 0.14 | 2.6 | 0.14 | 2.6 | 0.14 |
| | ø1.8mm | 1.1 | 0.06 | 1.1 | 0.06 | 1.1 | 0.06 | 1.1 | 0.06 | 1.1 | 0.06 | 1.1 | 0.06 |
| 4(A), 2(B) → 5(R1), 3(R2) | Output Port Size | | | | | | | | | | | | |
| | ø5/16, ø8mm (*2) | 5.6 | 0.30 | 3.6 | 0.20 | 6.7 | 0.36 | 3.6 | 0.20 | 5.1 | 0.28 | 5.1 | 0.28 |
| Without Exhaust Check Valve (*3) | Output Port Size | | | | | | | | | | | | |
| | ø5/32, ø4mm | 3.6 | 0.20 | 3.3 | 0.18 | 4.3 | 0.23 | 3.3 | 0.18 | 4.0 | 0.22 | 4.0 | 0.22 |
| | ø1/8, ø3mm | 2.1 | 0.11 | 2.1 | 0.11 | 2.1 | 0.11 | 2.1 | 0.11 | 2.1 | 0.11 | 2.1 | 0.11 |
| | ø1.8mm | 0.5 | 0.03 | 0.5 | 0.03 | 0.5 | 0.03 | 0.5 | 0.03 | 0.5 | 0.03 | 0.5 | 0.03 |
| 4(A), 2(B) → 5(R1), 3(R2) | Output Port Size | | | | | | | | | | | | |
| | ø5/16, ø8mm (*2) | 3.6 | 0.20 | 3.1 | 0.17 | 3.6 | 0.20 | 3.1 | 0.17 | 3.5 | 0.19 | 3.5 | 0.19 |
| With Exhaust Check Valve (*3) | Output Port Size | | | | | | | | | | | | |
| | ø5/32, ø4mm | 2.9 | 0.16 | 2.9 | 0.16 | 3.4 | 0.18 | 2.9 | 0.16 | 3.1 | 0.17 | 3.1 | 0.17 |
| | ø1/8, ø3mm | 2.1 | 0.11 | 2.1 | 0.11 | 2.1 | 0.11 | 2.1 | 0.11 | 2.1 | 0.11 | 2.1 | 0.11 |
| | ø1.8mm | 0.5 | 0.03 | 0.5 | 0.03 | 0.5 | 0.03 | 0.5 | 0.03 | 0.5 | 0.03 | 0.5 | 0.03 |

*1. Effective Sectional Area: S(mm²)

*2. The value of a compression fitting

*3. The value at the spec of 5/3(R1,R2) and Port: ø10mm Fitting

| Intake Port Size (mm) | Piping Spec. | Effective Sectional Area S [mm ²] | Sonic Conductance C [dm ³ /(S·bar)] | Cv |
|-----------------------|---|---|--|------|
| ø1/4, ø6 | A (Intake & Exhaust Port on Both Sides) | 18.0 | 3.6 | 0.98 |
| | B (Intake & Exhaust Block on One Side) | 9.0 | 1.8 | 0.49 |
| ø5/16, ø8 | A (Intake & Exhaust Port on Both Sides) | 36.6 | 7.3 | 1.98 |
| | B (Intake & Exhaust Block on One Side) | 18.3 | 3.7 | 0.99 |
| ø3/8, ø10 | A (Intake & Exhaust Port on Both Sides) | 45.0 | 9.0 | 2.44 |
| | B (Intake & Exhaust Block on One Side) | 22.5 | 4.5 | 1.22 |

Selecting Criteria of Intake Port Size

- ① Refer to the table of Valve Type, Output Port Size and effective sectional area of simultaneous operated valve units. Sum up all effective sectional area.
- ② Select a suitable Intake Port Size so that its effective sectional area should be larger than the sum of the effective sectional area.
 (Note) This table shows a reference value. Make a selection securing safety under the actual operation.

Example)

- Manifold Type: 8 stations, Valve Type: S, Output Port Size: ø4mm, Max. 5 stations are operated at the same time.
 →→ The sum of effective sectional area: 4.0mm² x 5 stations =20mm²
 In this case, one of the following Intake Port specs. shall be selected. Intake Port ø8mm / 36.6mm² on both sides , or Intake Port of ø10mm / 22.5mm² on one side or IntakePort of ø10mm / 45.0mm² on both sides.

■ Cylinder Speed Table


| Cylinder Speed (mm/s) | Cylinder Tube bore (mm) | | | | | | | | | |
|-----------------------|-------------------------|-----|-----|-----|-----|-----|-----|------|------|------|
| | ø20 | ø25 | ø32 | ø40 | ø50 | ø63 | ø80 | ø100 | ø125 | ø140 |
| 100 | | | | | | | | | | |
| 200 | | | | | | | | | | |
| 300 | | | | | | | | | | |
| 400 | | | | | | | | | | |
| 500 | | | | | | | | | | |
| 600 | | | | | | | | | | |
| 700 | | | | | | | | | | |
| 800 | | | | | | | | | | |

- Note) ● The cylinder average speed is referential at 72.5psi (0.5MPa) of pressure, 30% of load factor and 1m of tube length.
 ● The cylinder speed can vary according to the configuration of piping and fittings.
 ● The data in the above table represents the value when ø6mm Push-In Fitting is used on 4(A) and 2(B) ports of SVR10D.


Electric Circuit (DC24V)

● Sub-D connector


9 pins



25 pins

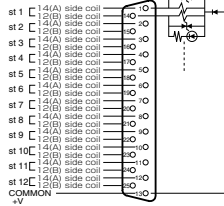


● Individual Plug-in Connector



Note) The color in parenthesis is lead wire color.


● Flat (Ribbon) Cable Connector

10 pins

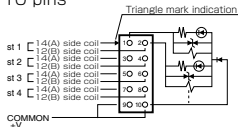


Note) COMMON(+V) pins No.9 and 10 are short-circuited inside.

20 pins

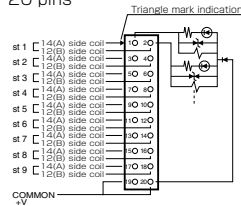

Note) COMMON(+V) pins No.19 and 20 are short-circuited inside.

26 pins

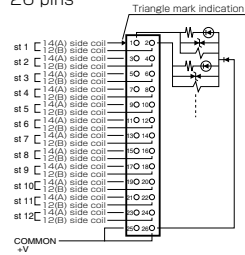


Note) COMMON(+V) pins No.25 and 26 are short-circuited inside.


Electric Circuit (AC100V)

● Sub-D connector

9 pins




25 pins

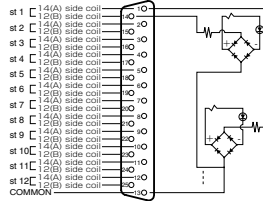


● Individual Plug-in Connector

Single Solenoid

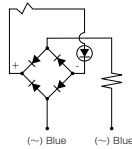


Double Solenoid

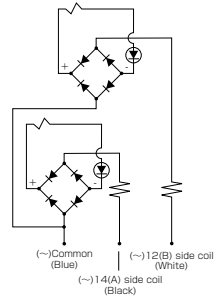


● Flat (Ribbon) Cable Connector

10 pins

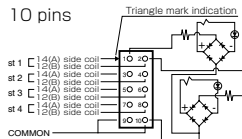


Note) COMMON(+V) pins No.9 and 10 short-circuited inside.

20 pins

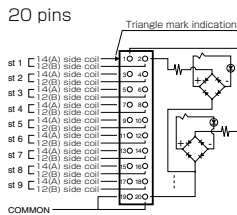

Note) COMMON(+V) pins No.19 and 20 short-circuited inside.

26 pins

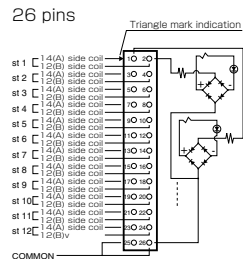

Note) COMMON(+V) pins No.25 and 26 short-circuited inside.

Weight List

| Valve Type | Weight (g) |
|------------|------------|
| SVR10S | 29.7 |
| SVR10D | 37.3 |
| SVR10E | 37.7 |
| SVR10F | 37.7 |
| SVR10G | 37.7 |
| SVR10H | 37.7 |
| SVR10A | 39.4 |
| SVR10R | 39.4 |
| SVR10P | 39.4 |
| SVR10B | 16.3 |

| Manifold Block / Station | Weight (g) |
|---------------------------|------------|
| Individual Connector Type | 15.2 |
| Concentrated wiring Type | 17 |

| Manifold Block / Station for Dual Pressure Type | Weight (g) |
|---|------------|
| Individual Connector Type | 15.4 |
| Concentrated wiring Type | 17.1 |

| Exhaust Check Valve Ass'y | Weight (g) |
|---------------------------|------------|
| For one Station | 0.4 |

| Connector cable (Individual Plug-in Connector Type) | Weight (g) |
|--|------------|
| 2P (Valve Type: S) | 3 |
| 3P (Valve Type: D, E, F, G, H, A, R and P) | 4.5 |

| Manifold Type | Exhaust Type | Wiring | Weight (g) |
|------------------|------------------|------------------------------|------------|
| One Side Block | Tube Exhaust | Individual Connector | 78.6 |
| One Side Block | Tube Exhaust | 9 Pins Sub-D connector | 101.9 |
| One Side Block | Tube Exhaust | 25 Pins Sub-D connector | 105.9 |
| One Side Block | Tube Exhaust | 10 Pins Flat Cable Connector | 101.1 |
| One Side Block | Tube Exhaust | 20 Pins Flat Cable Connector | 102.4 |
| One Side Block | Tube Exhaust | 26 Pins Flat Cable Connector | 102.6 |
| One Side Block | Open-air Exhaust | Individual Connector | 82 |
| One Side Block | Open-air Exhaust | 9 Pins Sub-D connector | 105.3 |
| One Side Block | Open-air Exhaust | 25 Pins Sub-D connector | 109.3 |
| One Side Block | Open-air Exhaust | 10 Pins Flat Cable Connector | 104.5 |
| One Side Block | Open-air Exhaust | 20 Pins Flat Cable Connector | 105.8 |
| One Side Block | Open-air Exhaust | 26 Pins Flat Cable Connector | 106 |
| Both Sides Block | Tube Exhaust | Individual Connector | 109.8 |
| Both Sides Block | Tube Exhaust | 9 Pins Sub-D connector | 133.7 |
| Both Sides Block | Tube Exhaust | 25 Pins Sub-D connector | 137.7 |
| Both Sides Block | Tube Exhaust | 10 Pins Flat Cable Connector | 132.9 |
| Both Sides Block | Tube Exhaust | 20 Pins Flat Cable Connector | 134.2 |
| Both Sides Block | Tube Exhaust | 26 Pins Flat Cable Connector | 134.4 |
| Both Sides Block | Open-air Exhaust | Individual Connector | 116.5 |
| Both Sides Block | Open-air Exhaust | 9 Pins Sub-D connector | 140.5 |
| Both Sides Block | Open-air Exhaust | 25 Pins Sub-D connector | 144.5 |
| Both Sides Block | Open-air Exhaust | 10 Pins Flat Cable Connector | 139.6 |
| Both Sides Block | Open-air Exhaust | 20 Pins Flat Cable Connector | 141 |
| Both Sides Block | Open-air Exhaust | 26 Pins Flat Cable Connector | 141.1 |


| Cartridge Fitting | | Weight (g) |
|-------------------|---------------------------------------|------------|
| CJC09-180 | Output Port | 4.3 |
| CJC09-03 | Output Port | 3.7 |
| CJC09-04A | Output Port / External Pilot Air Port | 3.5 |
| CJC09-06A | Output Port / External Pilot Air Port | 3.5 |
| CJB09-08 | Output Port | 9 |
| CJL09-04 | External Pilot Air Port | 4.7 |
| CJL09-06 | External Pilot Air Port | 5.5 |
| CJP09 | External Pilot Air Port (Plug) | 1.3 |
| CJC14-06 | Intake Port / Exhaust Port | 11.5 |
| CJC14-08 | Intake Port / Exhaust Port | 10 |
| CJC14-10 | Intake Port / Exhaust Port | 13 |

Use the following formula to calculate the weight of SVR10.


$$(\text{Station} \times \text{Qty}) + (\text{Manifold Type}) + (\text{Cartridge Fitting} \times \text{Qty}) + (\text{Connector cable} \times \text{Qty}) + (\text{Exhaust Check Valve} \times \text{Qty}) + (\text{Valve Type} \times \text{Qty})$$

Flow Characteristics


SVR10S & D Output Port Size $\phi 3\text{mm}$ (1(P) \rightarrow 2(B))

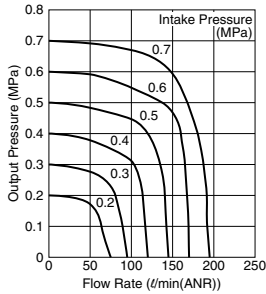

SVR10S & D Output Port Size $\phi 4\text{mm}$ (1(P) \rightarrow 2(B))

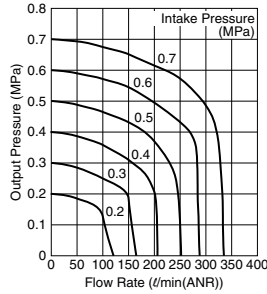

SVR10S & D Output Port Size $\phi 6\text{mm}$ (1(P) \rightarrow 2(B))

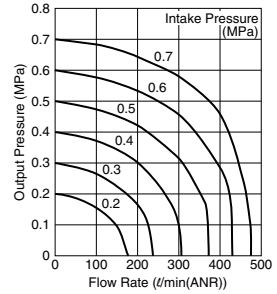

Standard Size List

| Type | Refer to the pages below | Port | Fitting Type | Tube O.D. | Type | Refer to the pages below | Port | Fitting Type | Tube O.D. | | | | |
|--|---|-----------------------------|------------------------------|---|--|---|-----------------------------|-----------------|------------------------------|---|------------------------------|---|---------------------|
| SVR IN. & EX. Block on Both Sides Tube Exhaust | Sub-D connector | Output port 4(A) 2(B) | Push-In Fitting | $\phi 1/8$ | SVR IN. & EX. Block on One Side Tube Exhaust | Sub-D connector | Output port 4(A) 2(B) | Push-In Fitting | $\phi 1/8$ | | | | |
| | | | | $\phi 5/32$ | | | | | $\phi 5/32$ | | | | |
| | Flat Cable Connector | | | Individual Plug-in Connector | | Compression Fitting for Polyurethane Tube | | | $\phi 1/4$ | Flat Cable Connector | Individual Plug-in Connector | Compression Fitting for Polyurethane Tube | $\phi 1/4$ |
| | | | | | | | | | $\phi 1.8\text{mm}$ | | | | $\phi 1.8\text{mm}$ |
| | Individual Plug-in Connector | | | Compression Fitting for Polyurethane Tube | | $\phi 3\text{mm}$ | | | Individual Plug-in Connector | Compression Fitting for Polyurethane Tube | $\phi 3\text{mm}$ | | |
| | | | | | | $\phi 4\text{mm}$ | | | | | $\phi 4\text{mm}$ | | |
| | Individual Plug-in Connector | | | Compression Fitting for Polyurethane Tube | | $\phi 6$ | | | Individual Plug-in Connector | Compression Fitting for Polyurethane Tube | $\phi 6$ | | |
| | | | | | | $\phi 8\text{mm}$ | | | | | $\phi 8\text{mm}$ | | |
| | Individual Plug-in Connector | | | Compression Fitting for Polyurethane Tube | | $\phi 8\text{mm}$ | | | Individual Plug-in Connector | Compression Fitting for Polyurethane Tube | $\phi 8\text{mm}$ | | |
| | | | | | | $\phi 10\text{mm}$ | | | | | $\phi 10\text{mm}$ | | |
| Individual Plug-in Connector | Compression Fitting for Polyurethane Tube | $\phi 10\text{mm}$ | Individual Plug-in Connector | Compression Fitting for Polyurethane Tube | $\phi 10\text{mm}$ | | | | | | | | |
| | | $\phi 12$ | | | $\phi 12$ | | | | | | | | |
| Individual Plug-in Connector | Compression Fitting for Polyurethane Tube | $\phi 14$ | Individual Plug-in Connector | Compression Fitting for Polyurethane Tube | $\phi 14$ | | | | | | | | |
| | | $\phi 14$ | | | $\phi 14$ | | | | | | | | |


| Type | Refer to the pages below | Port | Fitting Type | Tube O.D. | Type | Refer to the pages below | Port | Fitting Type | Tube O.D. | | | | |
|--|---|-----------------------------|------------------------------|---|--|---|-----------------------------|-----------------|------------------------------|---|------------------------------|---|---------------------|
| SVR IN. & EX. Block on Both Sides Open-air Exhaust | Sub-D connector | Output port 4(A) 2(B) | Push-In Fitting | $\phi 1/8$ | SVR IN. & EX. Block on One Side Open-air Exhaust | Sub-D connector | Output port 4(A) 2(B) | Push-In Fitting | $\phi 1/8$ | | | | |
| | | | | $\phi 5/32$ | | | | | $\phi 5/32$ | | | | |
| | Flat Cable Connector | | | Individual Plug-in Connector | | Compression Fitting for Polyurethane Tube | | | $\phi 1/4$ | Flat Cable Connector | Individual Plug-in Connector | Compression Fitting for Polyurethane Tube | $\phi 1/4$ |
| | | | | | | | | | $\phi 1.8\text{mm}$ | | | | $\phi 1.8\text{mm}$ |
| | Individual Plug-in Connector | | | Compression Fitting for Polyurethane Tube | | $\phi 3\text{mm}$ | | | Individual Plug-in Connector | Compression Fitting for Polyurethane Tube | $\phi 3\text{mm}$ | | |
| | | | | | | $\phi 4\text{mm}$ | | | | | $\phi 4\text{mm}$ | | |
| | Individual Plug-in Connector | | | Compression Fitting for Polyurethane Tube | | $\phi 6$ | | | Individual Plug-in Connector | Compression Fitting for Polyurethane Tube | $\phi 6$ | | |
| | | | | | | $\phi 8\text{mm}$ | | | | | $\phi 8\text{mm}$ | | |
| | Individual Plug-in Connector | | | Compression Fitting for Polyurethane Tube | | $\phi 8\text{mm}$ | | | Individual Plug-in Connector | Compression Fitting for Polyurethane Tube | $\phi 8\text{mm}$ | | |
| | | | | | | $\phi 10\text{mm}$ | | | | | $\phi 10\text{mm}$ | | |
| Individual Plug-in Connector | Compression Fitting for Polyurethane Tube | $\phi 10\text{mm}$ | Individual Plug-in Connector | Compression Fitting for Polyurethane Tube | $\phi 10\text{mm}$ | | | | | | | | |
| | | $\phi 12$ | | | $\phi 12$ | | | | | | | | |
| Individual Plug-in Connector | Compression Fitting for Polyurethane Tube | $\phi 14$ | Individual Plug-in Connector | Compression Fitting for Polyurethane Tube | $\phi 14$ | | | | | | | | |
| | | $\phi 14$ | | | $\phi 14$ | | | | | | | | |

SVR 10 Intake & Exhaust Block on Both Sides, Tube Exhaust Sub-D connector

Unit : mm

Model Code


SVR10 □ A - □ □ □ □ - D - □ - □ - □ □ □

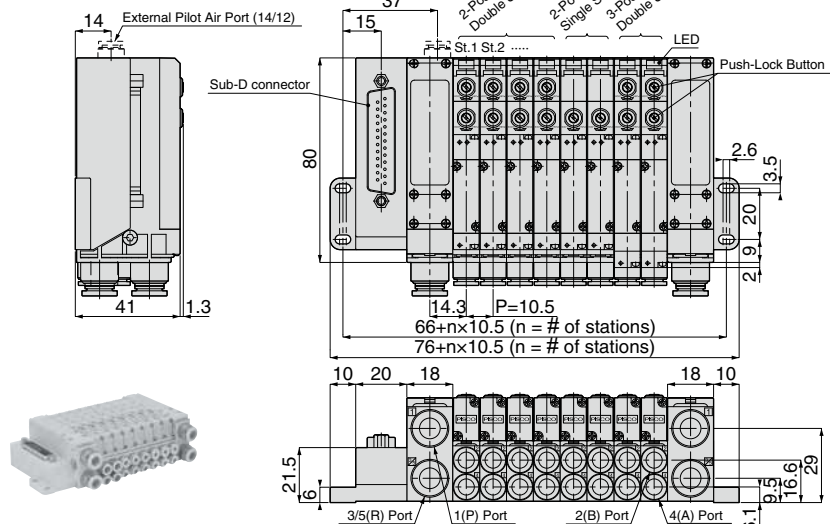

SVR 10 Intake & Exhaust Block: One Side, Tube Exhaust Sub-D connector

Model Code

SVR10 □ B - □ □ □ □ - D - □ - □ - □ □ □

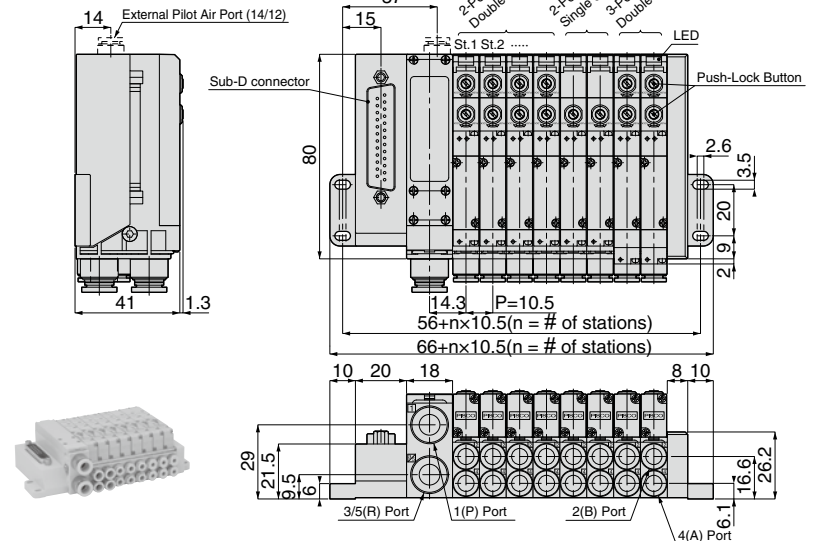

SOLENOID VALVE Series

Solenoid Valve SVR Series





Intake & Exhaust Block: Both Sides, Open-air Exhaust Sub-D connector

Unit : mm

Model Code




SVR10□A-□□□S-D-□-□-□□□

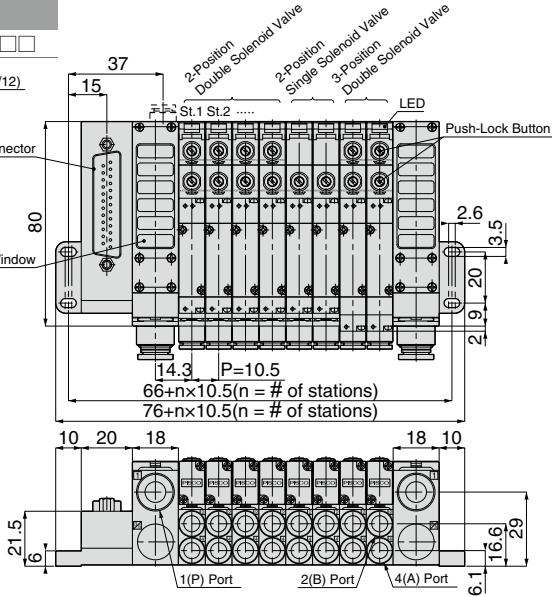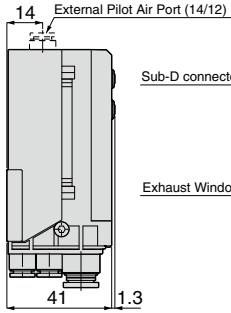

Intake & Exhaust Block: One Side, Open-air Exhaust Sub-D connector

Model Code

SVR10□B-□□□S-D-□-□-□□□

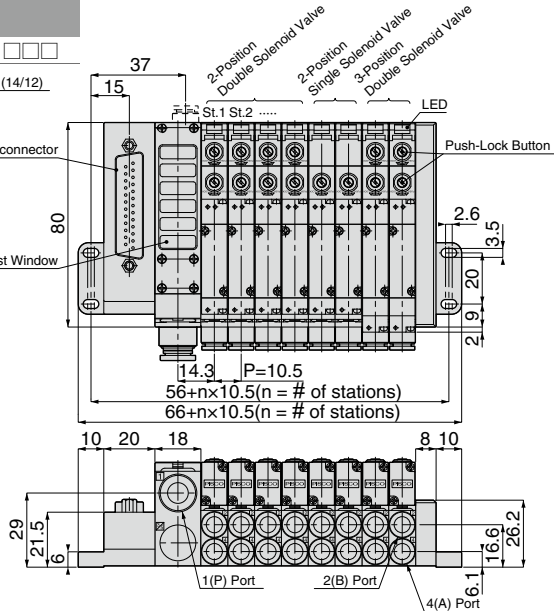
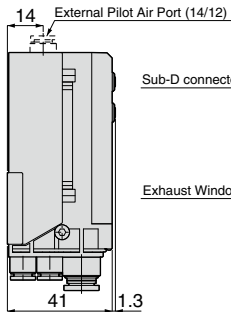


SVR 10 Intake & Exhaust Block on Both Sides, Tube Exhaust Flat Cable Connector

Unit : mm

Model Code




SVR10 □ A-□□□□-F-□-□-□□□

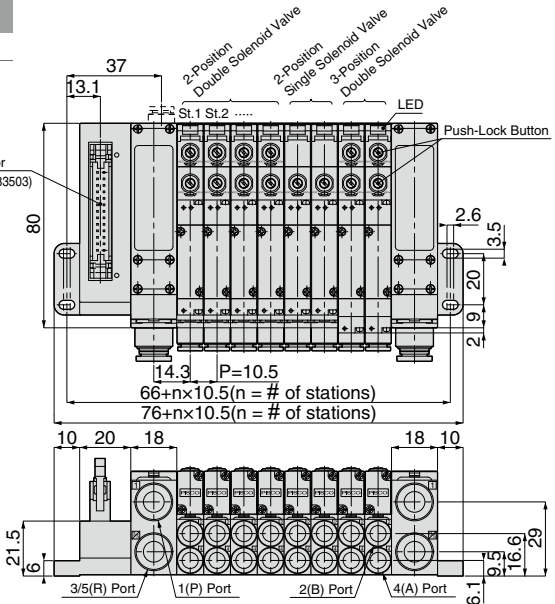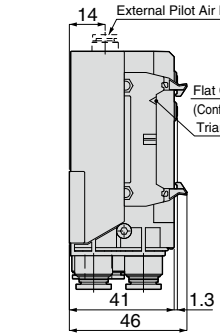

SVR 10 Intake & Exhaust Block: One Side, Tube Exhaust Flat Cable Connector

Model Code

SVR10 □ B-□□□□-F-□-□-□□□

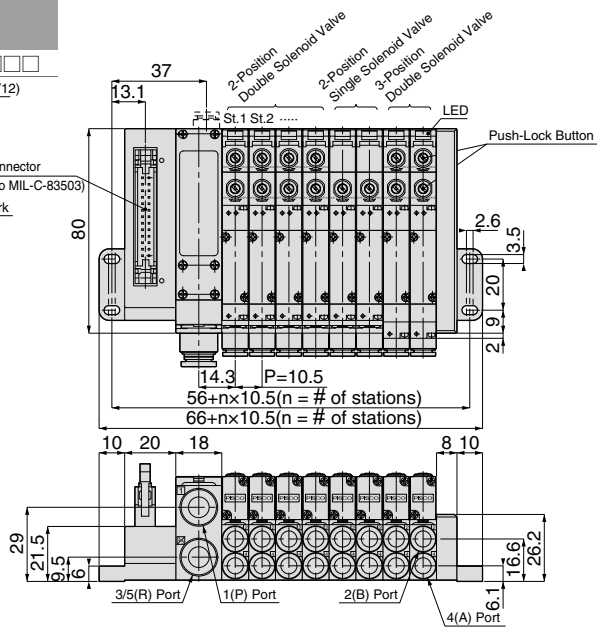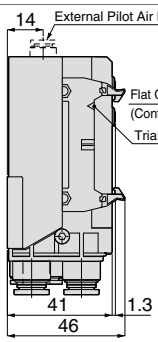

SOLENOID VALVE Series

Solenoid Valve SVR Series





Intake & Exhaust Block on Both Sides, Open-air Exhaust Flat Cable Connector

Unit : mm

Model Code



SVR10 □ A-□□□ S-F-□-□-□□□

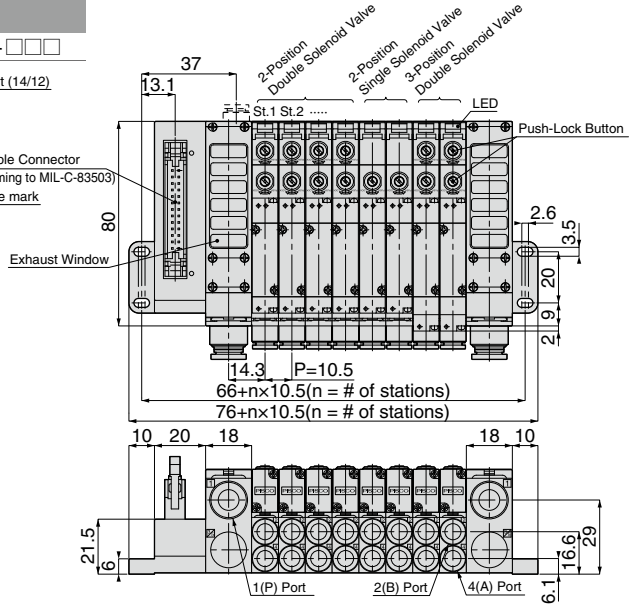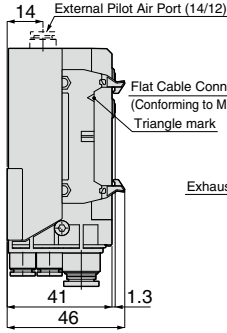

Intake & Exhaust Block on One Side, Open-air Exhaust Flat Cable Connector

Model Code

SVR10 □ B-□□□ S-F-□-□-□□□


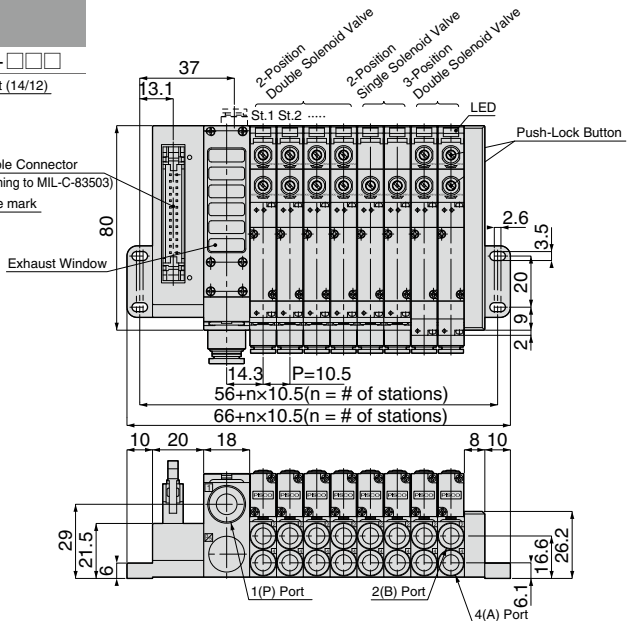
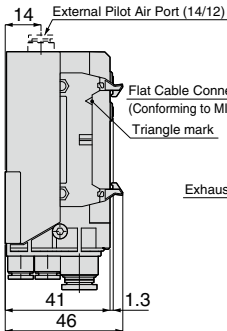


SVR 10 Intake & Exhaust Block on Both Sides, Tube Exhaust Individual Plug-in Connector

Unit : mm

Model Code

SVR10 □ A-□□□□-S-□-□-□□□

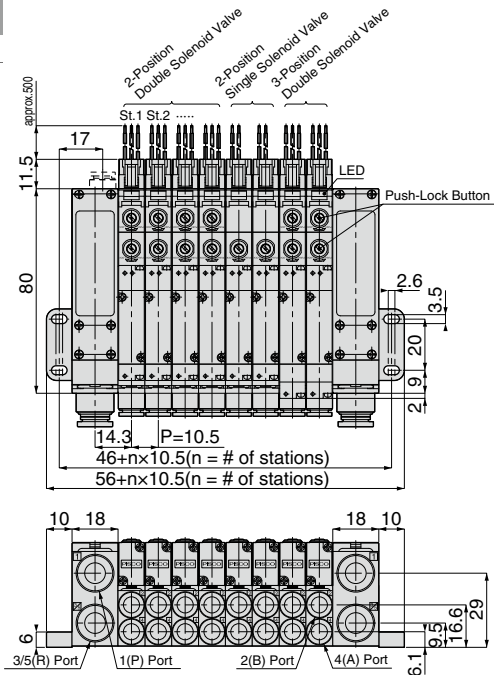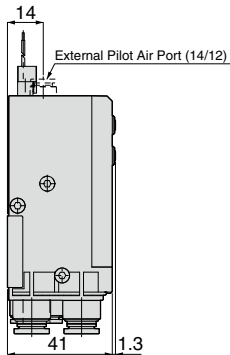

SOLENOID VALVE Series

Solenoid Valve SVR Series






Intake & Exhaust Block on One Side, Tube Exhaust Individual Plug-in Connector

Unit : mm

Model Code

SVR10 □ B-□□□□-S-□-□-□□□□

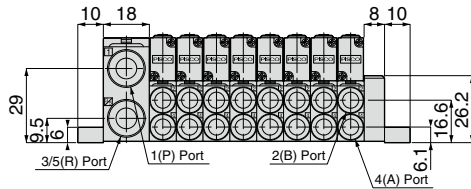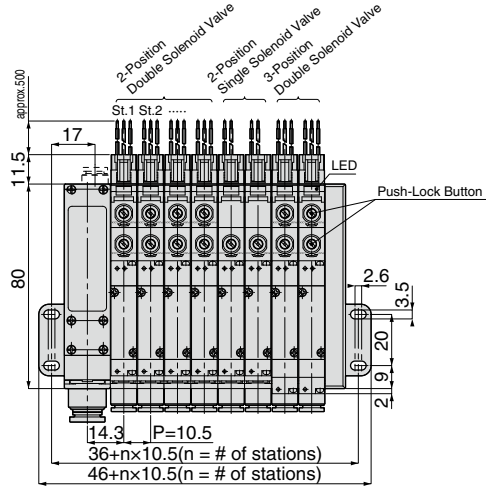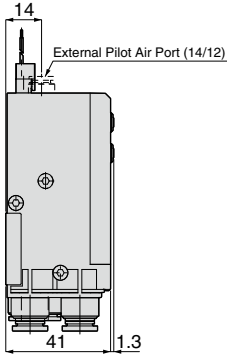







Intake & Exhaust Block on Both Sides, Open-air Exhaust Individual Plug-in Connector

Unit : mm

Model Code

SVR10 □ A-□□□ S-S-□-□-□□□

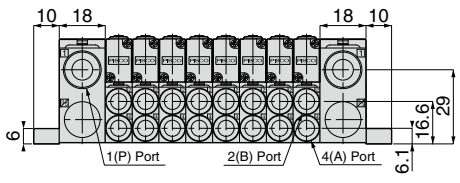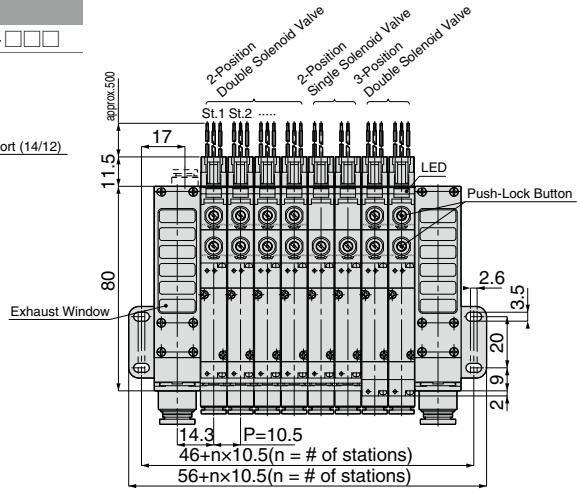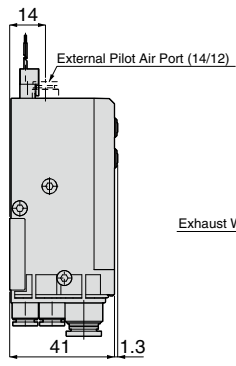

SOLENOID VALVE Series

Solenoid Valve SVR Series






Intake & Exhaust Block on One Side, Open-air Exhaust Individual Plug-in Connector


Unit : mm

Model Code

SVR10 □ B-□□□ S-S-□-□-□□□

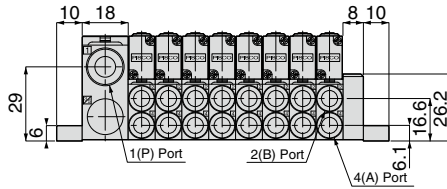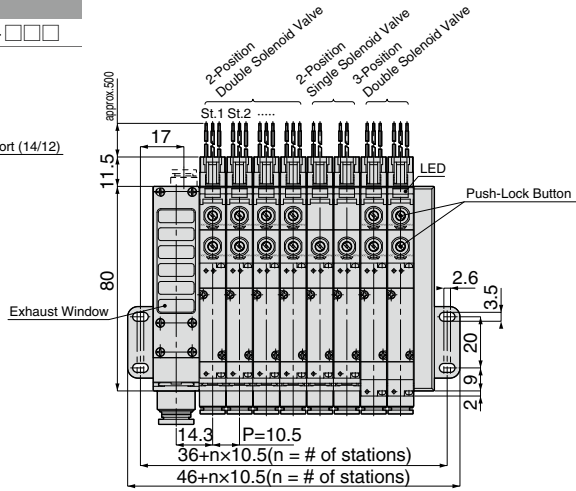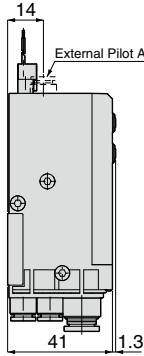

Dimension of Fittings

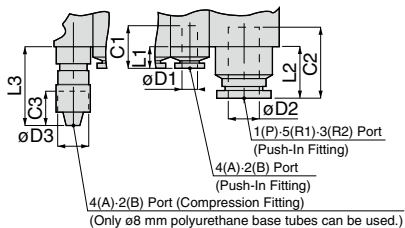


Unit : mm


| | Tube O.D. øD1 | C1 | L1 | Tube O.D. øD2 | C2 | L2 | Tube O.D. øD3 | C3 | L3 |
|---|------------------|------|------|------------------|------|------|------------------|----|----|
| Output ports 4(A)Port · 2(B)Port | 1.8 | 8.5 | 5 | — | — | — | — | — | — |
| | 3 (1/8) | 11 | 5.8 | — | — | — | — | — | — |
| | 4 (5/32) | 11 | 6 | — | — | — | — | — | — |
| | 6 | 12 | 9 | — | — | — | — | — | — |
| | 1/4 | 11.4 | 10.4 | — | — | — | — | — | — |
| Inlet and Exhaust port 1(P)Port · 5/3(R)Port | — | — | — | 6 | 17 | 12 | — | — | — |
| | — | — | — | 1/4 | 17 | 12 | — | — | — |
| | — | — | — | 8 (5/16) | 18.5 | 13.5 | — | — | — |
| | — | — | — | 10 | 21 | 17 | — | — | — |
| | — | — | — | 3/8 | 21 | 17 | — | — | — |

Dimension of Fittings (External Pilot Air Port)

Straight Type



Elbow Type



Unit : mm

| | Tube O.D. øD1 | C1 | L1 | L2 | L3 |
|---|------------------|------|-----|------|------|
| External Pilot Air Port (Straight Type) (14/12) | 4 (5/32") | 10.9 | 3.3 | — | — |
| | 6 | 12 | 6.5 | — | — |
| External Pilot Air Port (Elbow Type) (14/12) | 4 (5/32") | 11 | 5.5 | 15.1 | 9.5 |
| | 6 | 11.6 | 6.5 | 16 | 11.8 |



SOLENOID VALVE Series

Solenoid Valve SVR Series

■ DIN Rail Mounting Bracket

DRF35S DIN Rail Mounting Bracket

Unit : mm

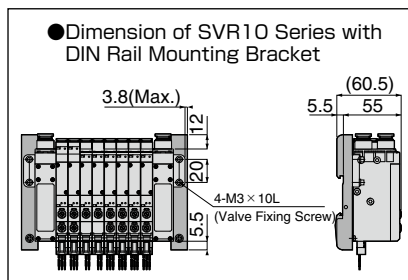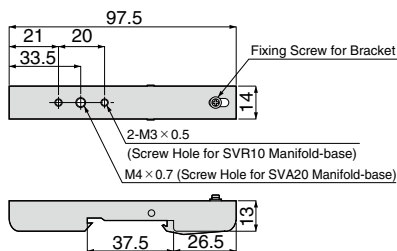

| Model Code | CAD file name |
|------------|---------------|
| DRF35S | SVA-047 |



■ Method for Attaching / Detaching DIN Rail Mounting Bracket

(1) Fix a solenoid valve on DIN Rail Bracket (DRF35S) by tightening a screw. (*1).


*1. Use a screw of M3x0.5 (L=8-10).

(2) Mount DIN Rail Bracket (DRF35S) on DIN Rail. Tighten the fixing screw of DIN Rail Bracket (DRF35S) with the designated tightening torque in the below table.

■ Table. Tightening Torque of Fixing Screw

| | |
|-------------------|--------------|
| Tightening Torque | 0.3 ~ 0.4N·m |
| Max. Load | 100N |

(3) Loosen the fixing screw of DRF35S and lean forward the solenoid valve in the way like pulling it up, detach it from the rail as following figure shows.

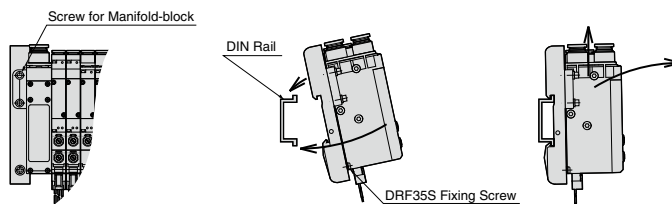

△ Detailed Safety Instructions

Before using PISCO products, be sure to read "Safety Instructions" and "Safety Instruction Manual" and Common Safety Instructions for Solenoid Valve Series".

Warning

1. When a solenoid valve is operated under vibration less than 49m/s^2 , install it so that a spool valve is at a right angle to the vibrating direction.

* Refer to the figure of "4. Installation" under "Precautions for Use".

Caution

1. When the valves are used with Valve Manifold, back pressure can cause malfunctions of the actuator (single acting cylinder, etc.) In such a case, provide a check valve to the exhaust port.
2. Do not use a 3-position valve for accurate mid-stroke positioning of the cylinder. Compressiveness of air may not allow accuracy in stop position. Also, the valve permits leakage, so that the stop position may not remain constant for a long time.
3. Do not give excessive tension or bending to the individual plug-in connector (Cable). Disconnection or damage to the connector may be caused.
4. The Cartridge Fitting can be disconnected by removing the lock pin. However, make sure that the lock pin is properly in place before using.
5. Read the manual carefully for proper installation and removal of valves. Also, keep the manual at hand.
6. Read the method for replacing Cartridge Fitting in the catalog carefully.
7. Read the method for replacing Cartridge Fitting and piping $\varnothing 8\text{mm}$ Compression Fitting in the catalog carefully.
8. When wiring Sub-D connector, Individual plug-in Connector and Flat Cable, refer to the electric circuit in this catalog.

△ Safety Instructions for DIN Rail Mounting Bracket

1. Fixing screw shall be tightened within the designated tightening torque.
2. Do not place anything which exceeds the maximum load on DIN Rail and Bracket.
3. Do not place DIN rail on a place with extreme vibration (9.8m/s^2 or less).

⚠ Safety Rules for Use

1. Air Quality

- Impurities contained in air may cause malfunctions or troubles of solenoid valves. Remove drain and dust from the supply air.
- Apply flushing to both supplying and cylinder sides when piping. Place a filter (filtering accuracy: 5 μ m or less) close to a solenoid valve.
- A large amount of drain, excessive lubrication and super dry air may cause malfunctions or troubles. Pay special attentions to air quality.

2. Operating Environment


- Operate solenoid valves under the following environment.
 - Within Operating Temp. Range
 - Avoid dew condensation by temperature change
 - No water / oil drops and dust
 - No corrosive gas

3. Leakage Current

- When a solenoid valve is operated by a programmable controller, leakage current in output side shall be less than 1mA. There is a risk that the leakage current of the output can cause malfunctions.

4. Installation

- When a solenoid valve is operated under a vibrating condition, install it so that a spool valve is at a right angle to the vibrating direction. (Operate the valve under a vibration of less than 49m/s².)

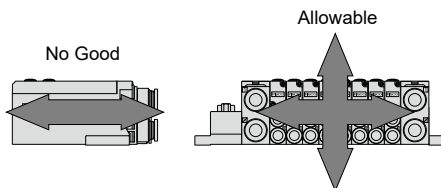


5. Lubrication

- No lubrication is recommended in principle.
- When a system needs to be lubricated, use Turbine Oil Class 1 (ISO VG 32) / free of additives. If the lubrication is stopped supplying to the system in the middle of operation, malfunctions may be caused due to the loss of the initial lubricant on valves. Keep providing lubricant.

6. Method for Attaching / Detaching Solenoid Valve

In order to attach or detach a valve unit on a Manifold-base, follow the instructions below.

- ① Loosen 2 fixing screws with a Philips screwdriver and take them out completely from the valve unit .
- ② Pull up a valve unit toward the arrow direction in Figure 1 and remove the unit from the Manifold-base.
- ③ In order to attach a valve unit to the Manifold-base, pay attention to connect with a connector as well as to placing a valve unit at a right angle to a Manifold-block.
 - * Make sure that a seal rubber is placed properly on its groove before attaching a valve unit.
- ④ Tighten fixing screws firmly.

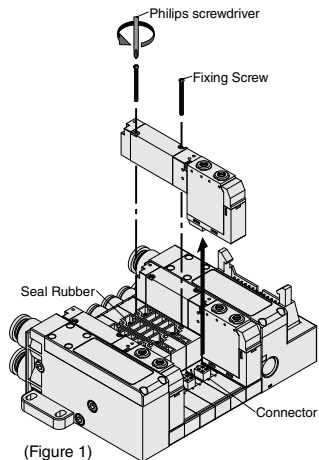

7. Recommended Tightening Torque for Manifold Fixing Screws

- Refer to the table below when mounting solenoid valves on a Manifold-base. Tightening screws with tightening torque other than the recommended range may cause unfixing or damaging valves.


| | |
|-------------------------------|----------------|
| Valve Series | SVR10 Series |
| Recommended Tightening Torque | 0.18 ~ 0.22N·m |

8. Installing Method for Exhaust Check Valve

- Fit a seal rubber on a valve unit. (Push the rubber until it stops)
- Fit a spring first and a valve next on the projection part of the exhaust port on the Manifold-block.
 - Note) Pay attention not to drop the spring and the valve into the manifold-base.



- Install the valve unit on the saturation base and tighten fixing screws.

(Refer to "6. Method for Attaching / Detaching Solenoid Valve".)

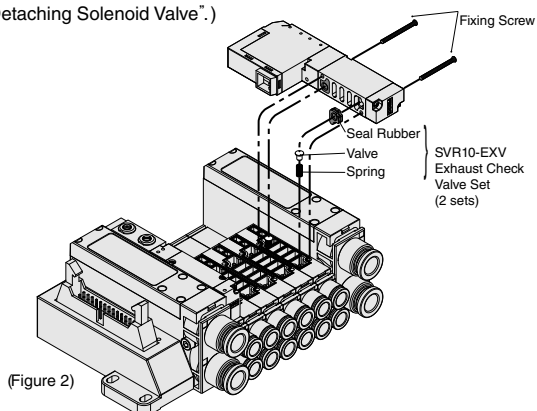

9. Attaching / detaching Individual Plug-in Connector

- To attach the Individual Plug-in Connector, insert the connector into the socket. (Figure 3)
- In order to detach the connector, push the latch to the arrowed direction in the figure below and pull out the connector. (Figure 4)

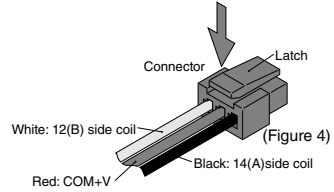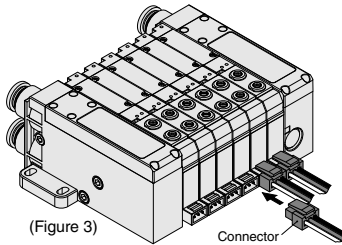

10. Replacement of Cartridge Fitting


All Cartridge Fittings are replaceable. Follow the instructions below for the replacement.

- Instructions for Intake Port 1(P) / Output Port 4/2(A/B) / Exhaust Port 5/3(R1/R2) (Figure 5)

- ① Pull up a lock pin with a tool such as a flathead screwdriver and take it out.
- ② Pull out Cartridge Fitting (Push-In Fitting or Compression Fitting) .


* When installing a cartridge fitting, make sure no dust or fluffs stuck on O-ring.

* When 3-Posion Solenoid Valve is mounted, detach the valve unit before pulling out the cartridge fitting.

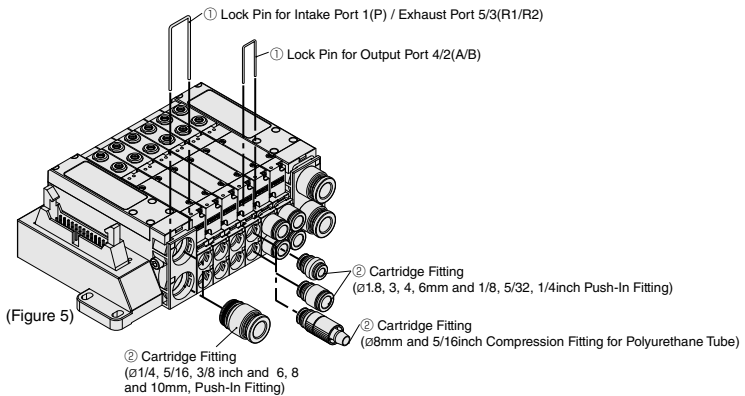


11. Piping Method of Compression Fitting for $\varnothing 8\text{mm}$ Polyurethane Tube

- Follow the instructions below to insert tube into Compression Fitting on Output Port (4(A)port, 2(B) port). (Figure 6)
 - ①. Detach Compression Fitting from a Manifold-block. Refer to "10. Replacement of Cartridge Fitting" .
 - ②. Rotate a compression sleeve until it touches the sleeve end. Refer to Figure 7.
 - ③. Insert a tube until it touches to the tube end. (Refer to Figure 8.) Make sure to use only polyurethane tubes for Compression Fitting.
 - ④. Turn the sleeve counterclockwise from 6 to 8 times by hand or with a long-nose pliers.
 - ⑤. Attach the Compression Fitting to the Manifold-block.
- * Lock Pin should be placed properly after the installation of Compression Fitting.

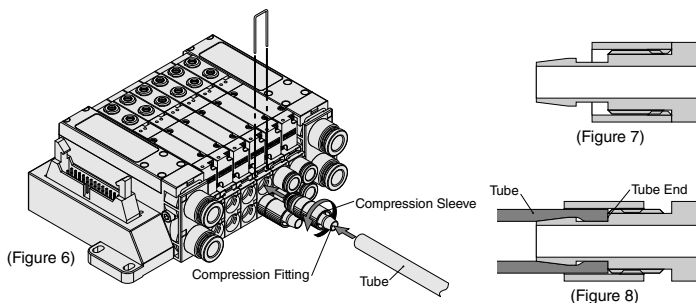

12. Manual Operation

- A valve can be switched over by a manual operation only when pilot air is supplied.
- Push a manual button with a precision screwdriver until the button stops and turn it clockwise to lock. Turn the button counterclockwise for unlocking. (4(A)side : Green, 2(B)side: Red. Recommended tightening torque: 0.05Nm or less when tightening with a precision screwdriver) Tightening torque of the screwdriver shall be less than 0.05Nm)
- Be sure to unlock the button before a normal operation of the valve.
- Avoid an excessive force on the button. Otherwise, there is a risk of damaging the product.

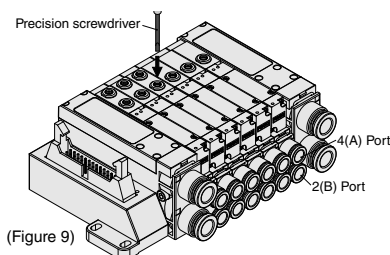


13. Replacement of Silencer Element

Follow the instructions below for the replacement of Silencer Element.

- ① Take out 6 screws fixing an element cover.
- ② Take out the element (Model Code: SVR10EX-E).
- ③ Install a new element, set back the element cover and fix it by tightening the screws.

(Tapping screws for resin are used for this product. Confirm the mesh with a precision driver first, then completely tighten all of them. Recommended tightening torque: 0.25-0.3Nm)

* Seal rubber should be placed on groove properly before placing the cover.

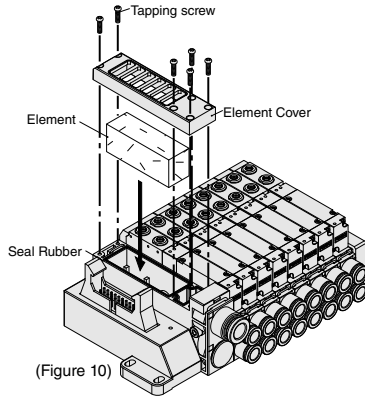

14. External Pilot Air Port

- When Twin 3-Way Solenoid Valve (Valve Type: E, F, G and H) is operated with External Pilot Air Port, keep 30psi (0.2MPa) or more on Intake Port (1(P)). Besides, keep the condition of Pilot Air Pressure \geq Intake Port 1(P) Pressure. If pilot air pressure is lower than supply pressure, there is a risk of malfunctions.


15. Electric Circuit

- Refer to the charts described above.

16. Dual Pressure Option

- Triangle Mark indicates the partition to separate supply pressure.

Example) In case of the figure below, the supply port on L side supplies air to St.1 and St.2 and the supply port on R side supplies air to St.3 and St.4.

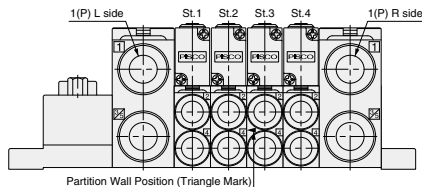

- * When Twin 3-Way Solenoid Valve is mounted on a dual pressure manifold base, keep the supply pressure under the condition [1(P)L side \geq 1(P)R side].

 **Caution**

1. A solenoid valve allows air leakage. Do not use the valve for applications which requires air tightness.
 2. Do not use a solenoid valve for a large air-blow. A drop of inner pressure can cause the internally piloted-valve structure malfunctions.
 3. When a solenoid valve is switched over by a manual operation, connected actuators start operation. Confirm the safety before the system is operated.
 4. Make sure to turn off the power supply and wire colors before wiring.
 5. Solenoid valves work without lubrication. When lubrication is necessary, use Turbine Oil Class 1 (ISO VG 32). If lubrication is stopped in the middle of the operation, it can cause malfunctions due to the loss of initial lubricant on valves. Keep providing lubricant.
 6. Make sure each port by a marking on a solenoid valve body when piping.
 7. Turn off the power and air supply and make sure the residual pressure becomes zero before maintenance. It should be noted that the residual pressure exists between a solenoid valve and an actuator in Three-Position Closed Center type.
 8. Clogged element of a manifold with silencer increases the exhaust resistance. It can also cause impairing the performance in a whole pneumatic system. Carry out the maintenance periodically.
 9. Thoroughly read and understand instructions and precautions in this catalog before replacing a silencer element.
-