# ø8·10·12·16 AP series Miniature Pilot Lights


### Super Bright LEDs with built-in current-limiting resistor

- Space saving miniature style.
- Illumination colors: amber, blue, green, pure white, red, and yellow
- (blue and pure white available for AP8M and AP1M only) • Marking is available on flat lens units.



\*) AP8M and AP1M only

· See website for details on approvals and standards.

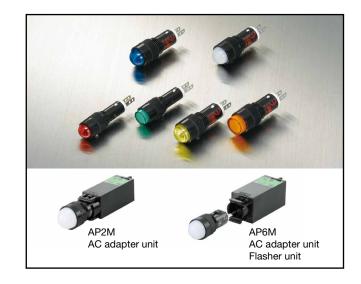

#### **Pilot Light**

Input Type	Full voltage	Full voltage						
Model	AP2M / AP6M	AP2M / AP6M			AP8M / AP1M			
Rated Voltage	6V AC/DC	12V AC/DC	24V AC/DC	5V DC	12V AC/DC	24V AC/DC		
Voltage Range	6V AC/DC±5%	12V AC/DC±10%	24V AC/DC±10%	5V DC±5%	12V AC/DC±10%	24V AC/DC±10%		
Rated Current	5mA			4mA		÷		
Illumination Color Code	A (amber), G (gree	en), PW (pure white),	R (red), Y (yellow)	A (amber), G (gree	en), PW (pure white), R (re	ed), S (blue), Y (yellow)		
Operating Temperature	-20 to +55°C (no	–20 to +55°C (no freezing)						
Storage Temperature	-30 to +55°C (no	freezing)						
Operating Humidity	45 to 85% RH (no	45 to 85% RH (no condensation)						
Insulation Resistance	Between live and	Between live and dead parts: 100 M $\Omega$ minimum (500V DC megger)						
Dielectric Strength	Between live and	Between live and dead parts: 1000V, 1 minute						
Solder Terminal	Soldering 350°C r	Soldering 350°C maximum (3 sec)						
Applicable Wire	ø1.0 or 0.75 mm <sup>2</sup>	ø1.0 or 0.75 mm <sup>2</sup> maximum (20 to 16 AWG)						
Weight (approx.)	AP6M: 7.5g, AP21	AP6M: 7.5g, AP2M: 4.5g, AP1M: 2.5g, AP8M: 2.0g						
Degree of Protection	AP6M, AP2M, AP	AP6M, AP2M, AP1M: IP65 AP8M: IP40 (according to IEC 60529)						

#### AC Adapter/DC-DC Converter (Option)

Unit	AC Adapter	DC-DC Converter		
Applicable Unit	AP6M and AP2M (6V rating only)			
Rated Voltage	100/110V AC, 200/220V AC 50/60 Hz	110V DC		
Voltage Range	100/110V AC±10% 200/220V AC±10%	90 to 140V		
Power Consumption	1.6 VA maximum	1W maximum		
Insulation Voltage	250V AC	140V DC		
Insulation Resistance	Between live and dead parts: 100 M $\Omega$ minimum (500V DC megger)			
	Between live and dead parts: 2000V, 1 minute			
Dielectric Strength	Between I/O terminals: 2000V AC/, 1 minute	Between I/O terminals: 1500V AC, 1 minute		
Terminal Style	M3 screw			
Weight (approx.)	38g	20g		

#### Flasher Unit (Option)

Applicable Unit	AP6M (12V and 24V DC rating only)
Rated Voltage	12/24V DC compatible
Voltage Range	12/24V DC±10%
Flashing Period	Adjustable between approximately 30 to 600 cycles per minute (period 0.1 to 2 sec)
Current Draw	4 mA (OFF) to 6 mA (ON)
Terminal Style	M3 screw
Weight (approx.)	13.5g

### AP6M Series (ø16)

Shape	Operating Voltage	Part No.	Ordering No.	Package Quantity	Lens Color Code
Dome			AP6M266@	1	
	6V DC	AP6M266@	AP6M266@PN10	10	
	12V DC		AP6M211@	1	
	120 DC	AP6M211@	AP6M211@PN10	10	Specify a lens color
(CH)	24V DC A	AP6M2222	AP6M2222	1	A: amber G: green PW: pure white R: red Y: yellow
			AP6M222@PN10	10	
Flat (marking)			AP6M166@	1	
	6V DC	AP6M166@	AP6M166@PN10	10	
	10// DC		AP6M111@	1	
	12V DC AP6M111@		AP6M111@PN10	10	
			AP6M1222	1	
	24V DC AP6M122 <sup>®</sup>		AP6M122@PN10	10	


•Degree of protection: IP65 (IEC 60529)

•The LED cannot be replaced.


#### AC Adapter, DC-DC Converter, Flasher Unit

Unit	Operating Voltage	Part No.	Applicable Pilot Light	Package Quantity
	100/110V AC	AP6-016D		
AC Adapter 200/220V AC		AP6-026D	AP6-026D AP6M2662 (dome: 6V DC) AP6M1662 (flat: 6V DC)	
DC-DC Converter	110V DC (90 to 140V DC)	AP6-016DD		
Flasher Unit	12/24V DC	UZ6-F10	AP6M2112 (dome: 12V DC) AP6M2222 (dome: 24V DC) AP6M1112 (flat: 12V DC) AP6M1222 (flat: 24V DC)	1

### **Dimensions**

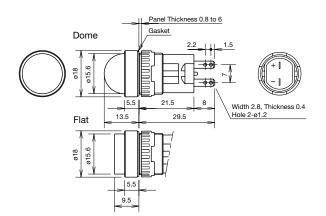

#### With AC Adapter, DC-DC Converter, Flasher Unit

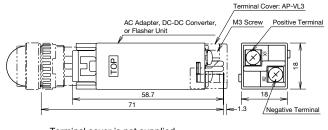

Terminal cover is not supplied. When using terminal covers, order AP-VL3 terminal covers.

Panel Cut-out / Mounting Hole Layout

### **Terminal Arrangement**

(Bottom View)




Positive Terminal Negative Terminal

### **Marking Plate**



Engraving depth: 0.5 mm maximum Marking plate material: White acrylic

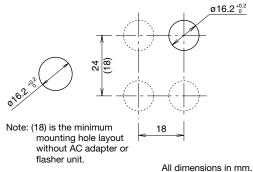

### AP2M Series (ø12)

Shape	Operating Voltage	Part No.	Ordering No.	Package Quantity	Lens Color Code
Dome			AP2M266@	1	
	6V DC ±5%	AP2M266@	AP2M266@PN10	10	
	12V DC ±10%	AP2M2112	AP2M2112	1	
	12V DC ±10%	APZIVIZITØ	AP2M211@PN10	10	Specify a lens
	24V DC ±10%	AP2M222@	AP2M2222	1	color code in place of @ in the Part No. A: amber G: green PW: pure white R: red Y: yellow
			AP2M222@PN10	10	
Flat (marking)		AP2M166@	AP2M166@	1	
	6V DC ±5%		AP2M166@PN10	10	
		AP2M111@	AP2M1112	1	
	12V DC ±10%		AP2M111@PN10	10	
	24V DC ±10%		AP2M1222	1	
	240 DC ±10%	AP2M1222	AP2M122@PN10	10	


•Degree of protection: IP65 (IEC 60529)

•The LED cannot be replaced.


#### AC Adapter, DC-DC Converter

Unit	Operating Voltage Part No.		Applicable Pilot Light	Package Quantity	
	100/110V AC	AP2-016D			
AC Adapter	200/220V AC	AP2-026D	AP6M2662 (dome: 6V DC) AP6M1662 (flat: 6V DC)	1	
DC-DC Converter	converter 110V DC (90 to 140V DC) AP2-016DD				

### **Dimensions**

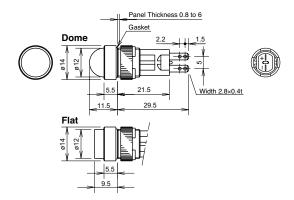


### With AC Adapter or DC-DC Converter

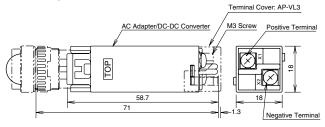

Terminal cover is not supplied. When using terminal covers, order AP-VL3 terminal covers.

### **Terminal Arrangement**

(Bottom View)

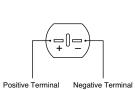


### **Marking Plate**



Engraving depth: 0.5 mm maximum Marking plate material: White acrylic



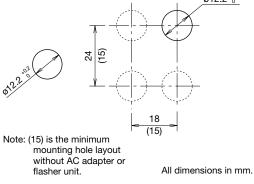

### AP1M Series (ø10)


Shape	Operating Voltage	Part No.	Ordering No.	Package Quantity	Lens Color Code
Dome			AP1M255@	1	
	5V DC ±5%	AP1M255@	AP1M255@PN10	10	
			AP1M211@	1	
	12V AC/DC ±10%	AP1M211@	AP1M211@PN10	10	Specify a lens color code in place
		AP1M2222	AP1M2222	1	of 2 in the Part No.
	24V AC/DC ±10%		AP1M222@PN10	10	A: amber G: green PW: pure white R: red S: blue Y: yellow
Flat (marking)		AP1M155@	AP1M155@	1	
20	5V DC ±5%		AP1M155@PN10	10	
	12V AC/DC ±10%	AP1M111@	AP1M111@	1	
	12V AC/DC ±10%		AP1M111@PN10	10	
			AP1M1222	1	
	24V AC/DC ±10% AP1M1222		AP1M122@PN10	10	

•Degree of protection: IP65 (IEC 60529)


•The LED cannot be replaced.

•Separate transformer (TWR512, TWR522, TWR542) can be used for 24V AC/DC pilot lights.

### **Dimensions**

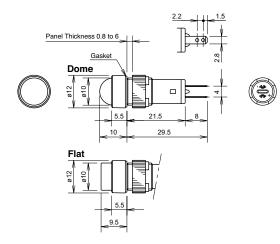

### **Terminal Arrangement (Bottom View)**

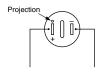


Positive Terminal Negative Terminal

### **Marking Plate**



Engraving depth:0.5 mm maximumMarking plate material:White acrylic

### Panel Cut-out / Mounting Hole Layout

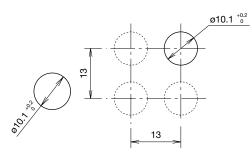

All dimensions in mm.


### AP8M Series (ø8)

Shape	Operating Voltage	Part No.	Ordering No.	Package Quantity	Lens Color Code
Dome	5V DC ±5%		AP8M2552	1	
	5V DC ±5%	AP8M255©	AP8M255@PN10	10	
			AP8M2112	1	
	12V AC/DC ±10%	AP8M211@	AP8M211@PN10	10	Specify a lens color
		AP8M2222	AP8M2222	1	code in place of in the Part No. A: amber G: green PW: pure white R: red S: blue Y: yellow
	24V AC/DC ±10%		AP8M222@PN10	10	
Flat		AP8M155@	AP8M155@	1	
• •	5V DC ±5%		AP8M155@PN10	10	
		AP8M111@	AP8M1112	1	
	12V AC/DC ±10%		AP8M111@PN10	10	
			AP8M1222	1	
	24V AC/DC ±10%	AP8M122@	AP8M122@PN10	10	


•The lens or LED cannot be removed or replaced.

Degree of protection: IP40 (IEC 60529)
Separate transformer (TWR512, TWR522, TWR542) can be used for 24V AC/DC pilot lights.


### **Dimensions**

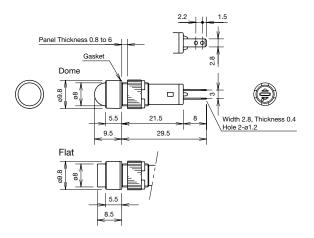

### **Terminal Arrangement (Bottom View)**

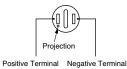

### Panel Cut-out / Mounting Hole Layout

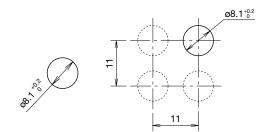

All dimensions in mm.

### Accessories

Shape	For	Material	Part No.	Ordering No.	Package Quantity	Remarks
Locking Ring Wrench	ø16		MT-001	MT-001	1	•Used to tighten the locking ring when installing an AP unit onto an panel.
	ø12	Metal	MT-002	MT-002	1	•Tighten the locking ring using a recom- mended tightening torque. Part No. Size
	ø10	(nickel-plated brass)	MT-003	MT-003	1	MT-001 ø18 MT-002 ø14
	ø8		MT-004	MT-004	1	60 ↔ ♥ MT-003 ø12 MT-004 ø9.5
Removal Tool		Stainless steel	MT-100	MT-100	1	•Used to remove the AC adapter, DC-DC converter, or flasher unit.
Mounting Hole Plug	10	Metal (diecast) Locking ring (polyacetal)	AL-BM6	AL-BM6	1	•Degree of protection: IP65
	ø16 –	Nitryl rubber (black)	AL-B6	AL-B6PN05	5	•Degree of protection: IP65
	ø12	Nitryl rubber (black)	AL-B2	AL-B2PN05	5	•Degree of protection: IP65
	ø10	Nitryl rubber (black)	AL-B1	AL-B1PN05	5	•Degree of protection: IP65
	ø8	Nitryl rubber (black)	AL-B8	AL-B8PN05	5	•Degree of protection: IP65

#### Replacement Parts for AP6M/AP2M/AP1M

Sha	ape		For	Part No.	Ordering No.	Package Quantity	Lens Color Code
Lens		AP6M	Dome lens	AP6M-L22	AP6M-L2@PN05	5	A (amber), G (green), R (red), W (white), Y (yellow) (Note 1)
		APOIN	Flat lens	AP6M-L1@	AP6M-L1@PN05	5	A (amber), C (clear), G (green), R (red), Y (yellow) (Note 2)
		AP2M	Dome lens	AP2M-L22	AP2M-L2@PN05	5	A (amber), G (green), R (red), W (white), Y (yellow) (Note 1)
	0	AP2IVI	Flat lens	AP2M-L1@	AP2M-L1@PN05	5	A (amber), C (clear), G (green), R (red), Y (yellow) (Note 2)
	0		Dome lens	AP1M-L22	AP1M-L2@PN05	5	A (amber), G (green), R (red), S (blue), W (white), Y (yellow) (Note 1)
		AP1M	Flat lens	AP1M-L1@	AP1M-L1@PN05	5	A (amber), C (clear), G (green), R (red), S (blue), Y (yellow) (Note 2)
Marking P	late	AP6M		AP6M-P1W	AP6M-P1WPN05	5	
		AP2M	Flat lens	AP2M-P1W	AP2M-P1WPN05	5	White
		AP1M		AP1M-PN1W	AP1M-PN1WPN05	5	
Diffusion F	Plate	AP1M	Dome lens	AP1M-PN2W	AP1M-PN2WPN05	5	White
Terminal C	Cover	AP6M AP2M	AC adapter DC-DC converter Flasher unit	AP-VL3	AP-VL3	1	

Specify a lens color code in place of 2 in the Ordering No.

Note 1: On the dome lens, use a white (W) lens for pure white P(W) illumination. Note 2: On the flat lens, use a clear (C) lens for pure white (PW) illumination.

#### **Safety Precautions**

- Turn off power to the AP series pilot lights before installation, removal, wiring, maintenance, and inspection. Failure to turn power off may cause electrical shocks or fire hazard.
- •For wiring, use wires of proper size to meet the voltage and current requirements. Improper wiring may cause overheating and

#### Instructions


#### Panel Mounting

When mounting the AP series pilot lights on a panel, use the optional locking ring wrench. Do not use pliers. Excessive tightening will damage the locking ring.

Unit	Tightening Torque
AP6M	0.88 N·m
AP2M	0.78 N·m
AP1M	0.29 N·m
AP8M	0.29 N⋅m

Installing the AC Adapter, DC-DC Converter, and Flasher Unit

- 1. Make sure that the voltage rating and terminal style of the AP series pilot lights are applicable to the AC adapter, DC-DC Converter, and flasher units.
- 2. Install the pilot light into a panel cut-out before mounting an AC adapter, DC-DC Converter, or flasher unit. Note that the pilot light cannot be installed in a panel cut-out with an AC adapter, DC-DC Converter, or flasher unit mounted.
- 3. When installing an AC adapter, DC-DC Converter, or flasher unit, make sure that the TOP marking is on the same side as the TOP making of the pilot light. AC adapter, DC-DC Converter, and flasher unit are snapped on to the back of the pilot light.
- 4. To remove the AC adapter, DC-DC Converter, or flasher unit, insert the tip of the removal tool into the joint hook and pull towards you as shown in the photo below.

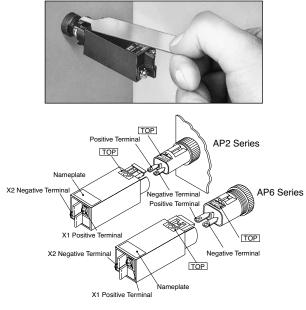

Note: Do not apply excessive force to terminals X1 and X2 during wiring.

 When using an AC adapter, DC-DC Converter, or flasher unit where the units are subjected to noise, connect a noise supressor across terminals X1 and X2 as shown in the diagram below.



create a fire hazard. Tighten the M3 terminal screws to a torque of 0.6 to 1.0 N·m. Failure to tighten terminal screws may cause overheating and fire.

#### Wiring

- 1. Note the positive and negative polarities when wiring DC types.
- All DC type AP series pilot lights contain a current limiting resistor, eliminating the need for external resistors.
- 3. Solder the terminal at 350°C within 3 seconds using a 60W soldering iron. SnAgCu type lead-free solder is recommended. When soldering, do not touch the pilot light housing with the soldering iron. Also ensure that no tensile force is applied to the terminal. Do not bend the terminal or apply excessive force to the terminal.

Use a non-corrosive rosin flux.

#### DC-DC Converter


DC-DC converters employ an electronic oscillating circuit. Oscillating sounds may be heard depending on operating conditions, but will not affect performance characteristics.

#### Marking

AP6M, AP2M, and AP1M round flat lenses contain a white marking plate inside the lens. (AP8M lens cannot be removed.)

#### Flasher Unit

Pierce the round mark on the nameplate on top of the flasher unit with a flat screwdriver and adjust the variable resistor inside.Turn clockwise to lengthen the flashing period.

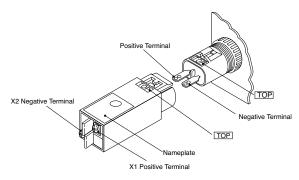

Note: Do not apply excessive force to terminals X1 and X2 during wiring.

EP5041A AP December 2022

### **Ordering Terms and Conditions**

#### Thank you for using IDEC Products.

By purchasing products listed in our catalogs, datasheets, and the like (hereinafter referred to as "Catalogs") you agree to be bound by these terms and conditions. Please read and agree to the terms and conditions before placing your order.

#### 1. Notes on contents of Catalogs

(1) Rated values, performance values, and specification values of IDEC products listed in this Catalog are values acquired under respective conditions in independent testing, and do not guarantee values gained in combined conditions.

Also, durability varies depending on the usage environment and usage conditions.

- (2) Reference data and reference values listed in Catalogs are for reference purposes only, and do not guarantee that the product will always operate appropriately in that range.
- (3) The specifications / appearance and accessories of IDEC products listed in Catalogs are subject to change or termination of sales without notice, for improvement or other reasons.
- (4) The content of Catalogs is subject to change without notice.

#### 2. Note on applications

- (1) If using IDEC products in combination with other products, confirm the applicable laws / regulations and standards. Also, confirm that IDEC products are compatible with your systems, machines, devices, and the like by using under the actual conditions. IDEC shall bear no liability whatsoever regarding the compatibility with IDEC products.
- (2) The usage examples and application examples listed in Catalogs are for reference purposes only. Therefore, when introducing a product, confirm the performance and safety of the instruments, devices, and the like before use. Furthermore, regarding these examples, IDEC does not grant license to use IDEC products to you, and IDEC offers no warranties regarding the ownership of intellectual property rights or non-infringement upon the intellectual property rights of third parties.
- (3) When using IDEC products, be cautious when implementing the following.
   i. Use of IDEC products with sufficient allowance for rating and performance
  - ii. Safety design, including redundant design and malfunction prevention design that prevents other danger and damage even in the event that an IDEC product fails
  - Wiring and installation that ensures the IDEC product used in your system, machine, device, or the like can perform and function according to its specifications
- (4) Continuing to use an IDEC product even after the performance has deteriorated can result in abnormal heat, smoke, fires, and the like due to insulation deterioration or the like. Perform periodic maintenance for IDEC products and the systems, machines, devices, and the like in which they are used.
- (5) IDEC products are developed and manufactured as general-purpose products for general industrial products. They are not intended for use in the following applications, and in the event that you use an IDEC product for these applications, unless otherwise agreed upon between you and IDEC, IDEC shall provide no guarantees whatsoever regarding IDEC products.
  - i. Use in applications that require a high degree of safety, including nuclear power control equipment, transportation equipment (railroads / airplanes / ships / vehicles / vehicle instruments, etc.), equipment for use in outer space, elevating equipment, medical instruments, safety devices, or any other equipment, instruments, or the like that could endanger life or human health
  - ii. Use in applications that require a high degree of reliability, such as provision systems for gas / waterworks / electricity, etc., systems that operate continuously for 24 hours, and settlement systems
  - iii. Use in applications where the product may be handled or used deviating from the specifications or conditions / environment listed in the Catalogs, such as equipment used outdoors or applications in environments subject to chemical pollution or electromagnetic interference If you would like to use IDEC products in the above applications, be sure to consult with an IDEC sales representative.

#### 3. Inspections

We ask that you implement inspections for IDEC products you purchase without delay, as well as thoroughly keep in mind management/maintenance regarding handling of the product before and during the inspection.

#### 4. Warranty

(1) Warranty period

The warranty period for IDEC products shall be one (1) year after purchase or delivery to the specified location. However, this shall not apply in cases where there is a different specification in the Catalogs or there is another agreement in place between you and IDEC.

(2) Warranty scope

Should a failure occur in an IDEC product during the above warranty period for reasons attributable to IDEC, then IDEC shall replace or repair that product, free of charge, at the purchase location / delivery location of the product, or an IDEC service base. However, failures caused by the following reasons shall be deemed outside the scope of this warranty.

- i. The product was handled or used deviating from the conditions / environment listed in the Catalogs
- ii. The failure was caused by reasons other than an IDEC product
- iii. Modification or repair was performed by a party other than IDEC
- iv. The failure was caused by a software program of a party other than  $\ensuremath{\mathsf{IDEC}}$
- v. The product was used outside of its original purpose
- vi. Replacement of maintenance parts, installation of accessories, or the like was not performed properly in accordance with the user's manual and Catalogs

vii. The failure could not have been predicted with the scientific and technical standards at the time when the product was shipped from  $\ensuremath{\mathsf{IDEC}}$ 

viii. The failure was due to other causes not attributable to IDEC (including cases of force majeure such as natural disasters and other disasters)

Furthermore, the warranty described here refers to a warranty on the IDEC product as a unit, and damages induced by the failure of an IDEC product are excluded from this warranty.

#### 5. Limitation of liability

The warranty listed in this Agreement is the full and complete warranty for IDEC products, and IDEC shall bear no liability whatsoever regarding special damages, indirect damages, incidental damages, or passive damages that occurred due to an IDEC product.

#### 6. Service scope

The prices of IDEC products do not include the cost of services, such as dispatching technicians. Therefore, separate fees are required in the following cases.

- Instructions for installation / adjustment and accompaniment at test operation (including creating application software and testing operation, etc.)
- (2) Maintenance inspections, adjustments, and repairs
- (3) Technical instructions and technical training
- (4) Product tests or inspections specified by you

The above content assumes transactions and usage within your region. Please consult with an IDEC sales representative regarding transactions and usage outside of your region. Also, IDEC provides no guarantees whatsoever regarding IDEC products sold outside your region.

## **IDEC CORPORATION**

Head Office 6-64, Nishi-Miyahara-2-Chome, Yodogawa-ku, Osaka 532-0004, Japan

USA	IDEC Corporation	Singapore	IDEC Izumi Asia Pte. Ltd.
EMEA	APEM SAS	Thailand	IDEC Asia (Thailand) Co., Ltd.
		India	IDEC Controls India Private Ltd.

Specifications and other descriptions in this brochure are subject to change without notice.

2022 IDEC Corporation, All Rights Reserved.

ChinaIDEC (Shanghai) Corporation<br/>IDEC Izumi (H.K.) Co., Ltd.TaiwanIDEC Taiwan Corporation



Japan IDEC Corporation

