


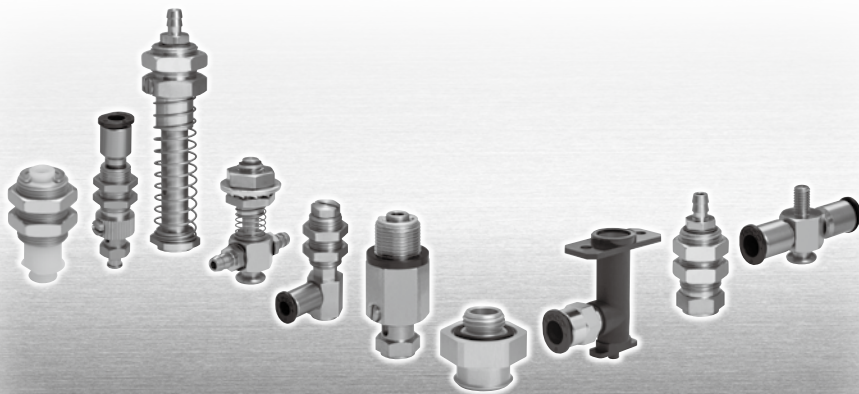

Suitable holder type for your application is available.

Vacuum Pad Holder Only

- Model code for pad holder alone is now simplified and easily understandable.

Connectable pad holder can be selected easily by connection configuration code listed in "Combination list of pad holder and pad" on page 1117.

- Wide selection of holder type

Holder type : 23 types

- Fixed type and Spring type are available.

Fixed type : 12 types. Spring type : 11 types

- Joint type can be selected from

Push-in fitting, Barb fitting, Female thread and Male thread.

Push-in fitting size : 8 sizes. Barb fitting size : 3 sizes.

Female thread size : 5 sizes. Male thread : 9 sizes.

- Variety of selections in pad holder for "Copper alloy free" and against "low ozone concentration"

-S3 spec. : No copper based metal parts. HNBR or FKM is adopted for seal rubber.



■ Combination list of pad holder and pad

A	B	C	D	E	F
Fixed type Top port	Fixed type Side port	Spring type Top port	Spring type Side port	Fixed type Direct mount	Spring type Direct mount
Mini	Mini	Mini	Mini	Mini	Mini
Slim	Slim	Slim	Slim	Slim	Slim
Standard	Standard	Standard	Standard	Standard	Standard
No cover	No cover	No cover	No cover	No cover	No cover
For specific pad(※1)	For specific pad	For specific pad	For specific pad	For specific pad(※1)	For specific pad

Connection type	Insert type (Direct connection)	Mount type (Direct connection)	Screw type (Connection with screw)	Mount type (Direct connection)	Mount type (Direct connection)
Connection configuration drawing					
Connection configuration code	-H3	-T4 -T15	-T8 -T40	-M4 -M10 -M6 -M20	-E10 -E20
			※Special pad screws, etc is required for -M□		

Pad type									
	Standard			Soft	Soft Bellows	Skidproof	Bellows	Multi-bellows	
Code	R	A	RM	L	LB	K	B	W	
0.7	○		○						
1	○		○						
1.5	○		○						
2	○		○						
3	○		○						
4	○		○						
6	○		○						
8	○		○						
10	○		○						
15	○		○						
20	○		○						
25	○		○						
30	○		○						
35	○		○						
40	○		○						
50	○		○						
60	○		○						
70	○		○						
80	○		○						
100	○		○						
150	○		○						
200	○		○						

Pad size (mm)


HC	HD	HDW	HE	HEW	A-E	B-E
Spring type Top port	Spring type Side port	Spring type Dual side port	Fixed type Direct mount Side port	Fixed type Direct mount Dual side port	Screwed type Top port	Screwed type Side port
						
Mini	Mini	Mini	Mini	Mini	Mini	Mini
Slim	Slim	Slim	Slim	Slim	Slim	Slim
Standard	Standard	Standard	Standard	Standard	Standard	Standard
No cover	No cover	No cover	No cover	No cover	No cover	No cover
For specific pad (※2)	For specific pad (※2)	For specific pad (※2)	For specific pad (※2)	For specific pad (※2)	For specific pad (※3)	For specific pad (※3)

※ 1. Holder for vacuum pad for packaging bag. ※ 2. Holder for soft series and soft bellows series.
※ 3. Holder for oval series.

						Pad type 		
	For packaging bag	Ultrathin	Flat	Mark-free	Sponge	Oval		
	PB	P	F	Q	S	Code		
						E		
						2×4		
						3.5×7		-E10
						4×10		
						5×10		
						6×10		
						4×20		-M6
						4×30		
						5×20		
						5×30		-E20
						6×20		
						6×30		
						8×20		
						8×30		

					
	-PB15 	-T8 	-M4 	-M6 	-M10 

■ Model designation of Pad Holder (Ex.)

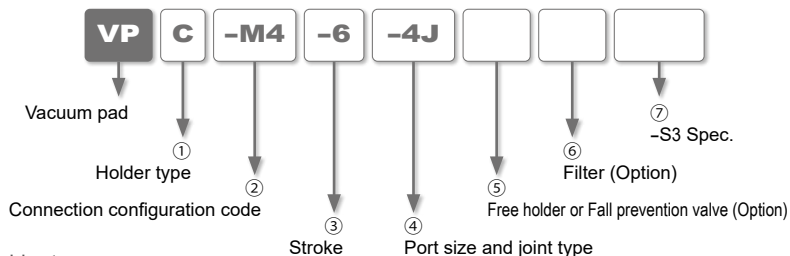

① .Holder type

Code	Mini	MA	MB	MC	MD	ME	-
	Slim	-	-	SC	-	-	-
	Standard ※4	A	B	C	D	E	F
	No cover	-	-	OC	OD	-	-
	※ 1	-	-	LFC	-	-	-
	※ 2	A-E	B-E	-	-	-	-
Type		Fixed type Top port 	Fixed type Side port 	Spring type Top port 	Spring type Side port 	Fixed type Direct mount 	Spring type Direct mount 
※ 3		HC	HD	HDW	HE	HEW	
Type		Spring type Top port 	Spring type Side port 	Spring type Dual side port 	Fixed type Side port 	Fixed type Dual side port 	

※ 1. Holder code : LFC is Low dust emission holder

※ 2. Holder code : A-E and B-E are for Oval series vacuum pad.

※ 3. Holder code : HC, HD, HDW, HE and HEW are for Soft series and Soft Bellows vacuum pad.

※ 4. Holder code : A and E includes special holders for vacuum pad for packaging bag.

② .Connection configuration code

Holder type		Mini	Standard						For specific pad				
		Low dust emission	Slim		Low dust emission	No cover							
				Low dust emission		Low dust emission							
Code		-T4	-H3	-T8	-M4	-M6	-M10	-M20	-T15	-T40	-PB15	-E10	-E20
Connection type		Mount	Insert	Mount	Screw				Mount				
Pad type	Standard	General	○	○	○	○	○	○					
		Deep			○	○	○						
		Small	○										
		Soft			○	○			○	○			
		Soft Bellows			○	○			○	○			
		Skidproof			○	○							
		Bellows		○	○	○	○						
		Multi-bellows			○	○							
		For packaging bag									○		
		Ultrathin		○									
		Flat			○	○							
		Mark-free			○	○							
		Sponge				○	○	○					
		Oval					○					○	○

③. Stroke (No code entry for Holder code : MA, A, MB, B and F)

Code	-2	-3	-4	-5	-6	-9	-10	-15	-20	-30	-40	-50
Stroke (mm)	2	3	4	5	6	9	10	15	20	30	40	50
Pad holder code	VPMC (-T4, -T8)		(-M4, -M6)									
	VPSC	(-H3, -T8)										
	VPC	(-H3, -T8)			(-M4, -M6)		(-M4, -M6, -M10)	(-M4, -M6)	(-M4, -M6, -M20)			
	VPOC								(-M6)	(-M6)	(-M6)	(-M6)
	VP LFC	(-T4, -T8, -M4)		(-T4, -T8, -M4, -M6)			(-T4, -T8, -M4, -M6)	(-T4, -T8, -M4, -M6)				
	VP HC					(-T15, -T40)						
	VP MD	(-T4, -T8)	(-M4, -M6)									
	VP D	(-H3, -T8)			(-M4, -M6)		(-M4, -M6, -M10)	(-M4, -M6)	(-M4, -M6, -M20)			
	VPOD								(-M6)	(-M6)	(-M6)	(-M6)
	VP HD			(-T15, -T40)								
	VP HDW			(-T15, -T40)								

※. Code in (): Connection configuration code.

④. Port size and joint type

Joint type		Push-in fitting (mm)								Barb fitting (mm)			Female / Male thread									
Code		-180J	-2J	-3J	-4J	-6J	-8J	-10J	-12J	-3B	-4B	-6B	-M3	-M5	-M6	-M8	-M14	-G1	-G2	-G3	-G4	
Size	Tube O.D.	ø1.8	ø2	ø3	ø4	ø6	ø8	ø10	ø12													
	Tube I.D.									ø2	ø2.5	ø4										
	F. thread size												M3×0.5	M5×0.8	M6×1			G1/8	G1/4			
	M. thread size													M5×0.8	M6×1	M8×1	M14×1	G1/8	G1/4	G3/8	G1/2	
Connection config. code	-T4	○	○	○	○					○	○	○	○									
	-H3	○	○	○	○	○				○	○	○	○									
	-T8	○	○	○	○	○				○	○	○	○									
	-M4	○	○	○	○	○				○	○	○		○	○							
	-M6	○	○	○	○	○				○	○	○		○	○							
	-M10				○	○	○											○				
	-M20					○	○	○	○										○			
	-T15	○	○	○	○	○				○	○	○		○								
	-T40	○	○	○	○	○				○	○	○		○								
	-PB15					○	○	○	○					○	○	○	○	○	○	○	○	
-E10	○	○	○	○	○					○	○	○		○								
-E20	○	○	○	○	○					○	○	○		○								

※. Joint size differs depending on the holder type. Check the joint size by the holder dimensions lists in following pages.

⑤. Free holder or Fall prevention valve (Option) ⑥. Filter (Option)

Code	FH	FHH	ECV	Code	F15	F30
Option	Free holder articulation angle : 30°	Free holder articulation angle : 15°	Fall prevention valve	Connection config. code	-M4, -M6	-M6

⑦. -S3 spec.

Code	No code	-S3
Spec.	Standard	Metal parts material : Copper alloy free material, Sealing parts material : FKM or HNBR

※. Free holder, Fall prevention valve and Filter are not available when "-S3" is selected.




Fixed type holder dimensions


VPMA Fixed type / Top port / Push-in fitting / Mini holder

RoHS Compliant ~~X~~ Copper alloy free available CAD (2D&3D)


VPMA-T4[4]

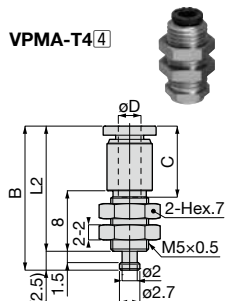


VPMA-T8[4]

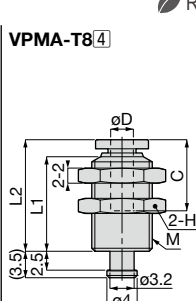

VPMA-M4[4][7]

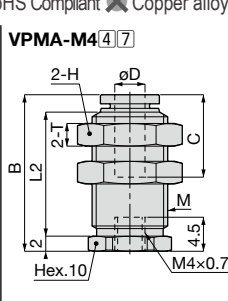

VPMA-M6-4J[7]

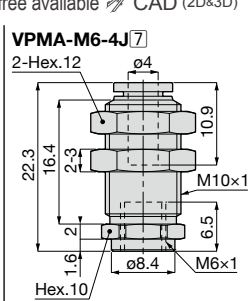

Unit : mm

Model code	Tube O.D. øD	Thread M	B	L1	L2	Tube end C	Hex. H	T	Connection config. code
VPMA-T4-180J	1.8	—	18.4	—	15.9	8.4	—	—	-T4
VPMA-T4-2J	2		19.1		16.6	9.4			
VPMA-T4-3J	3		19.1		16.6	9.4			
VPMA-T8-180J	1.8	M6×0.75	17.6	12	14.1	8.4	8	—	-T8
VPMA-T8-2J	2		18.3	12.5	14.8	9.4	10		
VPMA-T8-3J	3		16.8	—	12.5	9.4	10		
VPMA-M4-3J	3	M8×0.75	16.8		12.5	9.4	10	2	-M4
VPMA-M4-4J[7]	4	M10×1	20.7		16.4	10.9	12	3	
VPMA-M6-4J[7]	—	—	—	—	—	—	—	—	-M6

※ [7]: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts). -S3 spec. is available for model codes with [7] in the table above.

※ Tightening torque of a pad holder fixing bulkhead nut is as below.

•Connection config. code : -T4 ▶ 1.5~2N·m. •Connection config. code : -T8 and Tube O.D. : ø1.8, ø2mm ▶ 2~3N·m.

•Connection config. code : -T8 and Tube O.D. : ø3mm ▶ 2.5~3.5N·m.


•Connection config. code : -M4 and Tube O.D. : ø3mm ▶ 2.5~3.5N·m.

•Connection config. code : -M4 and Tube O.D. : ø4mm and -M6 ▶ 5~7N·m.


VPMA Fixed type / Top port / Barb fitting / Mini holder

RoHS Compliant ~~Copper alloy~~ free available CAD (2D&3D)


VPMA-T4⁴₇

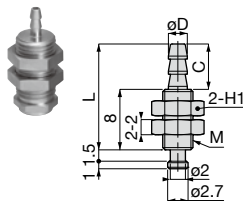


VPMA-T8⁴₇

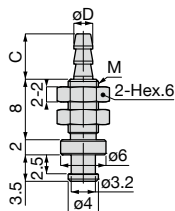

VPMA-M4⁴₇

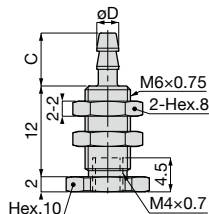

VPMA-M6⁴₇

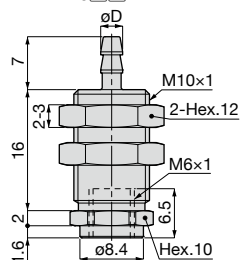

Unit : mm

Model code	Tube I.D. øD	Thread M	L	C	Hex. H	Connection config. code
VPMA-T4-3B ⁷	2	M4×0.5	14	6	6	-T4
VPMA-T4-4B ⁷	2.5	M5×0.5	15	7	7	
VPMA-T8-3B ⁷	2	M4×0.5	—	6	—	-T8
VPMA-T8-4B ⁷	2.5	M5×0.5		7		
VPMA-M4-3B ⁷	2	—	—	6	—	-M4
VPMA-M4-4B ⁷	2.5			7		
VPMA-M6-4B ⁷	2.5	—	—	—	—	-M6
VPMA-M6-6B ⁷	4					

※ ⁷: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts).

※ Tightening torque of a pad holder fixing bulkhead nut is as below.

- Connection config. code : -T4, -T8 and Thread size : M4×0.5 ▶ 1~1.2N·m.
- Connection config. code : -T4, -T8 and Thread size : M5×0.5 ▶ 1.5~2N·m.
- Connection config. code : -M4 ▶ 2~3N·m. •Connection config. code : -M6 ▶ 5~7N·m

VPA



oper







oy fr

ava

ole

CAI

2D&3

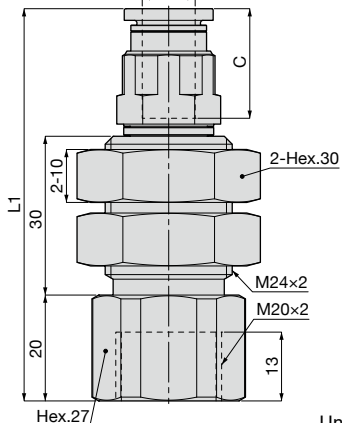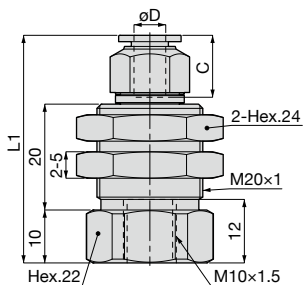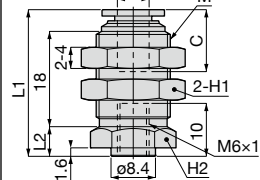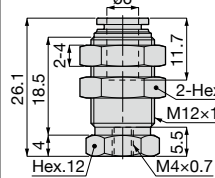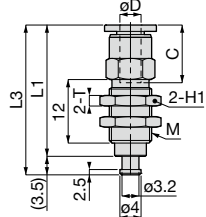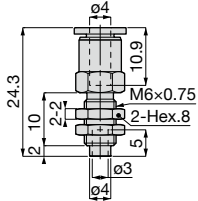

Unit : mm

Model code	Tube O.D. øD	Thread M	L1	L2	L3	Tube end C	Hex. H1	Hex. H2	T	Connection config. code
VPA-H3-4J[7]	—	—	—	—	—	—	—	—	—	—H3
VPA-T8-4J[7]	4	M8×0.75	24.8	—	28.3	10.9	10	—	2	—T8
VPA-T8-6J[7]	6	M10×1	25.6		29.1	11.7	12		3	
VPA-M4-6J[7]	—	—	—	—	—	—	—	—	—	—M4
VPA-M6-3J	3	M12×1	36.7	6	—	10.9	14	12	—	—M6
VPA-M6-4J[7]	4									
VPA-M6-6J[7]	6	M14×1	27.7	5.6	—	11.7	17	14	—	—M10
VPA-M10-4J	4	—	40.3	—		10.9	—	—		
VPA-M10-6J	6		42.6		11.7					
VPA-M10-8J	8	—	51.2	—	—	18.2	—	—	—	—M20
VPA-M20-6J	6		66			17				
VPA-M20-8J	8		66.7			18.2				
VPA-M20-10J	10		73.7			20.7				
VPA-M20-12J	12		78.9			23.3				

※ [7]: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts). -S3 spec. is available for model codes with [7] in the table above.

※ Tightening torque of a pad holder fixing bulkhead nut is as below.

Connection config. code	-H3	-T8	-M4	-M6	-M10	-M20
Tightening torque (N·m)	2~3	5~7	12~14	18~21	19~21	40~50





VPMB



Copper alloy free available



CAD (2D&3D)

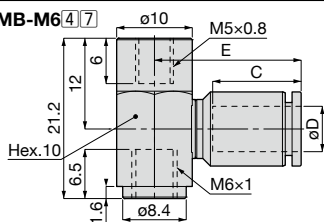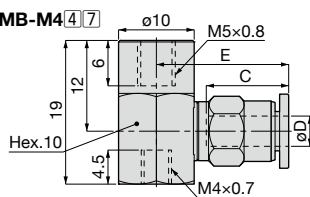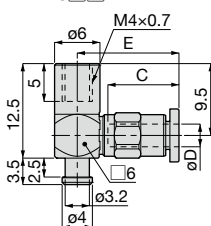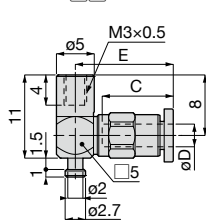

Unit : mm


Model code	Tube O.D. øD	E	Tube end C	Connection config. code
VPMB-T4-180J	1.8	12	8.4	-T4
VPMB-T4-2J	2			
VPMB-T4-3J	3			
VPMB-T4-4J ^[7]	4			
VPMB-T8-180J	1.8	12.5	8.4	-T8
VPMB-T8-2J	2			
VPMB-T8-3J	3			
VPMB-T8-4J ^[7]	4			
VPMB-M4-180J	1.8	13.7	8.4	-M4
VPMB-M4-2J	2			
VPMB-M4-3J	3			
VPMB-M4-4J ^[7]	4			
VPMB-M4-6J ^[7]	6	19.4	11.7	
VPMB-M6-180J	1.8	13.7	8.4	-M6
VPMB-M6-2J	2			
VPMB-M6-3J	3			
VPMB-M6-4J ^[7]	4			
VPMB-M6-6J ^[7]	6	19.4	11.7	

※. [7]: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts).


VPMB Fixed type / Side port / Barb fitting / Mini holder

RoHS Compliant  Copper alloy free available  CAD (2D&3D)


VPMB-T4^[4]^[7]

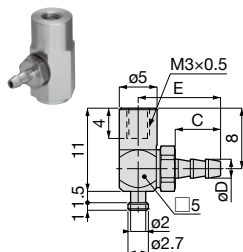


VPMB-T8^[4]^[7]

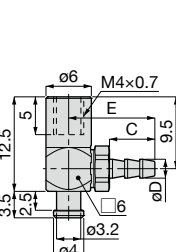

VPMB-M4^[4]^[7]

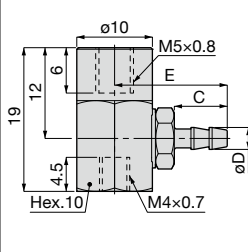

VPMB-M6^[4]^[7]

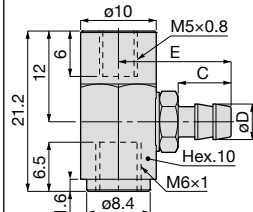

Unit : mm

Model code	Tube I.D. øD	E	C	Connection config. code
VPMB-T4-3B ^[7]	2	10.9	6	-T4
VPMB-T4-4B ^[7]	2.5	11.9	7	
VPMB-T4-6B ^[7]	4			
VPMB-T8-3B ^[7]	2	11.4	6	-T8
VPMB-T8-4B ^[7]	2.5	12.4	7	
VPMB-T8-6B ^[7]	4			
VPMB-M4-3B ^[7]	2	13.4	6	-M4
VPMB-M4-4B ^[7]	2.5	14.9	7	
VPMB-M4-6B ^[7]	4			
VPMB-M6-3B ^[7]	2	13.4	6	-M6
VPMB-M6-4B ^[7]	2.5	14.9	7	
VPMB-M6-6B ^[7]	4			


※ [7]: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts).

1126


VPMB Fixed type / Side port / Female thread / Mini holder

RoHS Compliant  Copper alloy free available  CAD (2D&3D)


VPMB-T4-M3^[7]

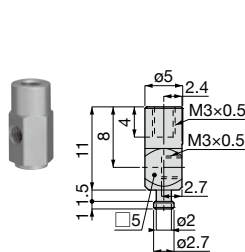


VPMB-T8-M3^[7]

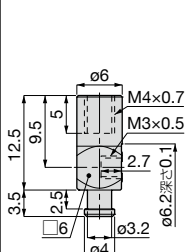

VPMB-M4-M5^[7]

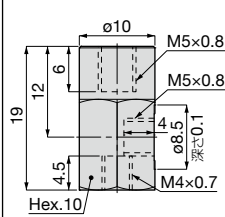

VPMB-M6-M5^[7]

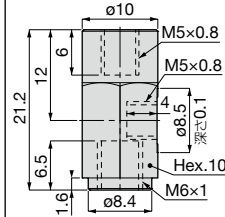

Unit : mm

Model code	Connection config. code
VPMB-T4-M3 ^[7]	-T4
VPMB-T8-M3 ^[7]	-T8
VPMB-M4-M5 ^[7]	-M4
VPMB-M6-M5 ^[7]	-M6

※ [7]: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts).


VPB

Copper alloy free available




CAD (2D&3D)


VPB-H347

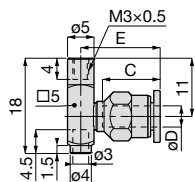




VPB-T847

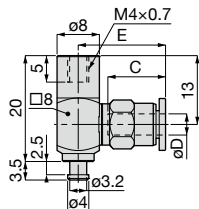

VPB-M447

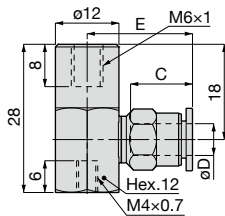

VPB-M647

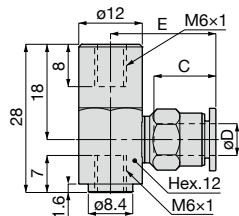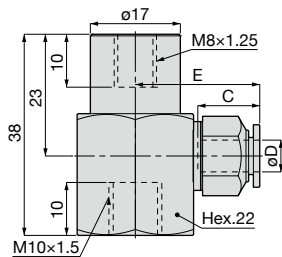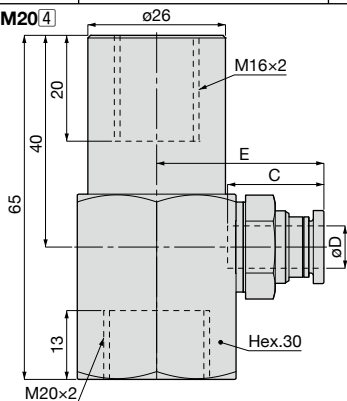VPB-M10⁴VPB-M20⁴

Unit : mm

Model code	Tube O.D. øD	E	Tube end C	Connection config. code
VPB-H3-180J	1.8	12	8.4	-H3
VPB-H3-2J	2			
VPB-H3-3J	3			
VPB-H3-4J ^[7]	4			
VPB-T8-180J	1.8	12.7	8.4	-T8
VPB-T8-2J	2			
VPB-T8-3J	3	16.5	10.9	
VPB-T8-4J ^[7]	4			
VPB-T8-6J ^[7]	6			
VPB-M4-3J	3	18.6	10.9	
VPB-M4-4J ^[7]	4			
VPB-M4-6J ^[7]	6			
VPB-M6-3J	3	18.6	10.9	-M6
VPB-M6-4J ^[7]	4			
VPB-M6-6J ^[7]	6			
VPB-M10-4J	4	21.2	10.9	-M10
VPB-M10-6J	6	23.5	11.7	
VPB-M10-8J	8	32.1	18.2	
VPB-M20-6J	6	30.9	17	-M20
VPB-M20-8J	8	31.6	18.2	
VPB-M20-10J	10	38.6	20.7	

※ ^[7]: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts). -S3 spec. is available for model codes with ^[7] in the table above.

VPB




S Compliant ☒ Copper alloy free available




CAD (2D&3D)



VPB-H347



VPB-T847



VPB-M447



VPB-M647

Unit : mm


Model code	Tube I.D. øD	E	C	Connection config. code
VPB-H3-3B[7]	2	10.9	6	-H3
VPB-H3-4B[7]	2.5	11.9	7	
VPB-H3-6B[7]	4			
VPB-T8-3B[7]	2	12.4	6	-T8
VPB-T8-4B[7]	2.5	13.9	7	
VPB-T8-6B[7]	4			
VPB-M4-4B[7]	2.5	—	—	-M4
VPB-M4-6B[7]	4			
VPB-M6-4B[7]	2.5	—	—	-M6
VPB-M6-6B[7]	4			

※. [7]: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts).


VPB Fixed type / Side port / Female thread / Standard holder

RoHS Compliant  Copper alloy free available  CAD (2D&3D)


VPB-H3-M3 [7]

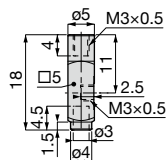


VPB-T8-M5 [7]

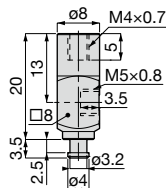


VPB-M4-M5 [7]

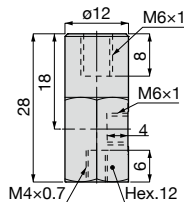


VPB-M6-M6 [7]

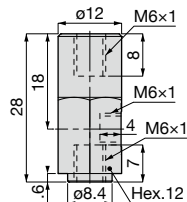

VPB-M10-G1 [7]

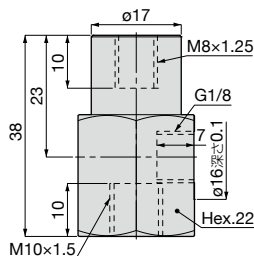

VPB-M20-G2 [7]

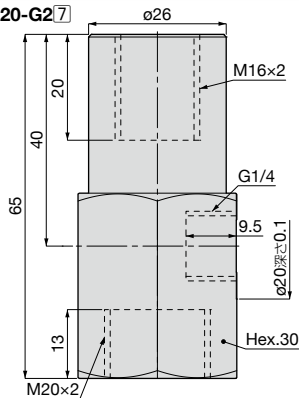

Unit : mm

Model code	Connection config. code
VPB-H3-M3 [7]	-H3
VPB-T8-M5 [7]	-T8
VPB-M4-M5 [7]	-M4
VPB-M6-M6 [7]	-M6
VPB-M10-G1 [7]	-M10
VPB-M20-G2 [7]	-M20


※ [7]: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts).




VPME Fixed type / Direct mount / Mini holder

RoHS Compliant Copper alloy free available CAD (2D&3D)

VPME-T4-M3^[7]

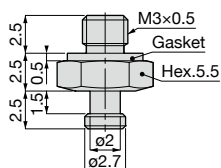

VPME-T8-M5^[7]

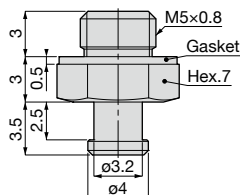

Unit : mm


Model code	Connection config. code
VPME-T4-M3 ^[7]	-T4
VPME-T8-M5 ^[7]	-T8

※ [7]: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts).


VPE Fixed type / Direct mount / Standard holder

RoHS Compliant Copper alloy free available CAD (2D&3D)

VPE-H3-M3^[7]

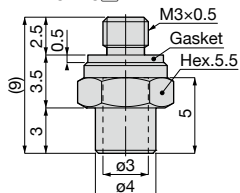

VPE-T8-M5^[7]

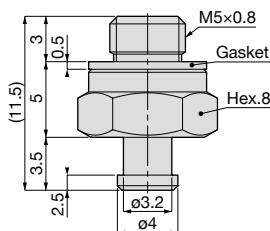

Unit : mm

Model code	Connection config. code
VPE-H3-M3 ^[7]	-H3
VPE-T8-M5 ^[7]	-T8

※ [7]: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts).


Spring type holder dimensions

VPMC Spring type / Top port / Push-in fitting / Mini holder


RoHS Compliant  Copper alloy free available  CAD (2D&3D)

Stroke (mm)
2, 4


VPMC-T4-2[4]

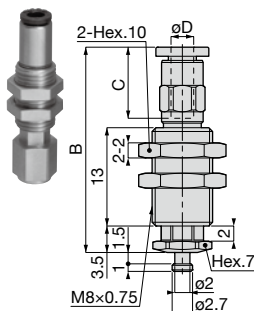


VPMC-T8-2[4]

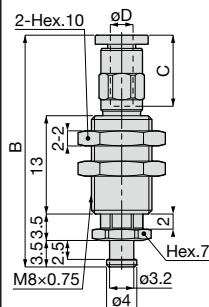

VPMC-M4-4[4][7]

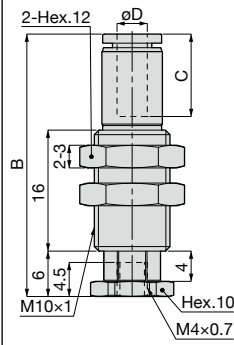

VPMC-M6-4[4][7]

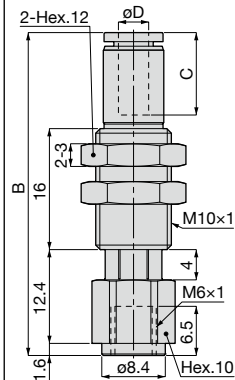

Unit : mm

Model code	Tube O.D. øD	B	Tube end C	Spring force (N)	Connection config. code
VPMC-T4-2-180J	1.8	26.2	8.4	0.2~0.3	-T4
VPMC-T4-2-2J	2		8.4		
VPMC-T4-2-3J	3	27.2	9.4	0.5~0.6	-T8
VPMC-T8-2-180J	1.8	29.7	8.4		
VPMC-T8-2-2J	2		8.4		
VPMC-T8-2-3J	3	30.7	9.4	1~1.3	-M4
VPMC-M4-4-180J	1.8	30.9	8.4		
VPMC-M4-4-2J	2		8.4		
VPMC-M4-4-3J	3	34.7	10.9		
VPMC-M4-4-4J[7]	4		10.9		
VPMC-M6-4-180J	1.8	38.9	8.4	1~1.3	-M6
VPMC-M6-4-2J	2		8.4		
VPMC-M6-4-3J	3	42.7	10.9		
VPMC-M6-4-4J[7]	4		10.9		

※ : 7: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts). -S3 spec. is available for model codes with [7] in the table above.

※ : Tightening torque of a pad holder fixing bulkhead nut is as below.

Connection config. code	-T4	-T8	-M4	-M6
Tightening torque (N·m)	2.5~3.5		4~6	




VPMC Spring type / Top port / Barb fitting / Mini holder


RoHS Compliant Copper alloy free available CAD (2D&3D)

Stroke (mm)
2, 4


VPMC-T4-2⁴₇

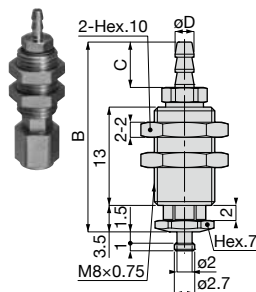


VPMC-T8-2⁴₇

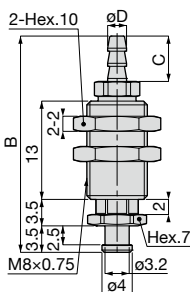

VPMC-M4-4⁴₇

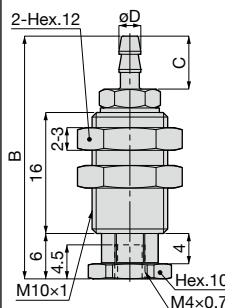

VPMC-M6-4⁴₇

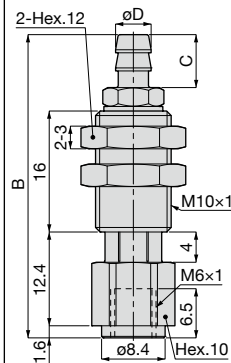

Unit : mm

Model code	Tube I.D. øD	B	C	Spring force (N)	Connection config. code
VPMC-T4-2-3B ⁷	2	25.1	6	0.2~0.3	-T4
VPMC-T4-2-4B ⁷	2.5	26.1	7		
VPMC-T4-2-6B ⁷	4				
VPMC-T8-2-3B ⁷	2	28.6	6	0.5~0.6	-T8
VPMC-T8-2-4B ⁷	2.5	29.6	7		
VPMC-T8-2-6B ⁷	4				
VPMC-M4-4-3B ⁷	2	30.6	6	1~1.3	-M4
VPMC-M4-4-4B ⁷	2.5	32.1	7		
VPMC-M4-4-6B ⁷	4				
VPMC-M6-4-3B ⁷	2	38.6	6	1~1.3	-M6
VPMC-M6-4-4B ⁷	2.5	40.1	7		
VPMC-M6-4-6B ⁷	4				


※ ⁷: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts). -S3 spec. is available for model codes with ⁷ in the table above.

※ Tightening torque of a pad holder fixing bulkhead nut is as below.

Connection config. code	-T4	-T8	-M4	-M6
Tightening torque (N·m)	2.5~3.5		4~6	

VPSC Spring type / Top port / Barb fitting / Slim holder

 RoHS Compliant  Copper alloy free available  CAD (2D&3D)

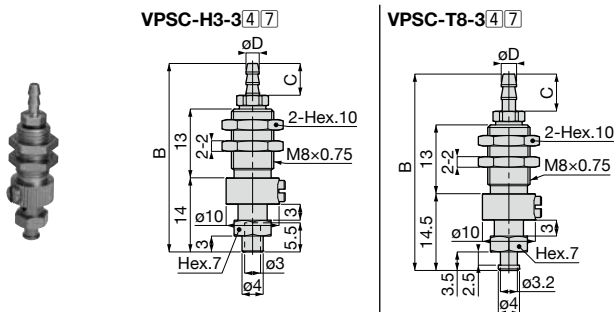

Stroke (mm)
3

Unit : mm

Model code	Tube I.D. øD	B	C	Spring force (N)	Connection config. code
VPSC-H3-3-3B ^[7]	2	35.6	6	0.9～1.9	-H3
VPSC-H3-3-4B ^[7]	2.5	36.6	7		
VPSC-H3-3-6B ^[7]	4				
VPSC-T8-3-3B ^[7]	2	36.1	6	0.9～1.9	-T8
VPSC-T8-3-4B ^[7]	2.5	37.1	7		
VPSC-T8-3-6B ^[7]	4				


※ [7]: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts). -S3 spec. is available for model codes with [7] in the table above.

※ Tightening torque of a pad holder fixing bulkhead nut is as below.

Connection config. code	-H3	-T8
Tightening torque (N·m)	1.8~2.4	

VPSC Spring type / Top port / Female thread / Slim holder

 RoHS Compliant  Copper alloy free available  CAD (2D&3D)

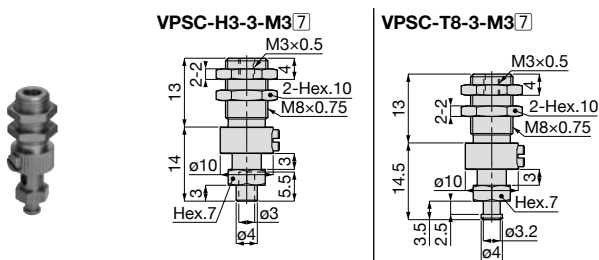

Stroke (mm)
3

Unit : mm

Model code	Spring force (N)	Connection config. code
VPSC-H3-3-M3 ^[7]	0.9 ~ 1.9	-H3
VPSC-T8-3-M3 ^[7]	0.9 ~ 1.9	-T8

※ [7]: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts). -S3 spec. is available for model codes with [7] in the table above.

※ Tightening torque of a pad holder fixing bulkhead nut is as below.


Connection config. code	-H3	-T8
Tightening torque (N·m)	1.8~2.4	




RoHS Compliant Copper alloy free available CAD (2D&3D)

Stroke (mm)
3,6,10,15,20


VPC-T8_{3 4 7}

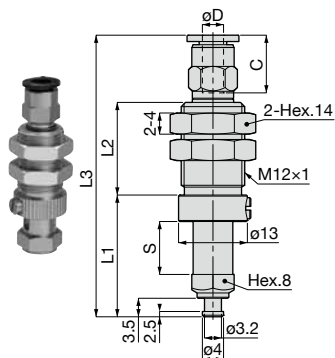

VPC-M4_{3 4 7}

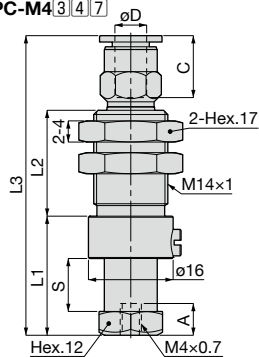

VPC-M6_{3 4 7}

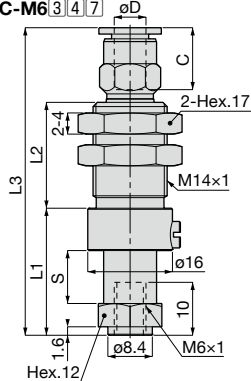

Unit : mm

Model code	Tube O.D. ød	L1	L2	L3	Tube end C	Stroke S	Spring force (N)	Connection config. code	
VPC-T8-3-180J	1.8	16	13	37.9	8.4	3	0.9 ~ 1.9	-T8	
VPC-T8-3-2J	2			41.7	10.9				
VPC-T8-3-3J	3								
VPC-T8-3-4J ⁷⁾	4								
VPC-T8-3-6J ⁷⁾	6			43.6	11.7				
VPC-T8-10-180J	1.8	23	17.5	49.4	8.4	10	0.8 ~ 2.7		
VPC-T8-10-2J	2			53.2	10.9				
VPC-T8-10-3J	3								
VPC-T8-10-4J	4								
VPC-T8-10-6J	6			55.1	11.7				
VPC-T8-15-180J	1.8	28	23.5	60.4	8.4	15	0.7 ~ 3.0		
VPC-T8-15-2J	2			64.2	10.9				
VPC-T8-15-3J	3								
VPC-T8-15-4J	4								
VPC-T8-15-6J	6			66.1	11.7				
VPC-T8-20-180J	1.8	33	28.5	70.4	8.4	20	0.9 ~ 3.4		
VPC-T8-20-2J	2			74.2	10.9				
VPC-T8-20-3J	3								
VPC-T8-20-4J	4								
VPC-T8-20-6J	6			76.1	11.7				

Unit : mm


Model code	Tube O.D. ød	A	L1	L2	L3	Tube end C	Stroke S	Spring force (N)	Connection config. code
VPC-M4-6-3J	3	4	18	20	50.7	10.9	6	4.0 ~ 7.1	-M4
VPC-M4-6-4J ^[7]	4				52.1	11.7			
VPC-M4-6-6J ^[7]	6				55.2	10.9			
VPC-M4-10-3J	3	6	22.5	25	56.6	11.7	10	2.0 ~ 5.2	
VPC-M4-10-4J	4				65.2	10.9			
VPC-M4-10-6J	6				66.6	11.7			
VPC-M4-15-3J	3		27.5	25	81.2	10.9	15	2.0 ~ 5.9	
VPC-M4-15-4J	4				82.6	11.7			
VPC-M4-15-6J	6		34.5	34	50.7	10.9	20	1.1 ~ 4.8	
VPC-M4-20-3J	3				52.1	11.7			
VPC-M4-20-4J	4				56.7	10.9			
VPC-M4-20-6J	6	—	18	20	58.1	11.7	6	7.0 ~ 12.6	-M6
VPC-M6-6-3J	3				52.1	11.7			
VPC-M6-6-4J ^[7]	4				56.7	10.9			
VPC-M6-6-6J ^[7]	6		24	25	66.7	10.9	15	3.3 ~ 10.4	
VPC-M6-10-3J	3				68.1	11.7			
VPC-M6-10-4J	4				82.7	10.9	20	2.0 ~ 8.7	
VPC-M6-10-6J	6		84.1	11.7					
VPC-M6-15-3J	3		29	25	81.2	10.9			
VPC-M6-15-4J	4				82.7	10.9			
VPC-M6-15-6J	6		36	34	50.7	10.9	20	2.0 ~ 8.7	
VPC-M6-20-3J	3				52.1	11.7			
VPC-M6-20-4J	4				56.7	10.9			
VPC-M6-20-6J	6	58.1			11.7				

※ .^[7]: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts). -S3 spec. is available for model codes with ^[7] in the table above.


※ . Tightening torque of a pad holder fixing bulkhead nut is as below.

Connection config. code	-T8	-M4	-M6
Tightening torque (N·m)	8~10	4.5~6	4.5~6

VPC-M10-10^[4]

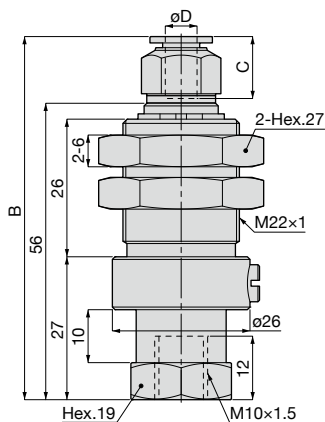

VPC-M20-20^[4]

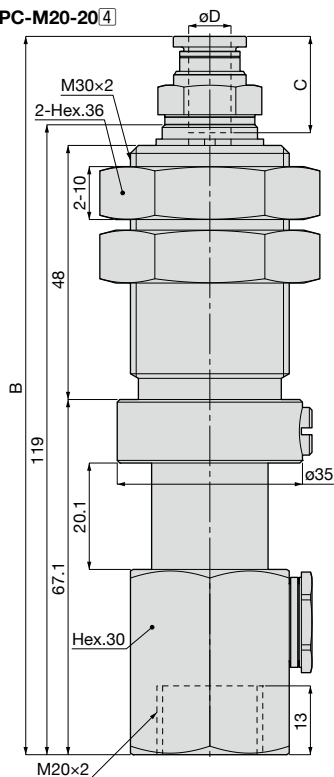

Unit : mm


Model code	Tube O.D. ød	B	Tube end C	Spring force (N)	Connection config. code
VPC-M10-10-4J	4	66.3	10.9	10.1 ~ 15.8	-M10
VPC-M10-10-6J	6	68.6	11.7		
VPC-M10-10-8J	8	77.2	18.2		
VPC-M20-20-6J	6	135	17	14.0 ~ 25.5	-M20
VPC-M20-20-8J	8	135.7	18.2		
VPC-M20-20-10J	10	142.7	20.7		
VPC-M20-20-12J	12	147.9	23.3		

※ Tightening torque of a pad holder fixing bulkhead nut is as below.

Connection config. code	-M10	-M20
Tightening torque (N·m)	16~20	42~54

VPC Spring type / Top port / Barb fitting / Standard holder

RoHS Compliant ~~Copper alloy~~ free available CAD (2D&3D)

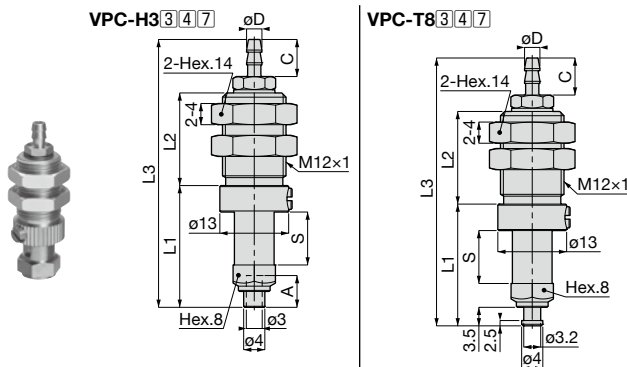

Stroke (mm)
3, 10, 15, 20

Unit : mm

Model code	Tube I.D. ød	A	L1	L2	L3	C	Stroke S	Spring force (N)	Connection config. code
VPC-H3-3-3B[7]	2	4.5	13.5	13	35.1	6	3	0.9 ~ 1.9	-H3
VPC-H3-3-4B[7]	2.5				36.6	7			
VPC-H3-3-6B[7]	4				49.1	6			
VPC-H3-10-3B	2	6	23	17.5	50.6	7	10	0.6 ~ 1.7	
VPC-H3-10-4B	2.5				60.1	6			
VPC-H3-10-6B	4				61.6	7			
VPC-H3-15-3B	2		28	23.5	70.1	6	15	0.4 ~ 1.7	
VPC-H3-15-4B	2.5				71.6	7			
VPC-H3-15-6B	4				71.6	7			
VPC-H3-20-3B	2	33	28.5	71.6	7	20	0.3 ~ 1.8		
VPC-H3-20-4B	2.5			71.6	7				
VPC-H3-20-6B	4			71.6	7				
VPC-T8-3-3B[7]	2	—	16	13	37.6	6	3	0.9 ~ 1.9	-T8
VPC-T8-3-4B[7]	2.5				39.1	7			
VPC-T8-3-6B[7]	4				49.1	6			
VPC-T8-10-3B	2		23	17.5	50.6	7	10	0.8 ~ 2.7	
VPC-T8-10-4B	2.5				60.1	6			
VPC-T8-10-6B	4				61.6	7			
VPC-T8-15-3B	2		28	23.5	70.1	6	15	0.7 ~ 3.0	
VPC-T8-15-4B	2.5				71.6	7			
VPC-T8-15-6B	4				71.6	7			
VPC-T8-20-3B	2		33	28.5	71.6	6	20	0.9 ~ 3.4	
VPC-T8-20-4B	2.5				71.6	7			
VPC-T8-20-6B	4				71.6	7			



※ [7]: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts).

※ Tightening torque of a pad holder fixing bulkhead nut is as below.

Connection config. code	-H3	-T8
Tightening torque (N·m)	8~10	

☒ Copper alloy free available

⚡ CAD (2D&3D)

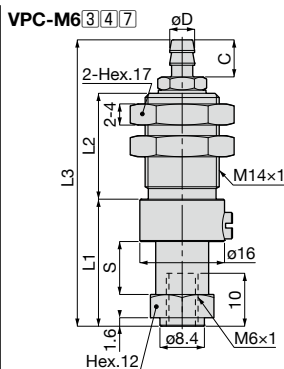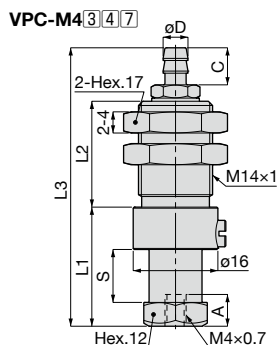

Stroke (mm)
6,10,15,20

Unit : mm

Model code	Tube I.D. ød	A	L1	L2	L3	Stroke S	Spring force (N)	Connection config. code
VPC-M4-6-4B ^[7]	2.5	4	18	20	48.1	6	4.0 ~ 7.1	-M4
VPC-M4-6-6B ^[7]	4							
VPC-M4-10-4B	2.5	6	22.5		52.6	10	2.0 ~ 5.2	
VPC-M4-10-6B	4							
VPC-M4-15-4B	2.5		27.5	25	62.6	15	2.0 ~ 5.9	
VPC-M4-15-6B	4							
VPC-M4-20-4B	2.5		34.5	34	78.6	20	1.1 ~ 4.8	
VPC-M4-20-6B	4							
VPC-M6-6-4B ^[7]	2.5	—	18	20	48.1	6	7.0 ~ 12.6	-M6
VPC-M6-6-6B ^[7]	4							
VPC-M6-10-4B	2.5		24		54.1	10	3.3 ~ 10.0	
VPC-M6-10-6B	4							
VPC-M6-15-4B	2.5		29	25	64.1	15	3.3 ~ 10.4	
VPC-M6-15-6B	4							
VPC-M6-20-4B	2.5		36	34	80.1	20	2.0 ~ 8.7	
VPC-M6-20-6B	4							

※. [7]: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts).

※ Tightening torque of a pad holder fixing bulkhead nut is as below.


Connection config. code	-M4	-M6
Tightening torque (N·m)	4.5~6	

VPC Spring type / Top port / Female thread / Standard holder


RoHS Compliant ~~Copper alloy~~ free available CAD (2D&3D)

Stroke (mm)
3,6,10,15,20


VPC-H3-3-M5

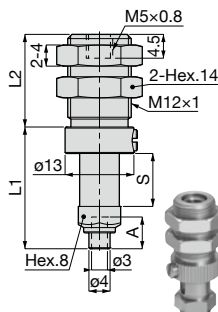


VPC-T8-3-M5

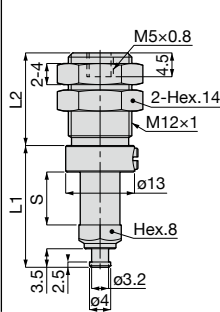

VPC-M4-3-M6

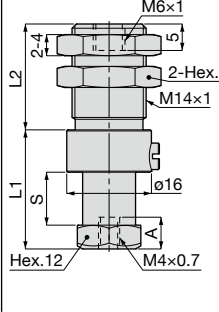

VPC-M6-3-M6

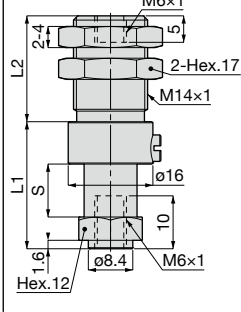

Unit : mm

Model code	A	L1	L2	Stroke S	Spring force (N)	Connection config. code
VPC-H3-3-M5	4.5	13.5	13	3	0.9 ~ 1.9	-H3
VPC-H3-10-M5	6	23	17.5	10	0.6 ~ 1.7	
VPC-H3-15-M5		28	23.5	15	0.4 ~ 1.7	
VPC-H3-20-M5		33	28.5	20	0.3 ~ 1.8	
VPC-T8-3-M5	—	16	13	3	0.9 ~ 1.9	-T8
VPC-T8-10-M5		23	17.5	10	0.8 ~ 2.7	
VPC-T8-15-M5		28	23.5	15	0.7 ~ 3.0	
VPC-T8-20-M5		33	28.5	20	0.9 ~ 3.4	
VPC-M4-6-M6	4	18	20	6	4.0 ~ 7.1	-M4
VPC-M4-10-M6	6	22.5		10	2.0 ~ 5.2	
VPC-M4-15-M6		27.5	25	15	2.0 ~ 5.9	
VPC-M4-20-M6		34.5	34	20	1.1 ~ 4.8	
VPC-M6-6-M6	—	18	20	6	7.0 ~ 12.6	-M6
VPC-M6-10-M6		24		10	3.3 ~ 10.0	
VPC-M6-15-M6		29	25	15	3.3 ~ 10.4	
VPC-M6-20-M6		36	34	20	2.0 ~ 8.7	

※ [7]: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts).


※ .Tightening torque of a pad holder fixing bulkhead nut is as below.

Connection config. code	-H3	-T8	-M4	-M6	-M10	-M20
Tightening torque (N·m)	8~10		4.5~6		16~20	42~54



RoHS Compliant Copper alloy free available CAD (2D&3D)


VPC-M10-10-G1[7]

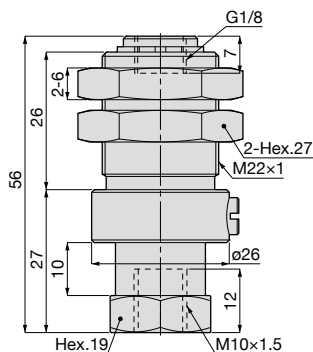

Unit : mm

Model code	Spring force (N)	Connection config. code
VPC-M10-10-G1[7]	10.1 ~ 15.8	-M10
VPC-M20-20-G2[7]	14.0 ~ 25.5	-M20

VPC-M20-20-G2[7]

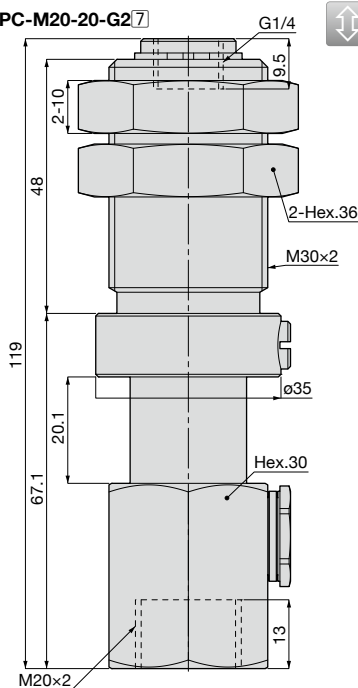

Stroke (mm)
10,20


- ※ [7]: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts).
 ※ Tightening torque of a pad holder fixing bulkhead nut is as below.

Connection config. code	-M10	-M20
Tightening torque (N·m)	16~20	42~54

VPOC Spring type / Top port / Push-in fitting / No cover holder

RoHS Compliant CAD (2D&3D)

Stroke (mm)
20,30,40,50

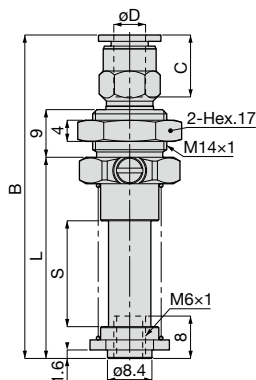

Unit : mm


Model code	Tube O.D. øD	B	L	Tube end C	Stroke S	Spring force (N)	Connection config. code
VPOC-M6-20-3J	3	59.7	38	10.9	20	1.5～4.9	-M6
VPOC-M6-20-4J	4			11.7			
VPOC-M6-20-6J	6						
VPOC-M6-30-3J	3	72.7	51	10.9	30	1.1～4.8	
VPOC-M6-30-4J	4			11.7			
VPOC-M6-30-6J	6						
VPOC-M6-40-3J	3	85.7	64	10.9	40	1.0～4.5	
VPOC-M6-40-4J	4			11.7			
VPOC-M6-40-6J	6						
VPOC-M6-50-3J	3	98.7	77	10.9	50	0.9～4.5	
VPOC-M6-50-4J	4			11.7			
VPOC-M6-50-6J	6						

※ .Tightening torque of a pad holder fixing bulkhead nut is 4~6N·m.



VPOC Spring type / Top port / Barb fitting / No cover holder

RoHS Compliant CAD (2D&3D)

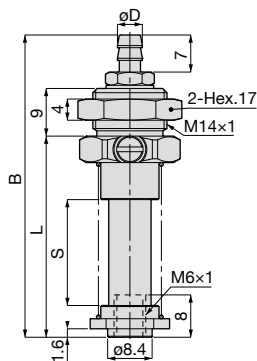

Stroke (mm)
20,30,40,50


Unit : mm

Model code	Tube I.D. øD	B	L	Stroke S	Spring force (N)	Connection config. code
VPOC-M6-20-4B	2.5	57.1	38	20	1.5～4.9	-M6
VPOC-M6-20-6B	4					
VPOC-M6-30-4B	2.5	70.1	51	30	1.1～4.8	
VPOC-M6-30-6B	4					
VPOC-M6-40-4B	2.5	83.1	64	40	1.0～4.5	
VPOC-M6-40-6B	4					
VPOC-M6-50-4B	2.5	96.1	77	50	0.9～4.5	
VPOC-M6-50-6B	4					

※ .Tightening torque of a pad holder fixing bulkhead nut is 4~6N·m.

VPOC Spring type / Top port / Female thread / No cover holder

RoHS Compliant CAD (2D&3D)

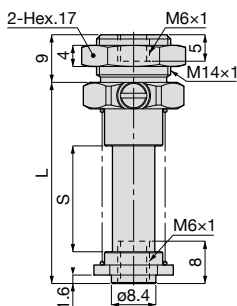

Stroke (mm)
20,30,40,50

Unit : mm


Model code	L	Stroke S	Spring force (N)	Connection config. code
VPOC-M6-20-M6	38	20	1.5~4.9	-M6
VPOC-M6-30-M6	51	30	1.1~4.8	
VPOC-M6-40-M6	64	40	1.0~4.5	
VPOC-M6-50-M6	77	50	0.9~4.5	

※ .Tightening torque of a pad holder fixing bulkhead nut is 4~6N·m.


VPMD Spring type / Side port / Push-in fitting / Mini holder

RoHS Compliant  Copper alloy free available  CAD (2D&3D)


VPMD-T4-2 4 7

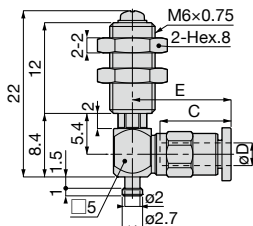


VPMD-T8-2 4 7

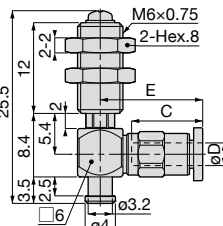

VPMD-M4-4 4 7

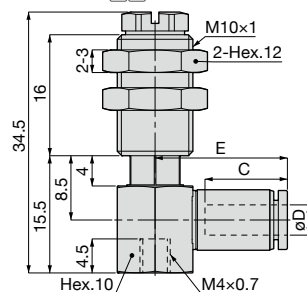

VPMD-M6-4 4 7

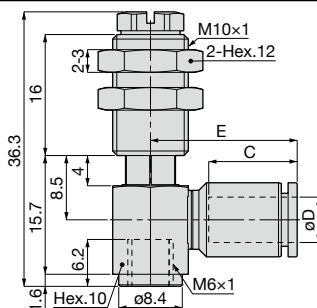

Stroke (mm)
2, 4

Unit : mm

Model code	Tube O.D. øD	E	Tube end C	Spring force (N)	Connection config. code
VPMD-T4-2-180J	1.8	12.1	8.4	0.2 ~ 0.3	-T4
VPMD-T4-2-2J	2				
VPMD-T4-2-3J	3		9.4		
VPMD-T4-2-4J 7	4	15.1	10.9	0.5 ~ 0.6	-T8
VPMD-T8-2-180J	1.8	12.6	8.4		
VPMD-T8-2-2J	2				
VPMD-T8-2-3J	3		9.4		
VPMD-T8-2-4J 7	4	15.6	10.9	1.0 ~ 1.3	-M4
VPMD-M4-4-180J	1.8	13.7	8.4		
VPMD-M4-4-2J	2				
VPMD-M4-4-3J	3		10.9		
VPMD-M4-4-4J 7	4	17.5	11.7	1.0 ~ 1.3	-M6
VPMD-M4-4-6J 7	6	19.4			
VPMD-M6-4-180J	1.8	13.7	8.4		
VPMD-M6-4-2J	2				
VPMD-M6-4-3J	3		10.9		
VPMD-M6-4-4J 7	4	17.5	11.7		
VPMD-M6-4-6J 7	6	19.4			

※ 7: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts). -S3 spec. is available for model codes with 7 in the table above.

※ Tightening torque of a pad holder fixing bulkhead nut is as below.

Connection config. code	-T4	-T8	-M4	-M6
Tightening torque (N·m)	2.5~3.5		4~6	

VPMD




5 Compliant ☒ Copper alloy free available




CAD (2D&3D)


VPMD-T4-247

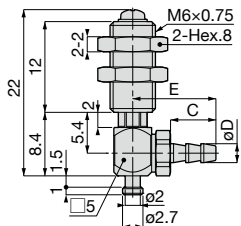


VPMD-T8-247

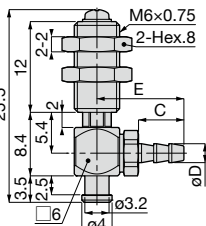

VPMD-M4-447

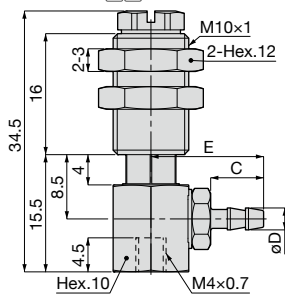

VPMD-M6-447

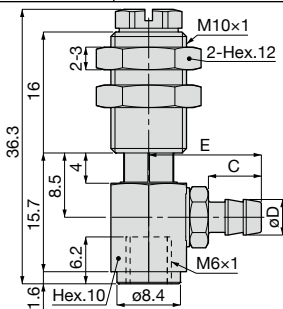

Stroke (mm)
2, 4

Unit : mm

Model code	Tube I.D. øD	E	Tube end C	Spring force (N)	Connection config. code
VPMD-T4-2-3B7	2	11	6	0.2 ~ 0.3	-T4
VPMD-T4-2-4B7	2.5	12	7		
VPMD-T4-2-6B7	4				
VPMD-T8-2-3B7	2	11.5	6	0.5 ~ 0.6	-T8
VPMD-T8-2-4B7	2.5	12.5	7		
VPMD-T8-2-6B7	4				
VPMD-M4-4-3B7	2	13.4	6	1.0 ~ 1.3	-M4
VPMD-M4-4-4B7	2.5	14.9	7		
VPMD-M4-4-6B7	4				
VPMD-M6-4-3B7	2	13.4	6	1.0 ~ 1.3	-M6
VPMD-M6-4-4B7	2.5	14.9	7		
VPMD-M6-4-6B7	4				

※ [7]: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts). -S3 spec. is available for model codes with [7] in the table above.

※ Tightening torque of a pad holder fixing bulkhead nut is as below.


Connection config. code	-T4	-T8	-M4	-M6
Tightening torque (N·m)	2.5~3.5		4~6	

※ .Visit our website for weight.


VPMD Spring type / Side port / Female thread / Mini holder

RoHS Compliant  Copper alloy free available  CAD (2D&3D)


VPMD-T4-2-M3

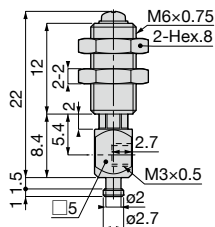


VPMD-T8-2-M3

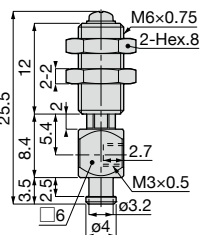

VPMD-M4-4-M5

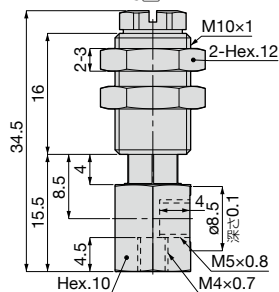

VPMD-M6-4-M5

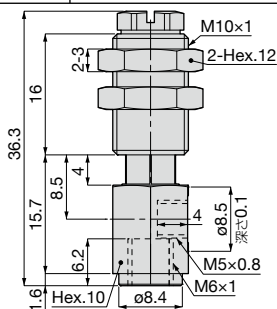

 Stroke (mm)
2, 4

Unit : mm

Model code	Spring force (N)	Connection config. code
VPMD-T4-2-M3 	0.2 ~ 0.3	-T4
VPMD-T8-2-M3 	0.5 ~ 0.6	-T8
VPMD-M4-4-M5 	1.0 ~ 1.3	-M4
VPMD-M6-4-M5 	1.0 ~ 1.3	-M6

※ .: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts). -S3 spec. is available for model codes with  in the table above.

※ .Tightening torque of a pad holder fixing bulkhead nut is as below.

Connection config. code	-T4	-T8	-M4	-M6
Tightening torque (N·m)	2.5~3.5		4~6	

※ .Visit our website for weight.




VPD Spring type / Side port / Push-in fitting / Standard holder


RoHS Compliant Copper alloy free available CAD (2D&3D)

Stroke (mm)
3,6,10,15,20


VPD-H3³₄⁷

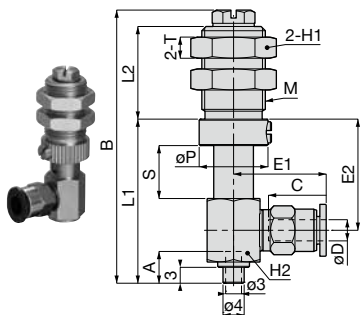

VPD-T8³₄⁷

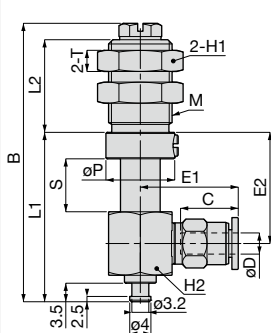

VPD-M4³₄⁷

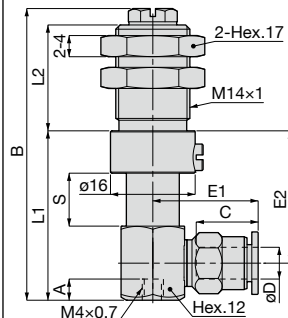

Unit : mm

Model code	Tube O.D. øD	Thread M	A	B	L1	L2	E1	E2	øP	Tube end C	Hex. H1	Hex. H2	T	Stroke S	Spring force (N)	Connection config. code																		
VPD-H3-3-180J	1.8	M6×0.75	4.5	36	20	13	12.7	12.5	10	8.4	10	□ 8	2	3	0.9 ~ 1.9	-H3																		
VPD-H3-3-2J	2						16.5			10.9																								
VPD-H3-3-3J	3																																	
VPD-H3-3-4J ⁷	4																																	
VPD-H3-3-6J ⁷	6						18.4		11.7																									
VPD-H3-10-180J	1.8	M12×1	6	51.6	31	17.5	13.7	21	13	8.4	14	10	4	10	0.6 ~ 1.7																			
VPD-H3-10-2J	2						17.5			10.9																								
VPD-H3-10-3J	3																																	
VPD-H3-10-4J	4																																	
VPD-H3-10-6J	6						18.9			11.7																								
VPD-H3-15-180J	1.8						62.6			36							23.5	13.7	26	13	8.4	14	10	4	15	0.4 ~ 1.7								
VPD-H3-15-2J	2			17.5				10.9																										
VPD-H3-15-3J	3																																	
VPD-H3-15-4J	4																																	
VPD-H3-15-6J	6			72.6	41	28.5	18.9	11.7	20	0.3 ~ 1.8																								
VPD-H3-20-180J	1.8						M12×1					6					13.7	31	13	8.4	14	10	4											
VPD-H3-20-2J	2	17.5															10.9																	
VPD-H3-20-3J	3																																	
VPD-H3-20-4J	4																																	
VPD-H3-20-6J	6	18.9	11.7																															

Unit : mm

Model code	Tube O.D. øD	Thread M	A	B	L1	L2	E1	E2	øP	Tube end C	Hex. H1	Hex. H2	T	Stroke S	Spring force (N)	Connection config. code
VPD-T8-3-180J	1.8	M8×0.75		37.5	21.5	13	12.7	13	10	8.4	10	□ 8	2	3	0.9~1.9	-T8
VPD-T8-3-2J	2															
VPD-T8-3-3J	3						16.5			10.9						
VPD-T8-3-4J ^[7]	4						18.4			11.7						
VPD-T8-3-6J ^[7]	6	M12×1	—	52.6	32	17.5	14.7	21		8.4	14	12		10	0.8~2.7	
VPD-T8-10-180J	1.8						18.5			10.9						
VPD-T8-10-2J	2						19.9			11.7						
VPD-T8-10-3J	3															
VPD-T8-10-4J	4															
VPD-T8-10-6J	6															
VPD-T8-15-180J	1.8			63.6	37	23.5	14.7	26	13	8.4			4	15	0.7~3.0	
VPD-T8-15-2J	2						18.5			10.9						
VPD-T8-15-3J	3						19.9			11.7						
VPD-T8-15-4J	4															
VPD-T8-15-6J	6															
VPD-T8-20-180J	1.8			73.6	42	28.5	14.7	31		8.4				20	0.9~3.4	
VPD-T8-20-2J	2						18.5			10.9						
VPD-T8-20-3J	3						19.9			11.7						
VPD-T8-20-4J	4															
VPD-T8-20-6J	6															
VPD-M4-6-3J	3	—	5.5	50.1	27	20	18.6	18.5		10.9	—	—	—	6	4.0~7.1	-M4
VPD-M4-6-4J ^[7]	4						19.9			11.7						
VPD-M4-6-6J ^[7]	6															
VPD-M4-10-3J	3		55.1	32		18.6	25	—	10.9	10	2.0~5.2					
VPD-M4-10-4J	4					19.9			11.7							
VPD-M4-10-6J	6															
VPD-M4-15-3J	3		65.1	37	25	18.6	30		10.9	15	2.0~5.9					
VPD-M4-15-4J	4					19.9			11.7							
VPD-M4-15-6J	6															
VPD-M4-20-3J	3		81.1	44	34	18.6	37		10.9	20	1.1~4.8					
VPD-M4-20-4J	4					19.9			11.7							
VPD-M4-20-6J	6															

※ ^[7]: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts). -S3 spec. is available for model codes with ^[7] in the table above.

※ Tightening torque of a pad holder fixing bulkhead nut is as below.


Connection config. code	-H3				-T8				-M4			
Stroke (mm)	3	10	15	20	3	10	15	20	6	10	15	20
Tightening torque (N·m)	1.8~2.4	8~10			1.8~2.4	8~10			4.5~6			




RoHS Compliant Copper alloy free available CAD (2D&3D)

Stroke (mm)
6, 10, 15, 20


VPD-M6³₄⁷

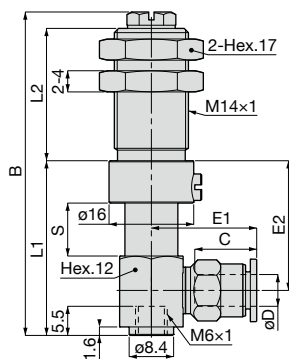

VPD-M10-10⁴

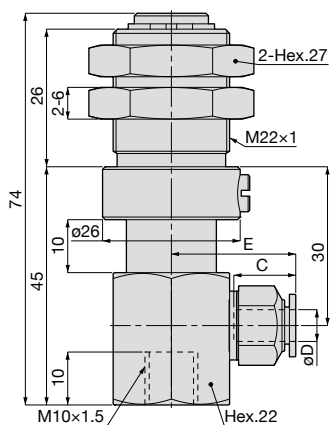

VPD-M20-20⁴

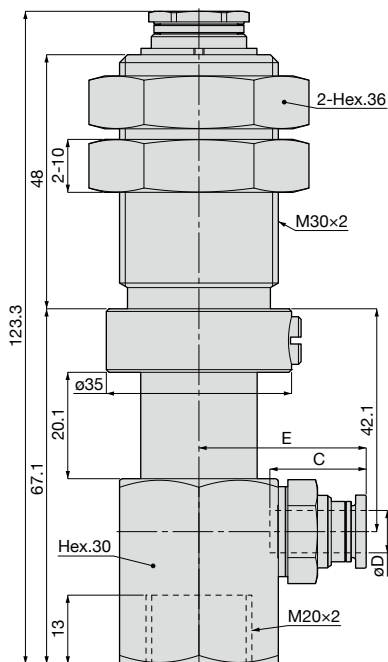

Unit : mm

Model code	Tube O.D. øD	B	L1	L2	E1	E2	Tube end C	Stroke S	Spring force (N)	Connection config. code
VPD-M6-6-3J	3	50.1	27	20	18.6	18.5	10.9	6	7.0 ~ 12.6	-M6
VPD-M6-6-4J ^[7]	4				19.9		11.7			
VPD-M6-6-6J ^[7]	6									
VPD-M6-10-3J	3	56.1	33	20	18.6	24.5	10.9	10	3.3 ~ 10.0	
VPD-M6-10-4J	4				19.9		11.7			
VPD-M6-10-6J	6									
VPD-M6-15-3J	3	66.1	38	25	18.6	29.5	10.9	15	3.3 ~ 10.4	
VPD-M6-15-4J	4				19.9		11.7			
VPD-M6-15-6J	6									
VPD-M6-20-3J	3	82.1	45	34	18.6	36.5	10.9	20	2.0 ~ 8.7	
VPD-M6-20-4J	4				19.9		11.7			
VPD-M6-20-6J	6									
VPD-M10-10-4J	4	—	—	—	21.2	—	10.9	—	10.1 ~ 15.8	-M10
VPD-M10-10-6J	6				23.5		11.7			
VPD-M10-10-8J	8				32.1		18.2			
VPD-M20-20-6J	6	—	—	—	30.9	—	17	—	14.0 ~ 25.5	-M20
VPD-M20-20-8J	8				31.6		18.2			
VPD-M20-20-10J	10				38.6		20.7			

※ ^[7]: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts). -S3 spec. is available for model codes with ^[7] in the table above.

※ Tightening torque of a pad holder fixing bulkhead nut is as below.

Connection config. code	-M6	-M10	-M20
Tightening torque (N·m)	4.5~6	16~20	42~54




VPD Spring type / Side port / Barb fitting / Standard holder


RoHS Compliant Copper alloy free available CAD (2D&3D)

Stroke (mm)
3,6,10,15,20


VPD-H3³₄⁷

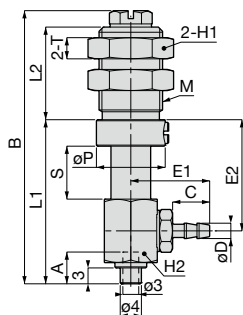


VPD-T8³₄⁷

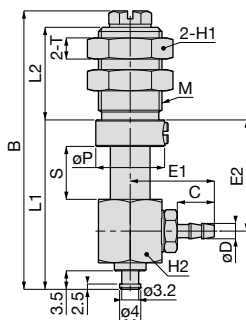

VPD-M4³₄⁷

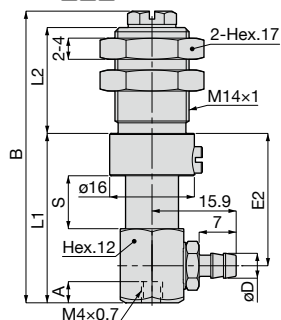

VPD-M6³₄⁷

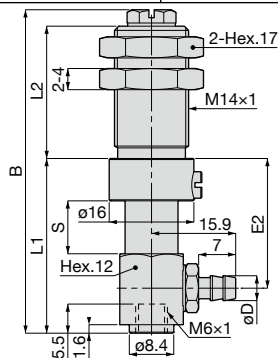

Unit : mm

Model code	Tube I.D. øD	Thread M	A	B	L1	L2	E1	E2	øP	C	Hex. H1	Hex. H2	T	Stroke S	Spring force (N)	Connection config. code
VPD-H3-3-3B7	2	M8×0.75	4.5	36	20	13	12.4	12.5	10	6	10	□ 8	2	3	0.9~1.9	-H3
VPD-H3-3-4B7	2.5						13.9			7						
VPD-H3-3-6B7	4															
VPD-H3-10-3B	2	M12×1	6	51.6	31	17.5	13.4	21	13	6	14	10	4	10	0.6~1.7	
VPD-H3-10-4B	2.5						14.9			7						
VPD-H3-10-6B	4															
VPD-H3-15-3B	2			62.6	36	23.5	13.4	26	6	15				0.4~1.7		
VPD-H3-15-4B	2.5						14.9		7							
VPD-H3-15-6B	4															
VPD-H3-20-3B	2			72.6	41	28.5	13.4	31	6	20				0.3~1.8		
VPD-H3-20-4B	2.5						14.9		7							
VPD-H3-20-6B	4															

Unit : mm

Model code	Tube I.D. øD	Thread M	A	B	L1	L2	E1	E2	øP	C	Hex. H1	Hex. H2	T	Stroke S	Spring force (N)	Connection config. code		
VPD-T8-3-3B[7]	2	M8×0.75	—	37.5	21.5	13	12.4	13	10	6	10	ø8	2	3	0.9~1.9	-T8		
VPD-T8-3-4B[7]	2.5						13.9			7								
VPD-T8-3-6B[7]	4																	
VPD-T8-10-3B	2	M12×1		52.6	32	17.5	14.4	21	13	6	14	12	4	10	0.8~2.7			
VPD-T8-10-4B	2.5						15.9			7								
VPD-T8-10-6B	4																	
VPD-T8-15-3B	2			63.6	37	23.5	14.4	26		6	15	0.7~3.0						
VPD-T8-15-4B	2.5						15.9			7								
VPD-T8-15-6B	4																	
VPD-T8-20-3B	2			73.6	42	28.5	14.4	31		6	20	0.9~3.4						
VPD-T8-20-4B	2.5						15.9			7								
VPD-T8-20-6B	4																	
VPD-M4-6-4B[7]	2.5	—	—	5.5	50.1	27	20	18.5	—	—	—	—	6	4.0~7.1	-M4			
VPD-M4-6-6B[7]	4												10	2.0~5.2				
VPD-M4-10-4B	2.5			4	55.1	32		25					25	15		2.0~5.9		
VPD-M4-10-6B	4												30	20		1.1~4.8		
VPD-M4-15-4B	2.5			65.1	37	25		25					37					
VPD-M4-15-6B	4																	
VPD-M4-20-4B	2.5			81.1	44	34		20										
VPD-M4-20-6B	4																	
VPD-M6-6-4B[7]	2.5	—	—	50.1	27	20	—	18.5	—	—	—	—	6	7.0~12.6	-M6			
VPD-M6-6-6B[7]	4												10	3.3~10.0				
VPD-M6-10-4B	2.5			56.1	33			25					24.5					
VPD-M6-10-6B	4												29.5					
VPD-M6-15-4B	2.5			66.1	38			25					34			36.5		
VPD-M6-15-6B	4																	
VPD-M6-20-4B	2.5			82.1	45			34					20					
VPD-M6-20-6B	4																	

※ [7]: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts). -S3 spec. is available for model codes with [7] in the table above.

※ Tightening torque of a pad holder fixing bulkhead nut is as below.

Connection config. code	-H3				-T8				-M4				-M6			
Stroke (mm)	3	10	15	20	3	10	15	20	6	10	15	20	6	10	15	20
Tightening torque (N·m)	1.8~2.4	8~10			1.8~2.4	8~10			4.5~6							




VPD Spring type / Side port / Female thread / Standard holder


RoHS Compliant Copper alloy free available CAD (2D&3D)

Stroke (mm)
3,6,10,15,20


VPD-H3³-M5⁷

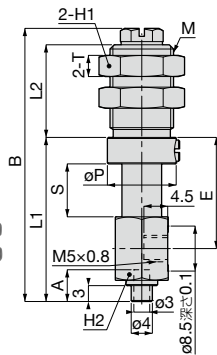


VPD-T8³-M5⁷

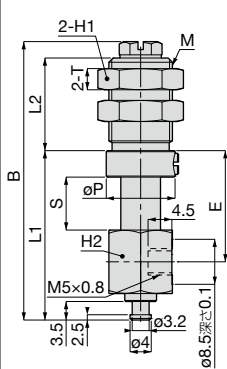


VPD-M4³-M6⁷

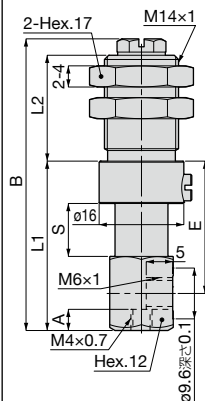


VPD-M6³-M6⁷

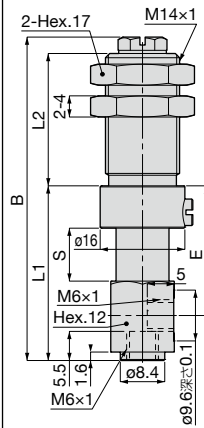

VPD-M10-10-G1⁷

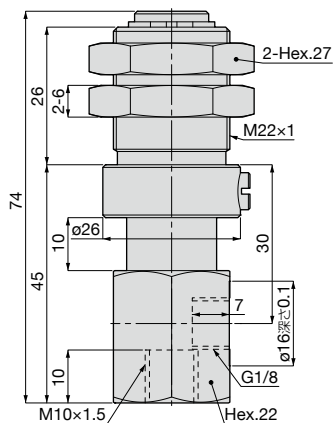

VPD-M20-20-G2⁷

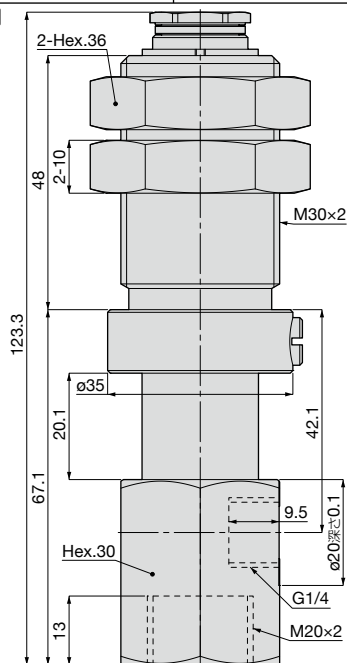

Unit : mm


Model code	Thread M	A	B	L1	L2	E	øP	Hex. H1	Hex. H2	T	Stroke S	Spring force (N)	Connection config. code
VPD-H3-3-M5 ^[7]	M8×0.75	4.5	36	20	13	12.5	10	10	□ 8	2	3	0.9 ~ 1.9	-H3
VPD-H3-10-M5	M12×1	6	51.6	31	17.5	21	13	14	10	4	10	0.6 ~ 1.7	
VPD-H3-15-M5			62.6	36	23.5	26					15	0.4 ~ 1.7	
VPD-H3-20-M5			72.6	41	28.5	31					20	0.3 ~ 1.8	
VPD-T8-3-M5 ^[7]	M8×0.75	—	37.5	21.5	13	13	10	10	□ 8	2	3	0.9 ~ 1.9	-T8
VPD-T8-10-M5	M12×1		52.6	32	17.5	21	13	14	12	4	10	0.8 ~ 2.7	
VPD-T8-15-M5			63.6	37	23.5	26					15	0.7 ~ 3.0	
VPD-T8-20-M5			73.6	42	28.5	31					20	0.9 ~ 3.4	
VPD-M4-6-M6 ^[7]	—	5.5	50.1	27	20	18.5	—	—	—	—	6	4.0 ~ 7.1	-M4
VPD-M4-10-M6		4	55.1	32		25					10	2.0 ~ 5.2	
VPD-M4-15-M6			65.1	37	25	30					15	2.0 ~ 5.9	
VPD-M4-20-M6			81.1	44	34	37					20	1.1 ~ 4.8	
VPD-M6-6-M6 ^[7]	—	—	50.1	27	20	18.5	—	—	—	—	6	7.0 ~ 12.6	-M6
VPD-M6-10-M6			56.1	33		24.5					10	3.3 ~ 10.0	
VPD-M6-15-M6			66.1	38	25	29.5					15	3.3 ~ 10.4	
VPD-M6-20-M6			82.1	45	34	36.5					20	2.0 ~ 8.7	
VPD-M10-10-G1 ^[7]	—	—	—	—	—	—	—	—	—	—	—	10.1 ~ 15.8	-M10
VPD-M20-20-G2 ^[7]	—	—	—	—	—	—	—	—	—	—	—	14.0 ~ 25.5	-M20

※ [7]: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts). -S3 spec is available for model codes with [7] in the table above.

※ . Tightening torque of a pad holder fixing bulkhead nut is as below.

Connection config. code	-H3				-T8				-M4				-M6				-M10	-M20
Stroke (mm)	3	10	15	20	3	10	15	20	6	10	15	20	6	10	15	20	10	20
Tightening torque (N·m)	1.8~2.4	8~10			1.8~2.4	8~10			4.5~6								16~20	42~54

VPOD Spring type / Side port / Push-in fitting / No cover holder

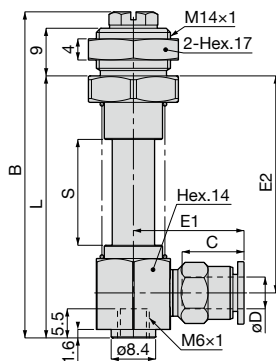

 RoHS Compliant  CAD (2D&3D)


Stroke (mm)
20,30,40,50

Unit : mm

Model code	Tube O.D. øD	B	L	E1	E2	Tube end C	Stroke S	Spring force (N)	Connection config. code			
VPOD-M6-20-3J	3	61.6	49.5	19.6	41	10.9	20	1.5~4.9	-M6			
VPOD-M6-20-4J	4											
VPOD-M6-20-6J	6			11.7								
VPOD-M6-30-3J	3	74.6	62.5	19.6	54	10.9	30	1.1~4.8		-M6		
VPOD-M6-30-4J	4											
VPOD-M6-30-6J	6			11.7								
VPOD-M6-40-3J	3	87.6	75.5	19.6	67	10.9	40	1.0~4.5			-M6	
VPOD-M6-40-4J	4											
VPOD-M6-40-6J	6			11.7								
VPOD-M6-50-3J	3	100.6	88.5	19.6	80	10.9	50	0.9~4.5				-M6
VPOD-M6-50-4J	4											
VPOD-M6-50-6J	6			11.7								

※ Tightening torque of a pad holder fixing bulkhead nut is 4.5~6N·m.

VPOD Spring type / Side port / Barb fitting / No cover holder

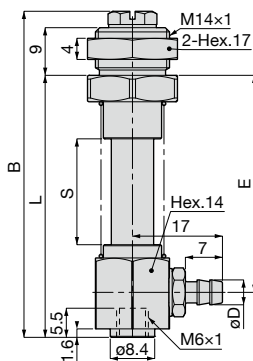

RoHS Compliant CAD (2D&3D)


Stroke (mm)
20,30,40,50

Unit : mm

Model code	Tube I.D. øD	B	L	E	Stroke S	Spring force (N)	Connection config. code
VPOD-M6-20-4B	2.5	61.6	49.5	41	20	1.5~4.9	-M6
VPOD-M6-20-6B	4						
VPOD-M6-30-4B	2.5	74.6	62.5	54	30	1.1~4.8	
VPOD-M6-30-6B	4						
VPOD-M6-40-4B	2.5	87.6	75.5	67	40	1.0~4.5	
VPOD-M6-40-6B	4						
VPOD-M6-50-4B	2.5	100.6	88.5	80	50	0.9~4.5	
VPOD-M6-50-6B	4						

※ .Tightening torque of a pad holder fixing bulkhead nut is 4.5~6N·m.

VPOD Spring type / Side port / Female thread / No cover holder

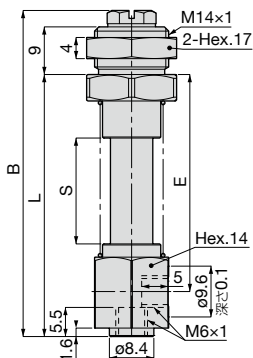

RoHS Compliant CAD (2D&3D)

Stroke (mm)
20,30,40,50

Unit : mm

Model code	B	L	E	Stroke S	Spring force (N)	Connection config. code
VPOD-M6-20-M6	61.6	49.5	41	20	1.5~4.9	-M6
VPOD-M6-30-M6	74.6	62.5	54	30	1.1~4.8	
VPOD-M6-40-M6	87.6	75.5	67	40	1.0~4.5	
VPOD-M6-50-M6	100.6	88.5	80	50	0.9~4.5	





※ .Tightening torque of a pad holder fixing bulkhead nut is 4.5~6N·m.



VPF Spring type / Direct mount / Standard holder

RoHS Compliant ~~Copper alloy~~ free available CAD (2D&3D)

Stroke (mm)
3.5.8

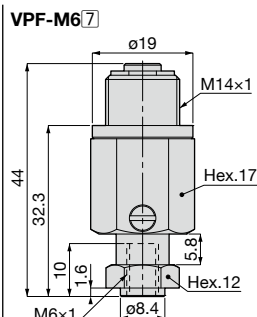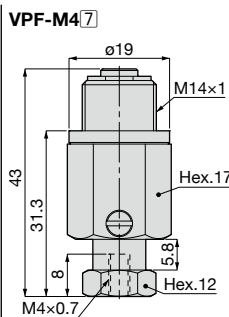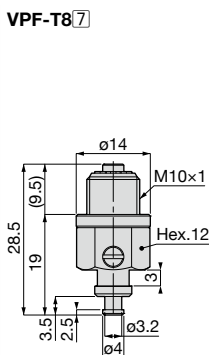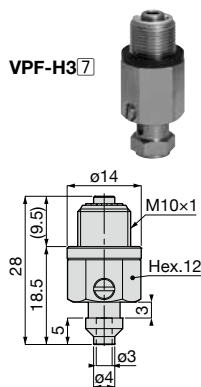

Unit : mm

Model code	Spring force (N)	Connection config. code
VPF-H3	2.3 ~ 3.9	-H3
VPF-T8	2.3 ~ 3.9	-T8
VPF-M4	7.9 ~ 15.0	-M4
VPF-M6	7.9 ~ 15.0	-M6



※ [7]: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts).

※. Tightening torque for fixing a pad holder is 4.5~6N·m.

1160

VPHE

☒ Copper alloy free available

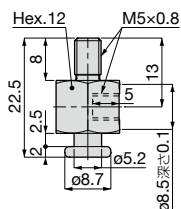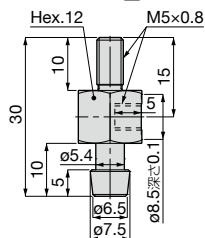 CAD (2D&3D)VPHE-T15-M5⁷VPHE-T40-M5⁷

Unit : mm

Model code	Connection config. code
VPHE-T15-M5	-T15
VPHE-T40-M5	-T40


※ [7]: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts).

VPHEW


 Copper alloy free available

 CAD (2D&3D)

VPHE-T1547

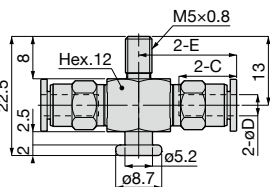

VPHE-T4047

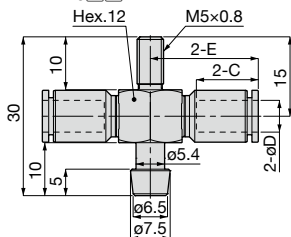

Unit : mm

Model code	Tube O.D. øD	E	Tube end C	Connection config. code
VPHEW-T15-180J	1.8	14.7	8.4	-T15
VPHEW-T15-2J	2			
VPHEW-T15-3J	3	18.5	10.9	
VPHEW-T15-4J ⁷	4			
VPHEW-T15-6J ⁷	6	20.4	11.7	
VPHEW-T40-180J	1.8	14.7	8.4	-T40
VPHEW-T40-2J	2			
VPHEW-T40-3J	3	18.5	10.9	
VPHEW-T40-4J ⁷	4			
VPHEW-T40-6J ⁷	6	20.4	11.7	

※ [7]: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts). -S3 spec. is available for model codes with [7] in the table above.




■ Dimensions of Spring type holder for Soft / Soft bellows series

VPHC Spring type / Top port / Push-in fitting / Holder for Soft · Soft bellows Series


RoHS Compliant Copper alloy free available CAD (2D&3D)



VPHC-T15-9-4-7

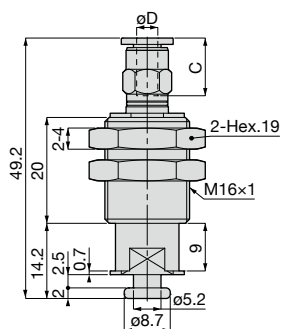

VPHC-T40-9-4-7

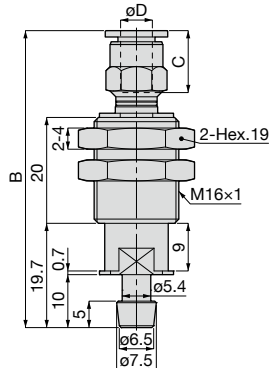

Stroke (mm)
9

Unit : mm


Model code	Tube O.D. øD	B	Tube end C	Spring force (N)	Connection config. code
VPHC-T15-9-180J	1.8	45.4	8.4	0.9 ~ 2.7	-T15
VPHC-T15-9-2J	2		10.9		
VPHC-T15-9-3J	3	49.2			
VPHC-T15-9-4J ^[7]	4		11.7		
VPHC-T15-9-6J ^[7]	6	50.6		11.7	
VPHC-T40-9-180J	1.8	50.9	8.4	0.9 ~ 2.7	-T40
VPHC-T40-9-2J	2		10.9		
VPHC-T40-9-3J	3	54.7			
VPHC-T40-9-4J ^[7]	4		11.7		
VPHC-T40-9-6J ^[7]	6	56.1		11.7	

※ ^[7]: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts). -S3 spec. is available for model codes with ^[7] in the table above.

※ Tightening torque for fixing a pad holder is 2~3N·m.

VPHD

☒ Copper alloy free available



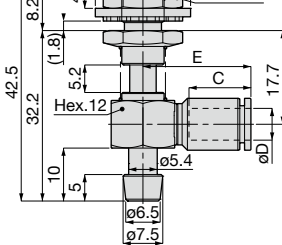
 CAD (2D&3D)

Unit : mm

Model code	Tube O.D. øD	E	Tube end C	Spring force (N)	Connection config. code
VPHD-T15-S-180J	1.8	14.7	8.4	1.6 ~ 2.9	-T15
VPHD-T15-S-2J	2				
VPHD-T15-S-3J	3				
VPHD-T15-S-4J ⁷⁾	4	18.5	10.9		
VPHD-T15-S-6J ⁷⁾	6				
VPHD-T40-S-180J	1.8	14.7	8.4	1.6 ~ 2.9	-T40
VPHD-T40-S-2J	2				
VPHD-T40-S-3J	3				
VPHD-T40-S-4J ⁷⁾	4	18.5	10.9		
VPHD-T40-S-6J ⁷⁾	6				

※ [7]: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts). -S3 spec. is available for model codes with [7] in the table above.

※ Tightening torque for fixing a pad holder is 1.8~2.4N·m.

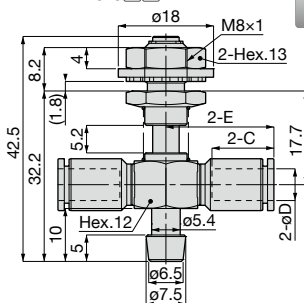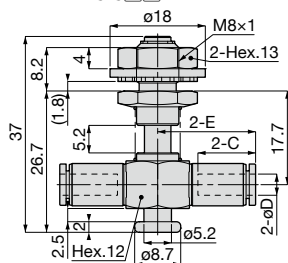

Stroke (mm)
5.2

Unit : mm

Model code	Tube O.D. øD	E	Tube end C	Spring force (N)	Connection config. code
VPHDW-T15-5-180J	1.8	14.7	8.4	1.6 ~ 2.9	-T15
VPHDW-T15-5-2J	2				
VPHDW-T15-5-3J	3	18.5	10.9		
VPHDW-T15-5-4J ⁷⁾	4				
VPHDW-T15-5-6J ⁷⁾	6	20.4	11.7		
VPHDW-T40-5-180J	1.8	14.7	8.4	1.6 ~ 2.9	-T40
VPHDW-T40-5-2J	2				
VPHDW-T40-5-3J	3	18.5	10.9		
VPHDW-T40-5-4J ⁷⁾	4				
VPHDW-T40-5-6J ⁷⁾	6	20.4	11.7		

※ [7]: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts). -S3 spec. is available for model codes with [7] in the table above.

※ Tightening torque for fixing a pad holder is 1.8~2.4N·m.




■ Dimensions of Fixed type holder for Vacuum pad for packaging bag serieies

VPA Fixed type / Top port / Push-in fitting / Holder for Vacuum pad for packaging bag Series

VPA-PB15^[4]

RoHS Compliant CAD (2D&3D)

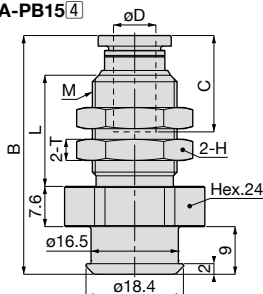

Unit : mm


Model code	Tube O.D. øD	Thread M	B	L	Tube end C	T	Hex. H	Connection config. code
VPA-PB15-6J	6	M14×1	43.6	20.5	17	4	17	-PB15
VPA-PB15-8J	8	M16×1	45.1	21	18.2		19	
VPA-PB15-10J	10	M20×1	48	22.5	20.7	5	24	
VPA-PB15-12J	12	M22×1	52.3	25.5	23.3	6	27	

※ Tightening torque for fixing a pad holder is as following. Tube O.D. : ø6, ø8mm ▶ 18~21N·m.
Tube O.D. : ø10, ø12mm ▶ 19~21N·m.

VPE Fixed type / Direct mount / Metric male thread / Holder for Vacuum pad for packaging bag Series

VPE-PB15-M5


VPE-PB15-M6

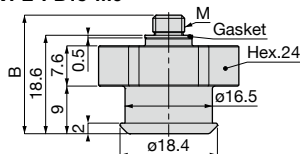

VPE-PB15-M8

VPE-PB15-M14

RoHS Compliant CAD (2D&3D)

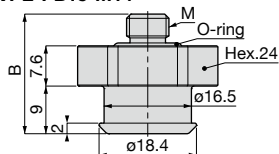


Unit : mm

Model code	M	B	Connection config. code
VPE-PB15-M5	M5×0.8	21.4	-PB15
VPE-PB15-M6	M6×1	22.4	
VPE-PB15-M8	M8×1	22.6	
VPE-PB15-M14	M14×1	24.6	

VPE Fixed type / Direct mount / Parallel pipe male thread / Holder for Vacuum pad for packaging bag Series

VPE-PB15^[4]

RoHS Compliant CAD (2D&3D)


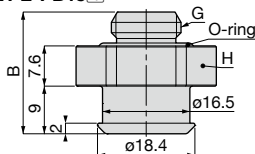


Unit : mm

Model code	G	B	Hex. H	Connection config. code
VPE-PB15-G1	G1/8A	21.9	24	-PB15
VPE-PB15-G2	G1/4A	23		
VPE-PB15-G3	G3/8A	24.5		
VPE-PB15-G4	G1/2A	25	27	

VPA Screwed type / Top port / Barb fitting / Holder for Oval Series

 RoHS Compliant  Copper alloy free available  CAD (2D&3D)

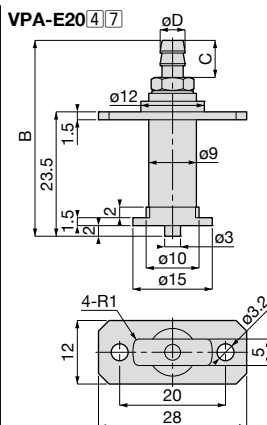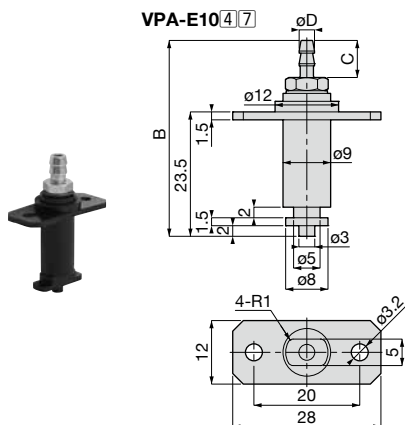



Unit : mm

Model code	Tube I.D. øD	B	C	Connection config. code
VPA-E10-3B	2	35.5	6	-E10
VPA-E10-4B	2.5	37	7	
VPA-E10-6B	4			
VPA-E20-3B	2	35.5	6	-E20
VPA-E20-4B	2.5	37	7	
VPA-E20-6B	4			

※ [7]: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts).

VPA Screwed type / Top port / Female thread / Holder for Oval Series

 RoHS Compliant  Copper alloy free available  CAD (2D&3D)

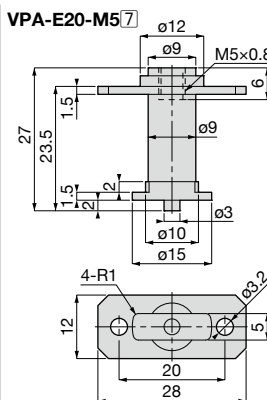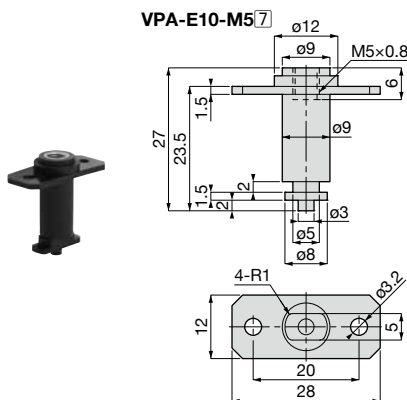


Unit : mm

Model code	Connection config. code
VPA-E10-M5	-E10
VPA-E20-M5	-E20

※ [7]: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts).

VPB Screwed type / Side port / Push-in fitting / Holder for Oval Series

RoHS Compliant  Copper alloy free available  CAD (2D&3D)

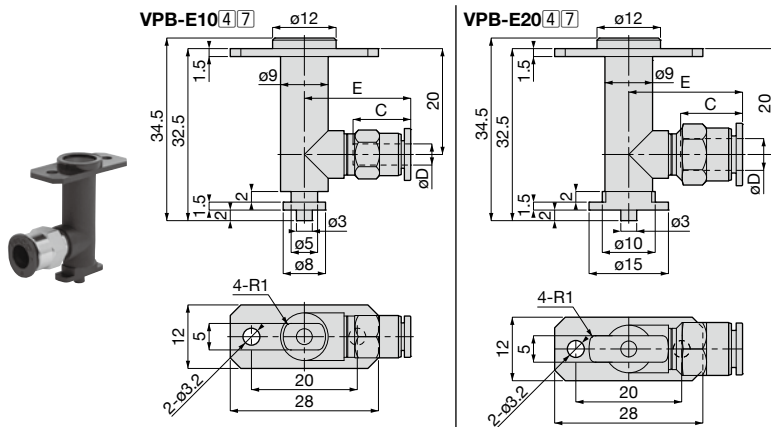

Unit : mm



Model code	Tube O.D. øD	E	Tube end C	Connection config. code
VPB-E10-180J	1.8	16.3	8.4	-E10
VPB-E10-2J	2			
VPB-E10-3J	3	20.1	10.9	
VPB-E10-4J ^[7]	4			
VPB-E10-6J ^[7]	6	21.5	11.7	
VPB-E20-180J	1.8	16.3	8.4	-E20
VPB-E20-2J	2			
VPB-E20-3J	3	20.1	10.9	
VPB-E20-4J ^[7]	4			
VPB-E20-6J ^[7]	6	21.5	11.7	

※ .^[7]: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts). -S3 spec. is available for model codes with ^[7] in the table above.



VPB Screwed type / Side port / Barb fitting / Holder for Oval Series

RoHS Compliant Copper alloy free available CAD (2D&3D)

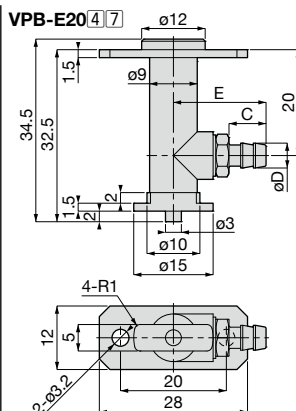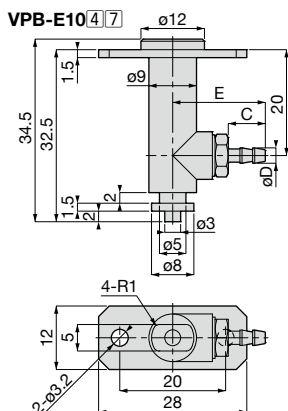



Unit : mm

Model code	Tube I.D. øD	E	C	Connection config. code
VPB-E10-3B7	2	17.5	6	-E10
VPB-E10-4B7	2.5		7	
VPB-E10-6B7	4		7	
VPB-E20-3B7	2	17.5	6	-E20
VPB-E20-4B7	2.5		7	
VPB-E20-6B7	4		7	

※ [7]: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts).

VPB Screwed type / Side port / Female thread / Holder for Oval Series

RoHS Compliant Copper alloy free available CAD (2D&3D)

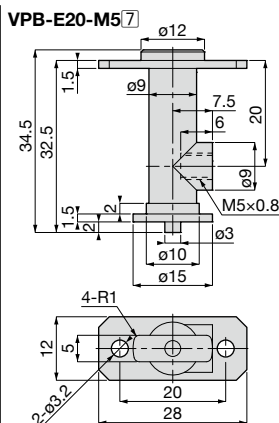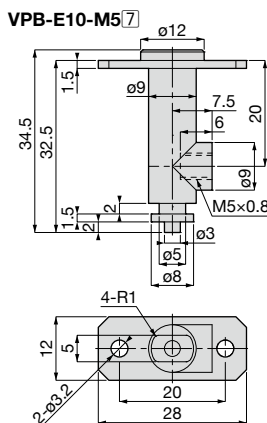

Unit : mm

Model code	Connection config. code
VPB-E10-M57	-E10
VPB-E20-M57	-E20

※ [7]: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts).



Common Safety Instructions for Vacuum Pads

Before selecting or using PISCO products, read the following instructions. Read the detailed instructions for individual series.

⚠ Warning

1. Take safety measures in advance where a dropping work-piece can cause danger.
2. Make sure to install a vacuum pad holder securely. Looseness may cause trouble.
3. Pay special attention to the work conveyance by screwed vacuum pads, accompanied by rotary movement. There is a possibility of troubles due to the looseness of screws from the rotary movement.
4. There is a possibility of troubles due to the leakage of vacuum system, clogging, vacuum pad abrasion, crack, deterioration, the galling of slider part in the holder and the looseness in joints. Carry out maintenance inspection periodically.
5. When a work-piece is conveyed by a vacuum pad, consider the acceleration, impacts and wind pressure. Otherwise, the work-piece may drop during conveyance.

⚠ Caution

1. Thoroughly read and understand the theoretical suction force in this catalog before selecting diameter, Qty and suction place of vacuum pads. Select vacuum pads with enough margin in suction force.
2. The product incorporating NBR as seal rubber material has a risk of malfunction caused by ozone crack. Ozone exists in high concentrations in static elimination air, clean-room, and near the high-voltage motors, etc. As a countermeasure, material change from NBR to HNBR or FKM is necessary. Consult with Pisco for more information.
3. Select the material of vacuum pad in accordance with use environment and ease of use, referring to "Selecting Method".
4. Select the suitable pad shape (type) in accordance with a work-piece and its shape, referring to "Characteristics of Pad Material".
5. Select spring-holder type when work-pieces have different heights or are weak against an external force. Select the suitable holder type, referring to spring force and spring length in the catalog.
6. Since spring-holder type has a sliding action, minimize the transverse load. Otherwise, the life time of the holder can be reduced or malfunction of the holder can occur.
7. In replacing vacuum pads, check the structure of holders and pads in the catalog and tighten the hexagonal-column of the holder with a proper tool, referring to the following tightening torque.

● Table. tightening torque

Vacuum pad holder	Standard	Mini
Pad screw size (mm)	Tightening torque (N·m)	
M4×0.7	0.5 ~ 1.0	0.9 ~ 1.1
M6×1	2 ~ 2.7	
M10×1.5	5 ~ 7	—
M20×2	9 ~ 10	—

8. In replacing the adapters of Soft / Soft Bellows Series, check the structure of holders, pad and adapters and tighten the hexagonal-column of the holder with a proper tool, referring to the following tightening torque.

● Table. tightening torque

Pad screw size (mm)	Tightening torque (N·m)
M4×0.7	0.7 ~ 0.8
M6×1	1.5 ~ 2.0

9. In installing vacuum pad holders of general and small type with bulkhead, check the structure and tighten the hexagonal-column of the holder with a proper tool, referring to the following tightening torque.

Vacuum pad holder	Standard			Mini		
Vacuum pad holder type	VPA	VPC, VPD, VPF, VPHC, VPHD, VPHDW	VPE	VPMA	VPMC, VPMD	VPME
Bulkhead nut size (mm)	Tightening torque (N·m)					
M3×0.5	—	—	0.7	—	—	0.7
M4×0.5	—	—	—	1 ~ 1.2	—	—
M4×0.7	1 ~ 1.2	—	—	—	—	—
M5×0.5	1.5 ~ 2	—	—	1.5 ~ 2	—	—
M5×0.8	—	—	1 ~ 1.5	—	—	1 ~ 1.5
M6×0.75	2 ~ 3	—	—	2 ~ 3		—
M8×0.75	2.5 ~ 3.5	1.8 ~ 2.4	—	2.5 ~ 3.5		—
M8×1	—	1.8 ~ 2.4	—	—	—	—
M10×1	5 ~ 7	4.5 ~ 6	—	5 ~ 7	4 ~ 6	—
M12×1	12 ~ 14	8 ~ 10	—	—	—	—
M14×1	18 ~ 21	4.5 ~ 6	—	—	—	—
M16×1	18 ~ 21 (※)	2 ~ 3	—	—	—	—
M20×1	19 ~ 21	—	—	—	—	—
M22×1	19 ~ 21 (※)	16 ~ 20	—	—	—	—
M24×2	40 ~ 50	—	—	—	—	—
M30×2	—	42 ~ 54	—	—	—	—


※Values for Vacuum pad holder for Packaging bag series.

10. In replacing vacuum pad rubbers of Standard Series ø80, ø100mm, ø150mm, ø200mm and Bellows Series ø80mm, ø100mm, check the structure of holders and pads and tighten the hexagonal-column of the holder with a proper tool, referring to the following tightening torque.

● Table. tightening torque

Pad screw size (mm)	Tightening torque (N·m)
M4×0.7	0.5 ~ 0.7
M5×0.8	

11. Check the structure of vacuum pad in the catalog before replacing a filter element.
 12. Refer to "Common Safety Instructions for Fittings" for handling fitting joint parts.
 13. In installing spring-holder type, do not hold the shaft (A) with a spanner.
 In replacing vacuum pad, hold the hexagonal-column of the shaft with a spanner. If the keyway (B) is deformed, there is a possibility of malfunction.
 14. Excessive tightening of a fixing nut may deform the bulkhead part and result in malfunction of the keyway.
 15. As the nature of rubber, powdery component like additives may come out on the surface of a vacuum pad as time elapses.

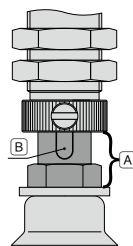



Vacuum Pad Selection Guide

Selection Guide 1 ▶ Select the diameter of vacuum pad from the formula ① and chart of the theoretical suction force ②

The theoretical suction force is determined from pad area and vacuum level. Calculated value is for reference only, so carry out the evaluation under an actual operating condition. The theoretical suction force is calculated under a static condition. Obtain an enough margin, considering the weight of a work-piece and acceleration of lifting, pause and rotary movement. Enough room is needed in deciding a number of pads and arrangement position.

① Calculation by formula

$$W = \frac{C \times P}{101} \times 10.13 \times f$$

W : Suction force(N)

C : Pad area(cm²)


P : Vacuum level -kPa

f : Safety factor Horizontal lifting (refer to the right fig.) ▶ 1/4
Vertical lifting (refer to the right fig.) ▶ 1/8

*1.Refer to the following chart for Sponge Series.(Internal diameter is used for calculation)




*2.Refer to the following chart for Flat Series.(Pad grooves are used for calculation)

*3.As for Bellows, Multi-Bellows, Soft, Soft Bellows and Ultrathin Series, their theoretical suction force may exceed the strength of pad itself, depending on the vacuum level. Carry out the evaluation under an actual operating condition.

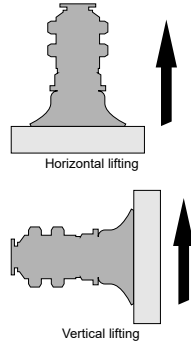

② Chart of the theoretical suction force <Add safety factor to values from the chart>

Standard / Bellows / Multi-bellows / Soft / Soft bellows / Skidproof / Ultrathin / Mark-free (*)

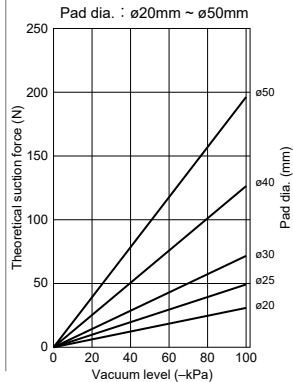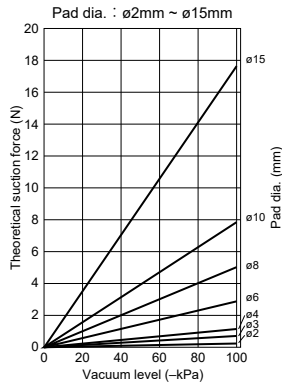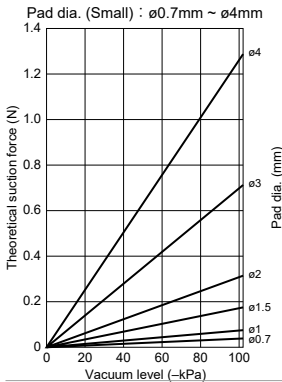


*Some sizes are not available for some pad series. Refer to the following size list.

● : indicates that pad size is available

Pad type	Standard	Bellows	Multi-bellows	Soft	Soft bellows	Skidproof	Ultra thin	Mark-free
ø0.7~ø3	●	—	—	—	—	—	—	—
ø4	●	—	—	●	—	—	—	—
ø6	●	●	—	●	●	—	—	—
ø8	●	●	—	●	●	—	●	—
ø10	●	●	●	●	●	●	●	●
ø15	●	●	—	●	●	—	●	—
ø20	●	●	●	●	●	●	●	●
ø25	●	●	—	—	—	—	—	—
ø30	●	●	●	●	—	●	—	●
ø40	●	●	●	—	—	●	—	—
ø50	●	●	●	—	—	●	—	—
ø60	●	●	—	—	—	—	—	—
ø80	●	●	—	—	—	—	—	—
ø100	●	●	—	—	—	—	—	—
ø150	●	—	—	—	—	—	—	—
ø200	●	—	—	—	—	—	—	—


Sponge pad

Pad dia. : $\phi 10\text{mm} \sim \phi 100\text{mm}$

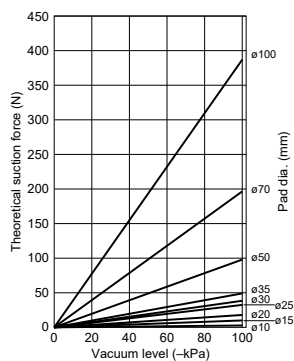


Flat pad

Pad dia. : $\phi 10\text{mm} \sim \phi 30\text{mm}$

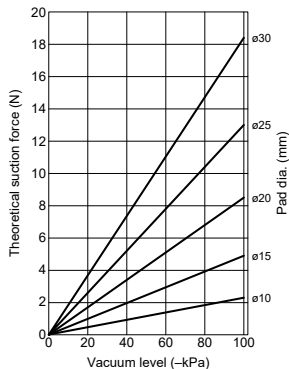

Oval pad












Pad size : $2 \times 4\text{mm} \sim 8 \times 30\text{mm}$

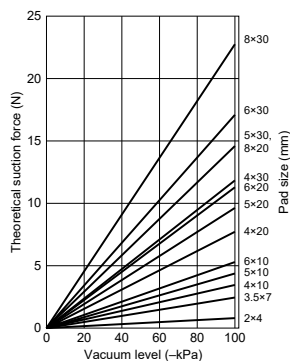



Selection Guide 2 ▶ Select a vacuum pad type according to a work-piece.


Please select suitable pads for your application from the following.

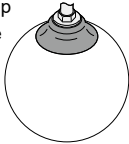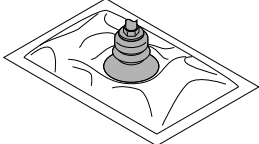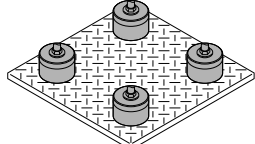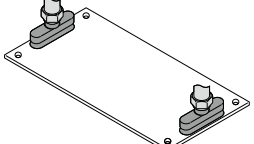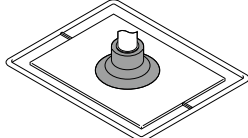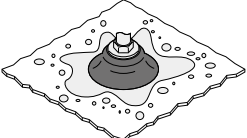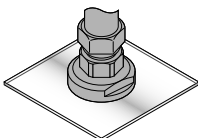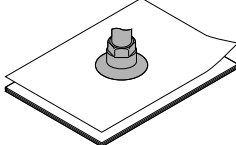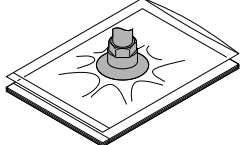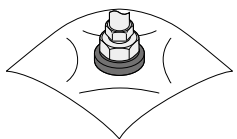Standard Series			Bellows / Multi-bellows Series
General type 	Deep type 	Small type 	
Thick & flat work-piece	Round fruit or ball (*1)	Small work-piece or semiconductor manufacturing device	Food package
Sponge Series			Oval Series
			
Exterior wall panel, pebble, seashell			Long work-piece (e.g. circuit board and semiconductor product)
Soft / Soft bellows Series	Skidproof Series		Mark-free Series
			
Taking out molded parts / Fragile work-piece	Greasy work-piece such as pressed parts		LCD glass / in Painting process / semiconductor manufacturing device
Ultrathin Series			Flat Series
			
Thin work-piece such as paper or plastic bag			Thin work-piece such as sheet or plastic bag

*1.The table below is a reference for the vacuum pad deep type and the size of round work-piece.

Spherical dia. : ϕ (mm)	$\phi 20$	$\phi 30$	$\phi 40$	$\phi 50$	$\phi 80$	$\phi 100$	$\phi 120$	$\phi 160$	$\phi 200$
Pad size : ϕ (mm)	$\phi 15$	$\phi 20$	$\phi 25$	$\phi 30$	$\phi 40$	$\phi 50$	$\phi 60$	$\phi 80$	$\phi 100$

*2.Refer to the previous page for pad dia. selection except deep type. Refer to the next page for the characteristics of pad materials.

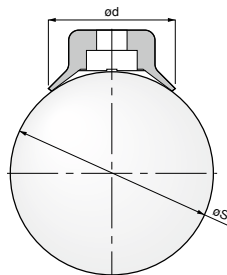

Selection Guide 2 ▶ Select a vacuum pad material from an application..

Please select the suitable material from the table.

Item	Pad material	Nitrile rubber	NBR Suited for the food sanitation act. (Japan)	HNBR	Silicone rubber	Conductive Silicone rubber	Urethane rubber	Fluoro rubber	Fluorosilicone rubber	EPDM	Conductive Butadiene rubber (Low resistance type)	Conductive NBR (low resistance)	Chloroprene rubber (For Sponge type)	Silicone rubber (For Sponge Type)										
	Material code	N, NH (*1)	G	HN	S	SE	U	F	FS	EP	E	NE	—	S										
Application		Cardboard Plywood Metal plate Food-related Other general work		Cardboard Plywood Metal plate Food-related Other general work In use under a low ozone concentration environment	Semiconductors Taking out molded parts Thin work-piece Food-related		Cardboard Plywood Metal plate	Chemical environment High temp. work-pieces	Taking out molded parts	Application that requires light-resistant or ozoneproof In use under the moisture containing atmosphere	General pars of semiconductors	Semi-conductors	Uneven work-piece	Uneven work-piece Food-related										
Pad color		Black	Gray	Black	Translucent	Black	Blue	Gray	Salmon	Black	Black	Black	Black	Salmon										
Physical Properties (Shore A)	Surface hardness	Standard	50°~80°	60°~70°	50°~70°	50°	60°	55°~70°	60°~70°	—	50°~70°	70°	60°~70°	—	—									
		Bellows	50°	—	50°	50°	60°	55°	60°	—	50°	—	60°	—	—									
		Multi-bellows	50°	50°	50°	50°	—	55°	50°	—	50°	—	60°	—	—									
		Oval	40°~50°	—	50°	40°~50°	50°~60°	55° (*2)	50° (*2)	—	50°	70°	70°	—	—									
		Soft	40°	—	—	40°	60°	—	—	40°	—	—	50°	—	—									
		Soft bellows	40°	—	50°	40°	—	55°	—	—	50°	—	60°	—	—									
		Skidproof	50°	—	—	50°	—	55°	60°	—	—	—	60°	—	—									
		Ultrathin	40°	—	—	40°	—	55°	50°	40°	—	—	60°	—	—									
	Flat	60°	—	—	40°	40°	50°	50°	—	—	—	60°	—	—										
	Highest operating temp.		110℃		140℃		180℃		60℃		230℃		180℃		150℃		100℃		110℃		80℃		180℃	
	Lowest operating temp.		-30℃		-30℃		-40℃		-20℃		-10℃		-50℃		-40℃		-50℃		-30℃		-45℃		-40℃	
Weatherability		△		○		◎		○		○		◎		○		△		○		◎		◎		
Ozone-proof		×		○		◎		◎		◎		◎		×		×		○		◎		◎		
Acid-resistance		△		△		○		×		◎		◎		△		△		○		◎		◎		
Alkaline-resistance		○		○		◎		×		×		◎		◎		○		◎		◎		◎		
Oil resistance	(Gasoline oil)	◎		◎		△		◎		◎		△		×		×		◎		×		△		
	(Benzene/toluene)	△		×		△		◎		◎		△		×		×		△		△		△		
Volume resistance		—		—		—		Max. 10 ¹² cm		—		—		—		Max. 2000 cm		Max. 2000 cm		—		—		

Legend ◎ : Best
○ : Suitable
△ : Good
× : NG

*1. Material code "NH" is only available for Skidproof Series.

*2. It does not apply to pad size: 4×30mm.

Note 1). The above "Physical Properties" shows the data of general synthetic rubbers.

Note 2). The highest / lowest operating temp. is for momentary usage. Carry out durability evaluation in case of continuous usage under the highest / lowest operating temp.



Please select the suitable vacuum pad resin material from the table.

Item	Pad material		PEEK	POM	Conductive PEEK
	Material code	Mark free series	K	M	KE
		Resin attachment for Bellows series	-QK	-QM	-QKE
Application			Manufacturing machine for liquid crystal / semiconductor	General production line Food-related machine Packaging machine	Manufacturing machine for liquid crystal / semiconductor Electronic components
Pad color			Natural (ivory)	White	Black
Physical Properties	Highest operating temp.		250℃	95℃	250℃
	Lowest operating temp.		-50℃	-60℃	-50℃
	Weatherability		◎	×	◎
	Acid-resistance		◎	×	◎
	Alkaline-resistance		◎	△	◎
	Self-lubricity		○	◎	○
	Abrasion-resistance		◎	◎	◎
	Volume resistance		-	-	10 ⁸ ~10 ⁹ Ω·cm

Legend ◎ : Best
○ : Suitable
△ : Good
× : NG

Note 1). The above "Physical Properties" shows the data of pad resin material only. The holder of Mark-free Series is not included.

Note 2). The above "Physical Properties" shows the data of resin attachment only. The pad rubber is not included.


Note 3). The above "Physical Properties" shows a general properties of resin materials and not a guaranteed value. Carry out the necessary evaluation under an actual operating condition.

Note 4). The highest / lowest operating temp. is for momentary usage. Carry out durability evaluation in case of continuous usage under the highest / lowest operating temp.

Note 5). Volume resistance is a representative value from the material manufacture, and not a guaranteed value.


To prevent dust from getting into the pad holder.

Install a vacuum filter pad direct mounting type between a vacuum pad and a holder.

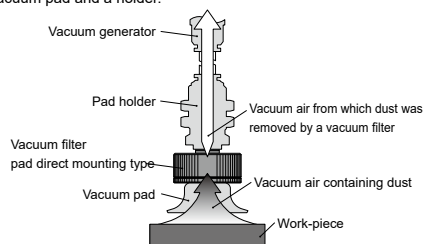

To prevent dust from getting into the pad holder.


Installing a fall prevention valve between a vacuum pad and a holder prevents the troubles like system break down, minimizing the vacuum drop of the whole system automatically by reducing suction flow of the part where the work-piece falls from the vacuum pad (within the range not causing any problem), or no work-piece is to be sucked.

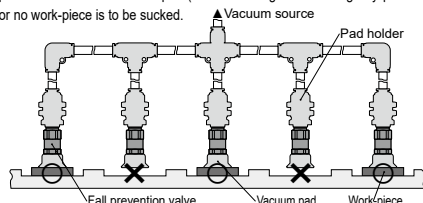

Reference Guide for Vacuum Pad


Impact on pad

Avoid an impact or a large force on a vacuum pad, when it is pressed against a work-piece. It may cause deformation, crack or abrasion at an early stage of use. Adjust the pad position so that the lip of pad touches lightly on a work-piece. Especially a small type of vacuum pad should be positioned precisely.

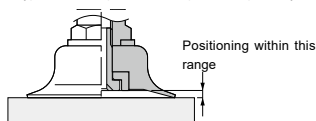


Porous or perforated work-piece

Since the suction of a porous work-piece causes a drop of suction force, select the proper specifications of vacuum system and secure a larger effective crosssection area of the piping. Selecting a small type of vacuum pad is one of solutions to reduce the air leakage.

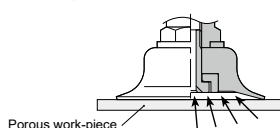


Large and wide flat plate work-piece

When lifting large size of glass board or circuit board, work-piece may bend by the lifting acceleration or the self-weight. Select a proper size of pad and positioning, considering an enough margin of suction force.



Lifting work-piece, sucking the both side of it


Since all vacuum pad holders are designed for horizontal lifting, consider the strength of holders and pads.

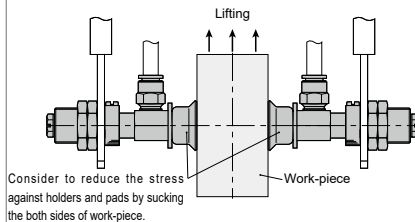


Soft work-piece

When soft work-pieces such as plastic bags, papers or thin boards are sucked, work-pieces can be deformed or shrunk by vacuum suction (Figure-1). Select smaller vacuum pads and reduce the vacuum pressure. Smaller vacuum pads are suitable for plastic bags and papers. When plastic / paper bags are opened by using vacuum pads, shift the center of two vacuum pads slightly in order to open them easily as Figure-2 shows.

•Figure-1

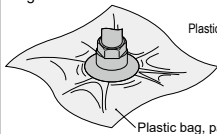


•Figure-2

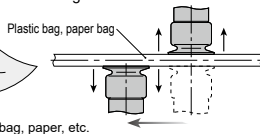


Work-piece with different heights

Select Long Stroke holders for work-pieces having different heights, or piled-up work-pieces. Its stroke can absorb the difference in height.

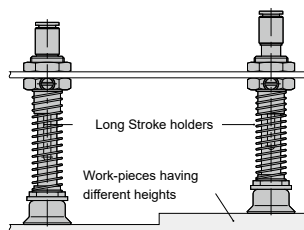


Inclined work-piece

Select Free Holder for an inclined work-piece.

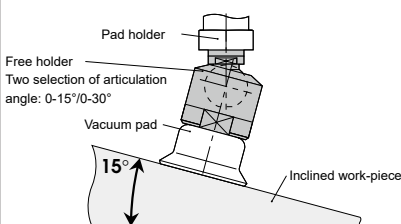

Conveyance with rotary movement

When vacuum pad is fixed with a screw and has a rotary movement, the pad may drop due to the loosened screw. Pay special attention when the vacuum location of work-piece is off the center of work-piece gravity.

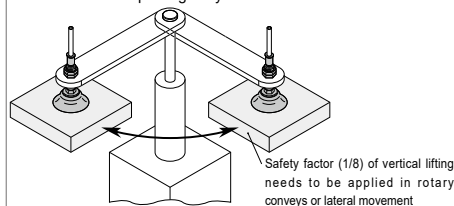



Vacuum Pad

■ Pad dia. list by pad type and material

Pad material		N : Nitrile rubber							
Pad type	Standard			Bellows	Multi-Bellows	Soft	Soft bellows	Ultrathin	Flat
	General type	Deep type	Small type						
Pad dia. (mm)	ø0.7			●					
	ø1	●		●					
	ø1.5			●					
	ø2	●		●					
	ø3	●		●					
	ø4	●		●		●			
	ø6	●			●	●	●		
	ø8	●			●		●	●	
	ø10	●			●	●	●	●	●
	ø15	●	●		●	●	●	●	●
	ø20	●	●		●	●	●	●	●
	ø25	●	●		●				●
	ø30	●	●		●	●			●
	ø40	●	●		●	●			
	ø50	●	●		●				
	ø60	●	●		●				
	ø80	●	●		●				
	ø100	●	●		●				
	ø150	●							
	ø200	●							

● : Available

Pad material		S : Silicone rubber									
Pad type	Standard			Bellows	Multi-Bellows	Soft	Soft bellows	Flat	Skidproof	Ultrathin	Sponge
	General type	Deep type	Small type								
Pad dia. (mm)	ø0.7			●							
	ø1	●		●							
	ø1.5			●							
	ø2	●		●							
	ø3	●		●							
	ø4	●		●			●				
	ø6	●			●		●				
	ø8	●			●		●			●	
	ø10	●			●	●	●	●	●	●	●
	ø15	●	●		●	●	●	●		●	●
	ø20	●	●		●	●	●	●	●	●	●
	ø25	●	●		●			●			●
	ø30	●	●		●	●		●	●		●
	ø35										●
	ø40	●	●		●	●			●		
	ø50	●	●		●				●		●
	ø60	●	●		●						
	ø70										●
	ø80	●	●		●						
	ø100	●	●		●						●
	ø150	●									
	ø200	●									

● : Available

Pad material		U : Urethane rubber								
Pad type		Standard			Bellows	Multi-Bellows	Soft bellows	Skidproof	Ultrathin	Flat
		General type	Deep type	Small type						
Pad dia. (mm)	ø0.7			●						
	ø1	●		●						
	ø1.5			●						
	ø2	●		●						
	ø3	●		●						
	ø4	●		●						
	ø6	●			●		●			
	ø8	●			●		●		●	
	ø10	●			●	●	●	●	●	●
	ø15	●	●		●		●		●	●
	ø20	●	●		●	●	●	●	●	●
	ø25	●	●		●					●
	ø30	●	●		●	●				●
	ø40	●	●		●	●		●		
	ø50	●	●		●	●		●		
	ø60	●	●		●					
	ø80	●	●		●					
	ø100	●	●		●					
	ø150	●								
	ø200	●								

● : Available

Pad material		F : Fluoro rubber							G : NBR Suited for the food sanitation act. (Japan)				
Pad type		Standard			Bellows	Multi-Bellows	Skidproof	Ultrathin	Flat	Standard			Multi-Bellows
		General type	Deep type	Small type						General type	Deep type	Small type	
Pad dia. (mm)	ø0.7			●								●	
	ø1	●		●						●		●	
	ø1.5			●								●	
	ø2	●		●						●		●	
	ø3	●		●						●		●	
	ø4	●		●						●		●	
	ø6	●			●					●			
	ø8	●			●			●		●			
	ø10	●			●	●	●	●	●	●			●
	ø15	●	●		●			●	●	●	●		
	ø20	●	●		●	●	●	●	●	●	●		●
	ø25	●	●		●				●	●	●		
	ø30	●	●		●	●	●		●	●	●		●
	ø40	●	●		●	●	●			●	●		●
	ø50	●	●		●	●	●			●	●		●
	ø60	●	●		●								
	ø80	●	●		●								
	ø100	●	●		●								
	ø150	●											
	ø200	●											

● : Available



Vacuum Pad Series

Vacuum Pad

Vacuum Pad

Pad material		SE : Conductive Silicone rubber					E : Conductive Butadiene rubber (Low resistance type)		S : Chloroprene rubber	NH : Oilproof NBR
Pad type		Standard		Bellows	Soft	Flat	Standard		Sponge	Skidproof
		General type	Small type				General type	Small type		
Pad dia. (mm)	ø0.7		●					●		
	ø1	●	●				●	●		
	ø1.5		●					●		
	ø2	●	●				●	●		
	ø3	●	●				●	●		
	ø4	●	●		●		●	●		
	ø6	●		●	●		●			
	ø8	●		●	●		●			
	ø10	●		●	●	●	●		●	●
	ø15	●		●	●	●	●		●	
	ø20	●		●	●	●	●		●	●
	ø25	●		●		●	●			
	ø30	●		●	●	●	●		●	●
	ø35								●	
	ø40	●		●	●		●			●
	ø50	●		●			●		●	●
	ø60	●		●						
	ø70								●	
	ø80	●		●						
	ø100	●		●					●	
	ø150	●								
	ø200	●								

● : Available

487

Pad material		NE : Conductive NBR (low resistance)								
Pad type	Standard			Bellows type	Multi-Bellows	Soft	Soft bellows	Skidproof	Ultrathin	Flat
	General type	Deep type	Small type							
Pad dia. (mm)	ø0.7			●						
	ø1	●		●						
	ø1.5			●						
	ø2	●		●						
	ø3	●		●						
	ø4	●		●		●				
	ø6	●			●	●	●			
	ø8	●			●		●		●	
	ø10	●			●	●	●	●	●	●
	ø15	●	●		●		●	●	●	●
	ø20	●	●		●	●	●	●	●	●
	ø25	●	●		●					●
	ø30	●	●		●	●		●		●
	ø40	●	●		●	●	●	●		
	ø50	●	●		●	●		●		
	ø60	●	●		●					
	ø80	●			●					
	ø100	●	●		●					
	ø150	●								
	ø200	●								

● : Available

Pad material		HN : HNBR						EP : EPDM						FS : Fluorosilicone rubber	
Pad type	Standard			Bellows	Multi-Bellows	Soft bellows	Standard			Bellows type	Multi-Bellows	Soft bellows	Soft	Ultrathin	
	General type	Deep type	Small type				General type	Deep type	Small type						
Pad dia. (mm)	ø0.7			●						●					
	ø1	●		●				●		●					
	ø1.5			●						●					
	ø2	●		●				●		●					
	ø3	●		●				●		●					
	ø4	●		●				●		●			●		
	ø6	●			●		●			●		●	●		
	ø8	●			●		●			●		●	●	●	
	ø10	●			●	●	●			●	●	●	●	●	
	ø15	●	●		●		●	●		●		●	●	●	
	ø20	●	●		●	●	●	●		●	●	●	●	●	
	ø25	●	●		●			●	●		●				
	ø30	●	●		●	●		●	●		●		●		
	ø40	●	●		●	●		●	●		●		●		
	ø50	●	●		●	●		●	●		●	●			
	ø60	●	●		●			●	●		●				
	ø80	●	●		●			●	●		●				
	ø100	●	●		●			●	●		●				
	ø150	●						●							
	ø200	●						●							

● : Available

Pad material	N Nitrile rubber	S Silicone rubber	U Urethane rubber	F Fluoro rubber	SE Conductive Silicone rubber	E Conductive Butadiene rubber (Low resistance type)	NE Conductive NBR (Low resistance type)	HN HNBR	EP EPDM
Pad type	Oval								
Pad dia. (mm)	2×4	●	●	●	●	●		●	●
	3.5×7	●	●	●	●	●		●	●
	4×10	●	●	●	●	●	●	●	●
	4×20	●	●	●	●	●	●	●	●
	4×30	●	●			●	●	●	●
	5×10	●	●	●	●	●	●	●	●
	5×20	●	●	●	●	●	●	●	●
	5×30	●	●	●	●	●	●	●	●
	6×10	●	●	●	●	●	●	●	●
	6×20	●	●	●	●	●	●	●	●
	6×30	●	●	●	●	●	●	●	●
	8×20	●	●	●	●	●	●	●	●
	8×30	●	●	●	●	●	●	●	●

● : Available


Pad material	K : PEEK	M : POM	KE : Conductive PEEK	Q2K : PEEK	Q2M : POM	Q2KE : Conductive PEEK
Pad type	Mark free			Resin attachment for Bellows series		
Pad dia. (mm)	ø10	●	●	●	●	●
	ø15			●	●	●
	ø20	●	●	●	●	●
	ø25			●	●	●
	ø30	●	●	●	●	●

● : Available




Vacuum Pad

■ Construction (VPA holder : Fixed type / Top port)

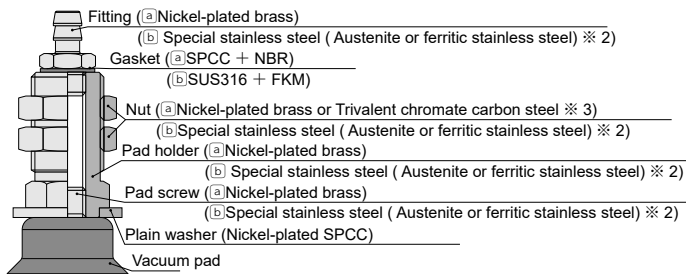

■ Construction (VPC holder : Spring type / Top port)

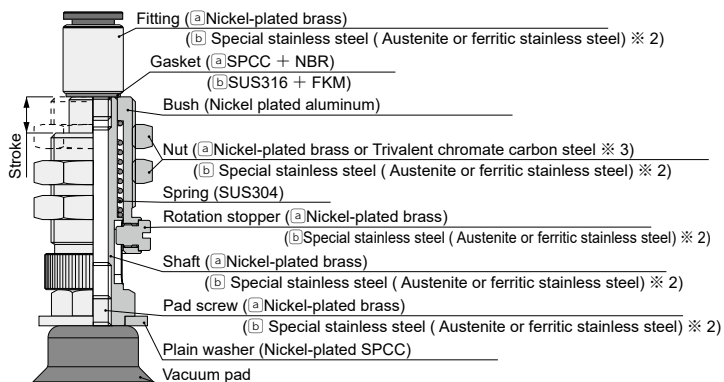

※ 1. (a) : Standard spec. (b) : "-S3" spec.

※ 2. SUS303 equivalent corrosivity

※ 3. Nut material differs depending on the bulkhead thread size. See below table for details.

Bulkhead thread size (mm)	Nut material	
	Nickel-plated brass	Trivalent chromate carbon steel
M5×0.5	○	—
M6×0.75	○	—
M8×0.75	○	—
M10×1	○	—
M12×1	—	○
M14×1	—	○
M16×1	—	○
M20×1	—	○
M22×1	—	○
M24×2	○	—
M30×2	○	—



Safety Instructions

This safety instructions aims to prevent personal injury and damage to properties by requiring proper use of PISCO products.

Be certain to follow ISO 4414 and JIS B 8370.

ISO 4414 : Pneumatic fluid power...General rules and safety requirements for system and their components.

JIS B 8370 : General rules and safety requirements for systems and their components.

This safety instructions is classified into "Danger", "Warning" and "Caution" depending on the degree of danger or damages caused by improper use of PISCO products.



Danger

Hazardous conditions. It can cause death or serious personal injury.



Warning

Hazardous conditions depending on usages. Improper use of PISCO products can cause death or serious personal injury.



Caution

Hazardous conditions depending on usages. Improper use of PISCO products can cause personal injury or damages to properties.



Danger

1. Do not use PISCO products for the following applications.

- ①. Equipment used for maintaining / handling human life and body.
- ②. Equipment used for moving / transporting human.
- ③. Equipment specifically used for safety purposes.



Warning

1. Selection of pneumatic products

- ①. A user who is a pneumatic system designer or has sufficient experience and technical expertise should select pneumatic equipments.
- ②. Due to wide variety of operating conditions and applications for PISCO products, carry out the analysis and evaluation on PISCO products. The pneumatic system designer is solely responsible for assuring that the user's requirements are met and that the application presents no health or safety hazards. All designers are required to fully understand the specifications of PISCO products and constitute all systems based on the latest catalog or information, considering any malfunctions.

2. Usage environment

Do not use PISCO products under the following conditions.

- ①. Beyond the specifications or conditions stated in the catalog, or the instructions.
- ②. Use at outdoors
- ③. Excessive vibrations and impacts.
- ④. Exposure / adhere to corrosive gas, flammable gas, chemicals, seawater, water and vapor.

3. Handling of product

- ①. Handle the pneumatic equipment with enough knowledge and experience.
 Mishandling of compressed air is dangerous. A person having enough knowledge and experiences should carry out assembly, operation, and maintenance of devices equipped with pneumatic equipments.
- ②. Do not operate machine / equipment or remove pneumatic equipment until safety is confirmed.
 - (1). Make sure that preventive measures against falling work-pieces or sudden movements of machine are completed before inspection or maintenance of these machine.
 - (2). Make sure the above preventive measures are completed. A compressed air supply and the power supply to the machine must be off, and also the compressed air in the systems must be exhausted.
 - (3). Restart the machines with care after ensuring to take all preventive measures against sudden movements.
- ③. Do not disassemble or modify PISCO products, which affect the performance, function, and basic structure of the product.
- ④. Take safety measures such as providing a protection cover if there is a risk of causing damages or fire on machine / facilities by a fluid leakage.
- ⑤. Do not touch the release-ring of a push-in fitting when there is a working pressure. The lock may be released by the physical contact, and tube may fly out or slip out.
- ⑥. Frequent switchover of compressed air may generate heat, and there is a risk of causing burn injury.
- ⑦. Avoid any load on PISCO products, such as, a tensile strength, twisting and bending. Otherwise, there is a risk of causing damage to the products.
- ⑧. Do not use PISCO products for applications where threads or tubes swing / rotate. The product can be damaged in these applications.
- ⑨. Do not swing or rotate resin body of the products by force. It may damage to the products and cause a fluid leakage.
- ⑩. Do not supply excessively dry air to products. It may cause malfunction due to a deterioration of rubber parts.
- ⑪. Do not wash or paint products with water or solvent. Solvent may damage a resin body, or painting may cause malfunction.
- ⑫. The product incorporating NBR as seal rubber or gasket material has a risk of malfunction caused by ozone crack. Ozone exists in high concentrations in static elimination air, clean-room, and near the high-voltage motors, etc. As a countermeasure, material change from NBR to HNBR or FKM is necessary. Consult with Pisco for more information.
- ⑬. Do not stand on a product, or put anything on it. It may cause falls, personal injury or damage to the product.

Warranty

When the product produces a trouble, which is caused by our responsibility, we will carry out either one of the following measures immediately.

- ① .Free-of-charge replacement of same product
- ② .Free-of-charge repair of the product at our factory

Disclaimer

- 1.PISCO does not take any responsibility for any incidental or indirect loss, such as production line stop, interruption of business, loss of benefits, personal injury, etc., caused by any failure on use or application of PISCO products.
- 2.When a cause of the trouble/malfunction applies to any of the following items, it is excluded from the coverage of the above warranty.
 - ① .A case by a natural disaster, a fire except our responsibility, the act by the third person/party, the intention or fault of the customer.
 - ② .A case when a product is used out of the specific range or in a method listed in the product catalog or the instruction manual.
 - ③ .A case by the remodeling of the product or by a change of structure, performance, or specifications which PISCO does not involved in.
 - ④ .A case by the event that is unpredictable by the evaluations and the measures at the time on or before the initial delivery.
 - ⑤ .A case caused by the phenomenon that is able to be evaded if your machine or equipment has functions or structures that are comprised in a common sense when this product is incorporated in your machine or equipment.
- 3.The damages caused by the defect of Pisco products shall be covered but limited to the full amount of the PISCO products paid by the customer. Additionally, the above warranty is limited simply to the product itself. The damage induced by the trouble of the product will not be compensated.



Common Safety Instructions for Products in This catalog



Caution

1. An odd noise may be heard when supply pressures are immediately before the peak of vacuum levels. The sounding of this odd noise means the characteristics are unstable and the sound may become even noisier. This situation can also adversely affect the sensor, resulting in a malfunction or trouble. So reset the supply pressure.
※ Pressure range in which odd noise occurs is affected by atmospheric pressure.
2. Piping design and equipment selection should be made with an effective sectional area on supply pressure side of a vacuum generator being 3 times as large as the nozzle diameter as a standard. Insufficient air flow may impair the performance of the product.
3. Do not use a lubricator on products.
4. Clean or replace silencer element periodically. There is a possibility of dropping the performance or causing troubles by clogging on the element.
5. Keep products away from water, oil drops or dusts because they are neither drip-proof nor dust-proof. Otherwise there is a possibility of causing malfunction, damage to the products, or dropping the performance.
6. Piping
 - ①. Compressed air contains a volume of drain (water, oxidized oil, tar and foreign material, etc.) Because the drain reduce product performance remarkably, dehumidify air with an aftercooler and a dryer, and improve the air quality.
 - ②. Do not use a lubricator on products.
 - ③. Rust in pipe and inflow of foreign substances cause the trouble, malfunction, and degradation of the product. Please install a filter (5μm or better filtration) in the compressed air supply line right in front of the product. The flushing inside the pipe before use and in certain intervals is recommended.
 - ④. Remove dusts or drain before piping. They may get into the peripheral machine / facilities and cause malfunction.
 - ⑤. When inserting an ultra-soft tube into push-in fitting, make sure to place an Insert Ring into the tube edge. There is a risk of causing the escape of tube and a fluid leakage without using an Insert Ring.
 - ⑥. Arrange piping avoiding any load on fittings and tubes such as twist, tensile, moment load, shaking and physical impact. These may cause damages to fittings, tube deformations, bursting and the escape of tubes.
 - ⑦. Install protective cover when using at a place getting the direct sunlight.
 - ⑧. Be sure to confirm each port of a vacuum generator with its appearance drawing or the marking on it before piping. Incorrect piping has a risk of damaging the product.
 - ⑨. Plumb a pressure sensor and a vacuum generator with pressure sensor at the end of vacuum system as much as possible. A long distance between a pressure sensor and a vacuum system end may increase plumbing resistance which may lead to a high vacuum level at the sensor even when no suctioning and a malfunction of pressure sensor. Make sure to evaluate the products in an actual system.
 - ⑩. A Shorter distance of plumbing with a wider bore is preferable at vacuum system side. A long plumbing with a small bore may result in slow response time at the time of releasing work-piece as well as in failure to secure adequate suction flow rate.


- ⑪ .In case of using non-PISCO brand tubes, make sure the tolerance of the outer tube diameter is within the limits of Table 1.

●Table 1. Tube O.D. Tolerance

mm size	Nylon tube	Polyurethane tube	inch size	Nylon tube	Polyurethane tube
ø1.8mm	—	±0.05mm	ø1/8	±0.1mm	±0.15mm
ø2mm	—	±0.05mm	ø5/32	±0.1mm	±0.15mm
ø3mm	—	±0.15mm	ø3/16	±0.1mm	±0.15mm
ø4mm	±0.1mm	±0.15mm	ø1/4	±0.1mm	±0.15mm
ø6mm	±0.1mm	±0.15mm	ø5/16	±0.1mm	±0.15mm
ø8mm	±0.1mm	±0.15mm	ø3/8	±0.1mm	±0.15mm
ø10mm	±0.1mm	±0.15mm	ø1/2	±0.1mm	±0.15mm
ø12mm	±0.1mm	±0.15mm	ø5/8	±0.1mm	±0.15mm
ø16mm	±0.1mm	±0.15mm			

7-1. Tube insertion (Push-in fitting)

- ① .Make sure that the cut end surface of the tube is at a right angle without a scratch on the tube surface or deformations.
- ② .When inserting a tube, the tube needs to be inserted fully into the push-in fitting until the tubing edge touches the tube end of the fitting as shown in the figure below. Otherwise, there is a risk of leakage.

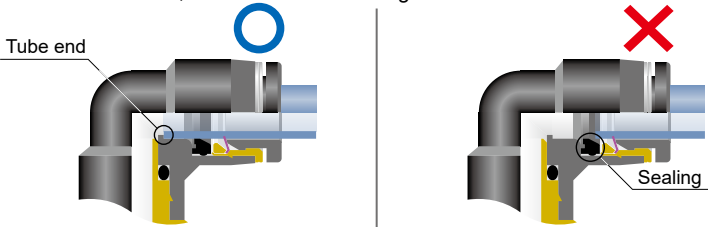

- ③ .After inserting the tube, make sure it is inserted properly and not to be disconnected by pulling it moderately.
- ※ When inserting tubes, Lock-claws may be hardly visible in the hole, observed from the front face of the release-ring. But it does not mean the tube will surely escape. Major causes of the tube escape are the followings; ① Shear drop of the lock-claws edge ② The problem of tube diameter (usually small)Therefore, follow the above instructions from ① to ③ , even lock-claws is hardly visible.

7-2. Tube insertion (Compression fitting)

- ① .Make sure that the cut end surface of the tube is at a right angle without deformations or a scratch on its inner and outer surface.
- ② .Pass the tube through the nut and insert the barb into the tube up to the barb end. Then tighten the hexagonal-column of the nut with a proper tool.
- ③ .Refer to Table 2 which shows the tightening torque.
- ※ Hold the tube when tightening the nut, since the tube may rotate along with the nut.

- ④. Make sure that the nut touches the metallic body. If not, loosen the nut, disconnect the tube and start over again from the process ①
- ⑤. Make sure that there is no leakage after tightening the nut.
- ⑥. After inserting the tube, make sure it is inserted properly and not to be disconnected by pulling it moderately.

● Table 2. Nut tightening torque

Tube O.D.	Tightening torque
ø10	Max. 4N·m
ø12	Max. 5N·m
ø16	Max. 14N·m

8-1. Tube disconnection (Push-in fitting)

- ①. Make sure there is no air pressure inside of the tube, before disconnecting it.
- ②. Push the release-ring of the push-in fitting evenly and deep enough to pull out the tube toward oneself. By insufficient pushing of the release-ring, the tube may not be pulled out or damaged by scratch, and tube shavings may remain inside of the fitting, which may cause the leakage later.

8-2. Tube disconnection (Compression fitting)

- ①. Make sure there is no air pressure inside of the tube, before disconnecting it.
- ②. Use a proper tool to loosen the nut. Then disconnect the tube.

9. Installation of a fitting

- ①. When installing a fitting, use proper tools to tighten a hexagonal-column or an inner hexagonal socket. When inserting a hex key into the inner hexagonal socket of the fitting, be careful so that the tool does not touch lock-claws. The deformation of lock-claws may result in a poor performance of systems or an escape of the tube.
- ②. Refer to Table 3 in the next page which shows the tightening torque, when tightening a thread. Do not exceed these limits to tighten a thread. Excessive tightening may break the thread part or deform the gasket to cause a fluid leakage. Tightening thread with tightening torque lower than these limits may cause a loosened thread or a fluid leakage. Since the sealability is affected by the processing condition of the installing part, adjust the tightening torque or correct the installing part, according to the condition.
- ③. Adjust the tube direction while tightening thread within these limits, since some PISCO products are not rotatable after the installation.

● Table 3. Tightening torque / Sealock color / Gasket materials

Thread type	Thread size	Tightening torque	Sealock color	Gasket material
Metric thread	M3×0.5	0.7N·m	n/a	SUS304+NBR SPCC+NBR
	M5×0.8	1 ~ 1.5N·m		
	M6×1	2 ~ 2.7N·m		
	M3×0.5	0.7N·m		POM
	M5×0.8	1 ~ 1.5N·m		
	M6×0.75	0.8 ~ 1N·m		
Taper pipe thread	M8×0.75	1 ~ 2N·m	White	—
	R1/8	4.5 ~ 6.5N·m		
	R1/4	7 ~ 9N·m		
	R3/8	12.5 ~ 14.5N·m		
Unified thread	R1/2	20 ~ 22N·m	n/a	SUS304+NBR, SPCC+NBR
	No. 10-32UNF	1 ~ 1.5N·m		
National Pipe Thread Taper (American standard)	1/16-27NPT	4.5 ~ 6.5N·m	White	—
	1/8-27NPT	4.5 ~ 6.5N·m		
	1/4-18NPT	7 ~ 9N·m		
	3/8-18NPT	12.5 ~ 14.5N·m		
	1/2-14NPT	20 ~ 22N·m		
G thread	G1/4	12 ~ 14N·m	n/a	Aluminum + PBT
	G3/8	22 ~ 24N·m		
	G1/2	28 ~ 30N·m		

※ These values may differ for some products. Refer to each specification as well.

- ④ .When removing a fitting, use proper tools to loosen a hexagonal-column. When inserting a hex key into the inner hexagonal socket of the fitting, be careful so that the tool does not touch lock-claws. The deformation of lock-claws may result in a poor performance of systems or an escape of the tube.
- ⑤ .Remove the sealant stuck on the mating equipment. The remained sealant may get into the peripheral equipment and cause malfunctions.

10.Handling of PISCO products

- ① .Impact caused by dropping or the like may lead to damage to the product and a fluid leakage.

11.PISCO products shall be used within the Operating temp. range, including the heat of the product itself generated by adiabatic compression.